## GbXML Results Exported From TRACE® 700

## • Room

- Space Loads These loads can be found in the space loads section of the Room Checksum Report.
  - Cooling Skylite Solar
  - Cooling Skylite Conduction
  - Cooling Roof Conduction
  - Cooling Glass Solar
  - Cooling Glass Conduction
  - Cooling Wall Conduction
  - Cooling Partition
  - Cooling Exposed Floor
  - Cooling Infiltration
  - Cooling Lights
  - Cooling People
  - Cooling Miscellaneous Equipment
  - Cooling Ceiling
  - Cooling Ventilation
  - Cooling Over-sizing
  - Total Cooling
  - Heating Skylite Solar
  - Heating Skylite Conduction
  - Heating Roof Conduction
  - Heating Glass Solar
  - Heating Glass Conduction
  - Heating Wall Conduction
  - Heating Partition
  - Heating Exposed Floor
  - Heating Infiltration
  - Heating Lights
  - Heating People
  - Heating Miscellaneous Equipment
  - Heating Ceiling
  - Heating Ventilation
  - Heating Over-sizing
  - Total Heating
- Coil Loads These values come from the System Component Selection Report.
  - Main Cooling Coil Tonnage (if coil is at the room level)
  - Auxiliary Cooling Coil Tonnage (if coil is present in system)
  - Main Heating Coil Mbh (if coil is at the room level)
  - Preheat Coil Mbh (if coil is at the room level)
  - Reheat Coil Mbh (if coil is at the room level)
  - Humidification Coil Mbh (if coil is present in system)
  - Auxiliary Heating Coil Mbh (if coil is present in system)
- Fan Airflow These values come from the System Component Selection Report
  - Primary Fan (if fan is at the room level)
  - Auxiliary Fan (if system required)
  - Room Exhaust Fan (user specified)
  - Diffuser