

High power Drive Operating Instructions

TR200



BAS-SVX21A-EN



Table of Contents

How to Read these Operating Instructions	5
Copyright, Limitation of Liability and Revision Rights	5
Safety	10
High Voltage Warning	
Safety Instructions	10
General Warning	10
Before Commencing Repair Work	11
Special Conditions	12
IT Mains	12
Mechanical Installation	14
How to Get Started	14
Pre-installation	15
Planning the Installation Site	15
Receiving the Frequency Converter	15
Transportation and Unpacking	15
Lifting	16
Mechanical Dimensions	18
Rated Power	25
Mechanical Installation	26
Terminal Locations - Frame size D.	28
Terminal Locations - Frame size E	30
Terminal Locations - Frame size F	34
Cooling and Airflow	37
Field Installation of Options	44
Installation of Duct Cooling Kit in Rittal Enclosures	44
Installation of Top-only Duct Cooling Kit	46
Installation of Top and Bottom Covers for Rittal Enclosures	46
Installation of Top and Bottom Covers	47



Outside Installation/ NEMA 3R Kit for Rittal Enclosures	48
Outside Installation /NEMA 3R Kit of Industrial Enclosures	49
Installation of IP00 to IP20 Kits	49
Installation of IP00s D3, D4, & E2 Cable Clamp Bracket	49
Installation on Pedestal	50
Installation of Mains Shield for Frequency Converters	50
F Frame USB Extension Kit	50
Installation of Input Plate Options	51
Installation of D or E Loadshare Option	51
Electrical Installation	52
Electrical Installation	
Power Connections	52
Mains Connection	68
Fuses	69
Control Cable Routing	75
Electrical Installation, Control Terminals	78
Connection Examples	79
Start/Stop	79
Pulse Start/Stop	79
Electrical Installation - additional	81
Electrical Installation, Control Cables	81
Switches S201, S202, and S801	83
Final Set-up and Test	84
Additional Connections	86
Mechanical Brake Control	86
Motor Thermal Protection	88
How to Operate the Frequency Converter	89
How to Operate Graphical keypad	89
Tips and Tricks	96



How to Programme	99
Quick Menu Mode	102
Function Setups	109
Parameter Lists TR200	141
Default Settings	141
0-** Operation and Display	142
1-** Load / Motor	144
2-** Brakes	145
3-** Reference / Ramps	146
4-** Limits / Warnings	147
5-** Digital In / Out	148
6-** Analog In / Out	150
8-** Communication and Options	152
11-** LonWorks	153
13-** Smart Logic Controller	154
14-** Special Functions	155
15-** FC Information	156
16-** Data Readouts	158
18-** Info & Readouts	160
20-** FC Closed Loop	161
21-** Ext. Closed Loop	162
22-** Application Functions	164
23-** Time Based Funtions	165
24-** Application Functions 2	166
General Specifications	167
Warnings and Alarms	180
Alarms and Warnings	180
Fault Messages	184



ndex192



How to Read these Operating Instructions

Copyright, Limitation of Liability and Revision Rights

This publication contains information proprietary to Trane. By accepting and using this manual the user agrees that the information contained herein will be used solely for operating equipment from Trane or equipment from other vendors provided that such equipment is intended for communication with Trane equipment over a serial communication link. This publication is protected under the Copyright laws of most countries.

Trane does not warrant that a software program produced according to the guidelines provided in this manual will function properly in every physical, hardware or software environment.

Although Trane has tested and reviewed the documentation within this manual, Trane makes no warranty or representation, neither expressed nor implied, with respect to this documentation, including its quality, performance, or fitness for a particular purpose.

In no event shall Trane be liable for direct, indirect, special, incidental, or consequential damages arising out of the use, or the inability to use information contained in this manual, even if advised of the possibility of such damages. In particular, Trane is not responsible for any costs, including but not limited to those incurred as a result of lost profits or revenue, loss or damage of equipment, loss of computer programs, loss of data, the costs to substitute these, or any claims by third parties.

Trane reserves the right to revise this publication at any time and to make changes to its contents without prior notice or any obligation to notify former or present users of such revisions or changes.

Warnings, Cautions and Notices

Note that warnings, cautions and notices appear at appropriate intervals throughout this manual. Warnings are provide to alert installing contractors to potential hazards that could result in personal injury or death. Cautions are designed to alert personnel to hazardous situations that could result in personal injury, while notices indicate a situation that could result in equipment or property-damage-only accidents.

Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

Warnings, Cautions and Notices appear at appropriate sections throughout this literature. Read these carefully.

∆WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

∆CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.

NOTICE

Indicates a situation that could result in equipment or property-damage only accidents.

Note

Indicates something important to be noted by the reader.

★ Indicates default setting



How to Read these Operating Instructions

MARNING

Hazardous Voltage!

Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. Failure to disconnect power before servicing could result in death or serious injury.



Available Literature for TR200

- Operating Instructions provide the necessary information for getting the drive up and running.
- Operating Instructions TR200 High Power
- Design Guide entails all technical information about the drive and customer design and applications.
- Programming Guide provides information on how to programme and includes complete parameter descriptions.

x = Revision number yy = Language code

Trane technical literature is available in print from your local Trane Sales Office or online at: www.trane.com/vfd

Abbreviations and Standards

Abbreviations:	Terms:	SI-units:	I-P units:
а	Acceleration	m/s ²	ft/s ²
AWG	American wire gauge		
Auto Tune	Automatic Motor Tuning		
°C	Celsius		
1	Current	Α	Amp
ILIM	Current limit		
Joule	Energy	J = N⋅m	ft-lb, Btu
°F	Fahrenheit		
f	Frequency	Hz	Hz
kHz	Kilohertz	kHz	kHz
keypad	Local Control Panel		
mA	Milliampere		
ms	Millisecond		
min	Minute		
	Control Tool		
M-TYPE	Motor Type Dependent		
Nm	Newton Metres		in-lbs
lM,N	Nominal motor current		
fM,N	Nominal motor frequency		
P _{M,N}	Nominal motor power		
U _{M,N}	Nominal motor voltage		
par.	Parameter		
PELV	Protective Extra Low Voltage		
Watt	Power	W	Btu/hr, hp
Pascal	Pressure	$Pa = N/m^2$	psi, psf, ft of water
INV	Rated Inverter Output Current		
RPM	Revolutions Per Minute		
SR	Size Related		
Т	Temperature	С	F
t	Time	S	s,hr
T _{LIM}	Torque limit		
U	Voltage	V	V

Table 1. 1: Abbreviation and standards table .



How to Read these Operating Instructions

Frequency Converter Identification

Below is an example of an identification label. This label is situated on the frequency converter and shows the type and options fitted to the unit. See below for details of how to read the Type code string (T/C).



Illustration 1. 1: This example shows an identification label.

NOTE: Please have T/C (type code) number and serial number ready before contacting Trane.



Type Code String Low and Medium Power

TR-200P T H XSXXXXA B C	
	D
13.	

Description	Pos	Possible choice
Product group & FC Series	1-6	TR-200
Power rating	8-10	1.1- 1200 kW (P1K1 - P1M2)
Number of phases	11	Three phases (T)
Mains voltage	11-12	T 2: 200-240 VAC
wans voitage	11-12	T 4: 380-480 VAC
Enclosure	13-15	E20: IP20 E21: IP 21/NEMA Type 1 E55: IP 55/NEMA Type 12 E66: IP66 P21: IP21/NEMA Type 1 w/backplate P55: IP55/NEMA Type 12 w/backplate
RFI filter	16-17	H1: RFI filter class A1/B H2: RFI filter class A2 H3: RFI filter class A1/B (reduced cable length) Hx: No RFI filter
Brake	18	X: No brake chopper included B: Brake chopper included
Display	19	G: Graphical Local Control Panel (keypad) X: No Local Control Panel
Coating PCB	20	X. No coated PCB C: Coated PCB
Mains option	21	X: No Mains disconnect switch and Load Sharing 1: With Mains disconnect switch (IP55 only) 8: Mains disconnect and Load Sharing D: Load Sharing See Chapter 8 for max. cable sizes.
Adaptation	22	X: Standard 0: European metric thread in cable entries.
Adaptation	23	Reserved
Software release	24-27	Actual software
Software language	28	
A options	29-30	AX: No options A4: MCA 104 DeviceNet AF: MCA 115 LonWorks AE: MCA 116 BACnet gateway
B options	31-32	BX: No option BK: MCB 101 General purpose I/O option BP: MCB 105 Relay option
C0 options MCO	33-34	CX: No options
C1 options	35	X: No options
C option software	36-37	XX: Standard software
D options	38-39	DX: No option D0: DC back-up

Table 1. 2: Type code description.



Safety

High Voltage Warning

≜WARNING

The voltage of the frequency converter is dangerous whenever it is connected to mains. Incorrect installation of the motor or frequency converter could result in death, serious injury or damage to the equipment. Consequently, it is essential to comply with the instructions in this manual as well as local and national rules and safety regulations.

Safety Instructions

∆CAUTION

Prior to using functions directly or indirectly influencing personal safety (e.g. **Safe Stop**, **Fire Mode** or other functions either forcing the motor to stop or attempting to keep it functioning) a thorough **risk analysis** and **system test must** be carried through. The system tests **must** include testing failure modes regarding the control signalling (analog and digital signals and serial communication.

Failure to follow recommendations could result in death or serious injury.

NOTICE

Before using Fire Mode, contact Trane

- Make sure the frequency converter is properly connected to earth.
- Do not remove mains connections, motor connections or other power connections while the frequency converter is connected to power.
- · Protect users against supply voltage.
- Protect the motor against overloading according to national and local regulations.
- The earth leakage current exceeds 3.5 mA.
- The [OFF] key is not a safety switch. It does not disconnect the frequency converter from mains.

General Warning

≜WARNING

Warning:

Touching the electrical parts may be fatal - even after the equipment has been disconnected from mains.

Also make sure that other voltage inputs have been disconnected, (linkage of DC intermediate circuit), as well as the motor connection for kinetic back-up.

Before touching any potentially live parts of the frequency converter, wait at least as follows:

380 - 480 V, 110 - 250 kW, wait at least 20 minutes.

380 - 480 V, 315- 1200 kW, wait at least 40 minutes.

525 - 690 V, 45 - 400 kW, wait at least 20 minutes.

525 - 690 V, 450 - 1400 kW, wait at least 30 minutes.

Shorter time is allowed only if indicated on the nameplate for the specific unit. Be aware that there may be high voltage on the DC link even when the Control Card LEDs are turned off. A red LED is mounted on a circuit board inside the drive to indicate the DC bus voltage. The red LED will stay lit until the DC link is 50 Vdc or lower.



≜WARNING

Leakage Current

The earth leakage current from the frequency converter exceeds 3.5 mA. According to IEC 61800-5-1 a reinforced Protective Earth connection must be ensured by means of: a min. 10mm² Cu or 16mm² Al PE-wire or an additional PE wire - with the same cable cross section as the Mains wiring - must be terminated separately.

Failure to follow recommendations could result in death or serious injury.

Residual Current Device

This product can cause a D.C. current in the protective conductor. Where a residual current device (RCD) is used for extra protection, only an RCD of Type B (time delayed) shall be used on the supply side of this product. See also RCD Application Note MN.90.GX.02.

Protective earthing of the frequency converter and the use of RCD's must always follow national and local regulations.

Before Commencing Repair Work

∆WARNING

Hazardous Voltage!

- 1. Disconnect the frequency converter from mains
- 2. Disconnect DC bus terminals 88 and 89
- 3. Wait at least the time mentioned in section General Warning above
- 4. Remove motor cable

Failure to follow recommendations could result in death or serious injury.



Special Conditions

Electrical ratings:

The rating indicated on the nameplate of the frequency converter is based on a typical 3-phase mains power supply, within the specified voltage, current and temperature range, which is expected to be used in most applications.

The frequency converters also support other special applications, which affect the electrical ratings of the frequency converter.

Special conditions which affect the electrical ratings might be:

- Single phase applications
- High temperature applications which require de-rating of the electrical ratings
- Marine applications with more severe environmental conditions.

Other applications might also affect the electrical ratings.

Consult the relevant sections in this manual and in the for information about the electrical ratings.

Installation requirements:

The overall electrical safety of the frequency converter requires special installation considerations regarding:

- Fuses and circuit breakers for over-current and short-circuit protection
- Selection of power cables (mains, motor, brake, loadsharing and relay)
- Grid configuration (grounded delta transformer leg, IT,TN, etc.)
- Safety of low-voltage ports (PELV conditions).

Consult the relevant clauses in these instructions and in the for information about the installation requirements.

Installation at High Altitudes (PELV)

Installation at high altitude:

380 - 480 V: At altitudes above 3 km, please contact Trane regarding PELV.

525 - 690 V: At altitudes above 2 km, please contact Trane regarding PELV.

IT Mains




Do not connect frequency converters with RFI-filters to mains supplies with a voltage between phase and earth of more than 440 V for 400 V converters and 760 V for 690 V converters.

For 400 V IT mains and delta earth (grounded leg), mains voltage may exceed 440 V between phase and earth. For 690 V IT mains and delta earth (grounded leg), mains voltage may exceed 760 V between phase and earth. Failure to follow recommendations could result in death or serious injury.

Par.14-50 RFI Filter can be used to disconnect the internal RFI capacitors from the RFI filter to ground.



Software Version and Approvals: TR200

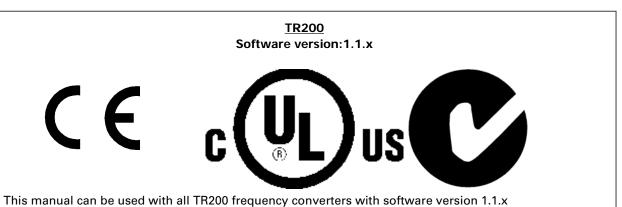

The software version number can be seen from par.15-43 Software Version.

Disposal Instruction



Equipment containing electrical components must not be disposed of together with domestic waste.

It must be separately collected with electrical and electronic waste according to local and currently valid legislation.



Mechanical Installation

How to Get Started

About How to Install

This chapter covers mechanical and electrical installations to and from power terminals and control card terminals.

Electrical installation of options is described in the relevant Operating Instructions and Design Guide.

How to Get Started

The frequency converter is designed to achieve a quick and EMC-correct installation by following the steps described below.

∆CAUTION

Read the safety instructions before installing the unit.

Failure to follow recommendations could result in death or serious injury.

Mechanical Installation

Mechanical mounting

Electrical Installation

- Connection to Mains and Protecting Earth
- Motor connection and cables
- Fuses and circuit breakers
- Control terminals cables

Quick setup

- Local Control Panel, LCP
- Automatic Motor Adaptation, AMA
- Programming

Frame size is depending on enclosure type, power range and mains voltage

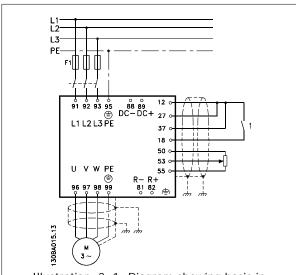


Illustration 3. 1: Diagram showing basic installation including mains, motor, start/stop key, and potentiometer for speed adjustment.

Pre-installation

Planning the Installation Site

NOTICE

Before performing the installation it is important to plan the installation of the frequency converter. Neglecting this may result in extra work during and after installation.

Failure to follow recommendations could result in equipment or property damage.

Select the best possible operation site by considering the following (see details on the following pages, and the respective Design Guides):

- Ambient operating temperature
- Installation method
- How to cool the unit
- Position of the frequency converter
- Cable routing
- Ensure the power source supplies the correct voltage and necessary current
- Ensure that the motor current rating is within the maximum current from the frequency converter
- If the frequency converter is without built-in fuses, ensure that the external fuses are rated correctly.

Receiving the Frequency Converter

When receiving the frequency converter please make sure that the packaging is intact, and be aware of any damage that might have occurred to the unit during transport. In case damage has occurred, contact immediately the shipping company to claim the damage.

Transportation and Unpacking

Before unpacking the frequency converter it is recommended that it is located as close as possible to the final installation site.

Remove the box and handle the frequency converter on the pallet, as long as possible.

NOTE: The card box cover contains a drilling master for the mounting holes in the D frames. For the E size, please refer to section *Mechanical Dimensions* later in this chapter.



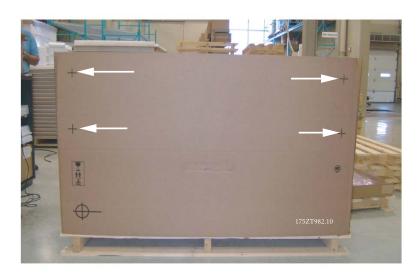


Illustration 3. 2: Mounting Template

Lifting

Improper Unit Lift!

Test lift unit approximately 24 inches to verify proper center of gravity lift point. To avoid dropping of unit, reposition lifting point if unit is not level. Failure to properly lift unit could result in unit dropping and possibly crushing operator/technician which could result in death or serious injury and possible equipment or property-only damage.

Always lift the frequency converter in the dedicated lifting eyes. For all D and E2 (IP00) enclosures, use a bar to avoid bending the lifting holes of the frequency converter.

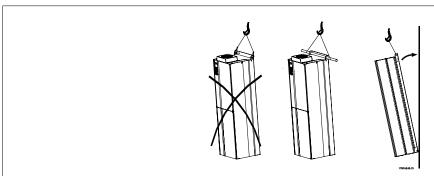


Illustration 3. 3: Recommended lifting method, frame sizes D and E $\mbox{.}$

MARNING

The lifting bar must be able to handle the weight of the frequency converter. See *Mechanical Dimensions* for the weight of the different frame sizes. Maximum diameter for bar is 2.5 cm (1 inch). The angle from the top of the drive to the lifting cable should be 60° C or greater.

Failure to follow recommendations could result in death or serious injury.

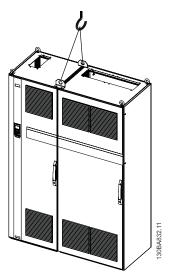


Illustration 3. 4: Recommended lifting method, frame size F1.

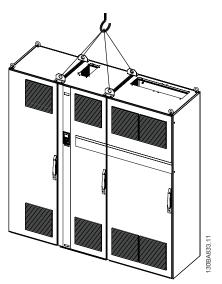


Illustration 3. 6: Recommended lifting method, frame size F3.

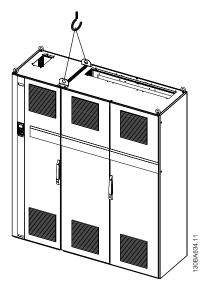


Illustration 3. 5: Recommended lifting method, frame size F2.




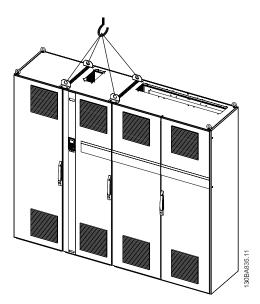


Illustration 3. 7: Recommended lifting method, frame size F4.




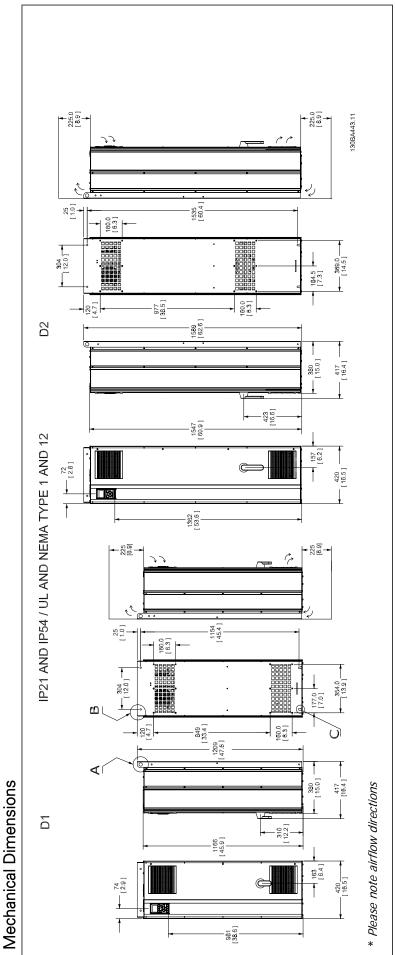

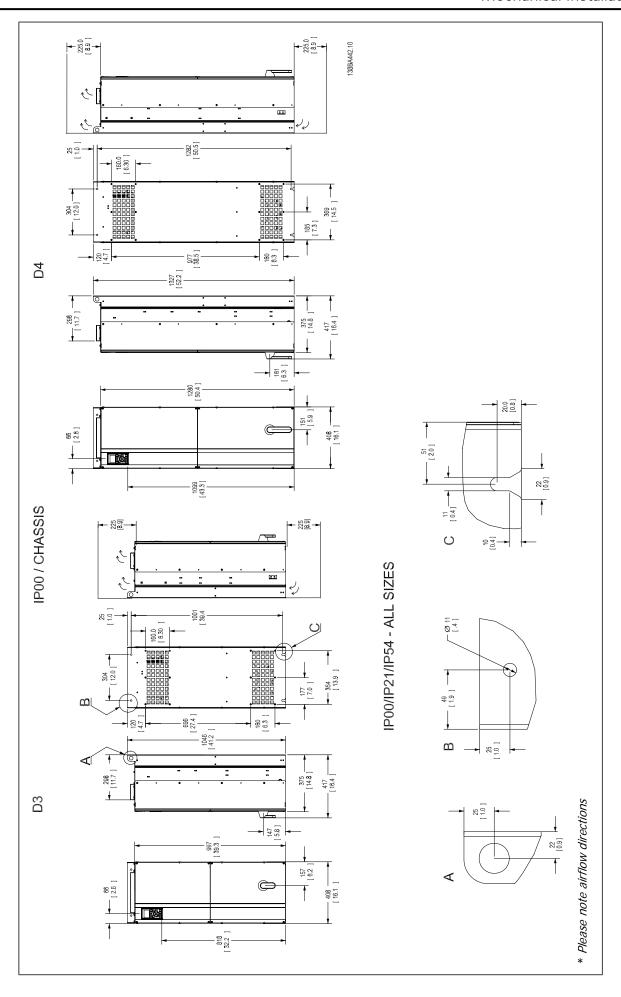


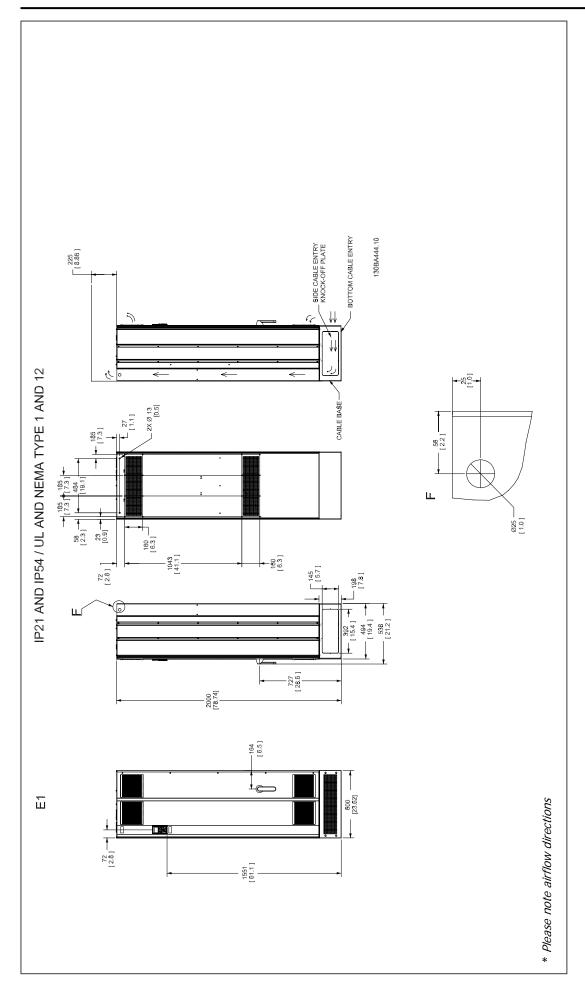




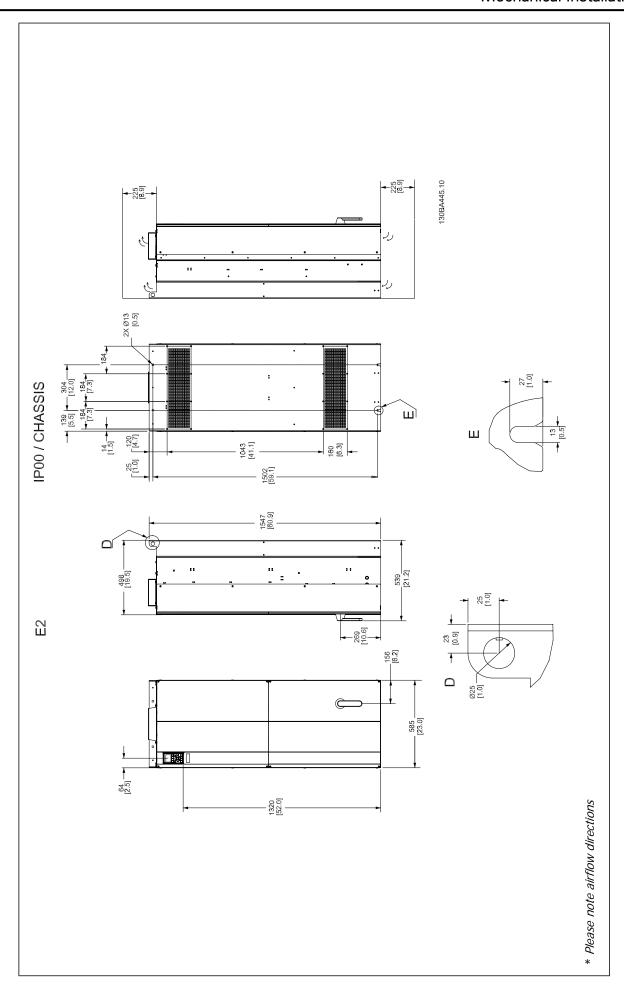

TRANE

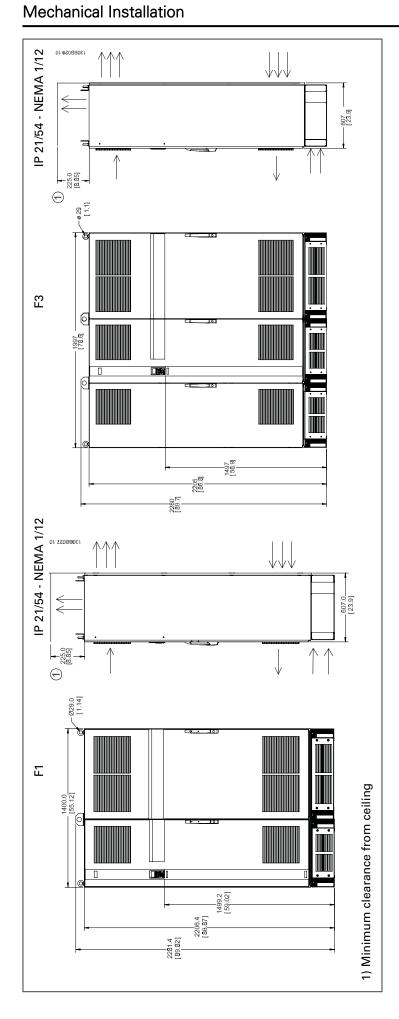



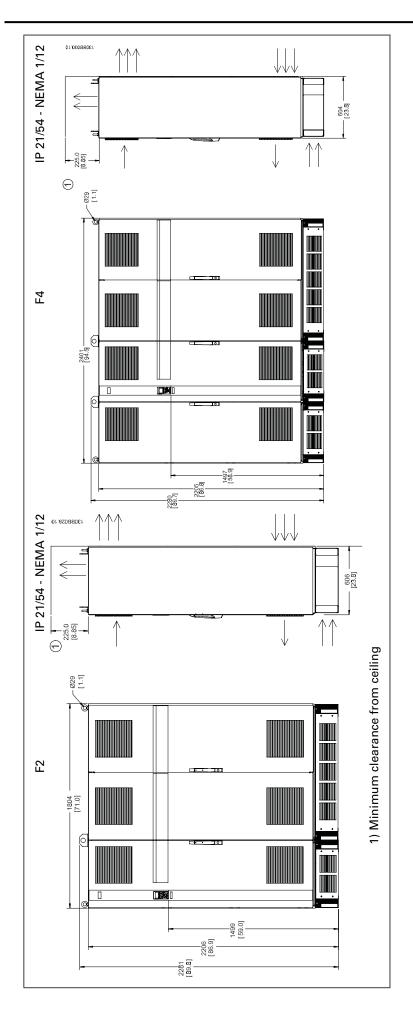



	Mechanical dimensions , Frame size D								
Frame Size			D1		D2		D3	D4	
							110 - 132 kW	160 - 250 kW	
			110 - 132 kV	V at 400 V	160 - 250 kV	V at 400 V	at 400 V	at 400 V	
			(380 - 4	80 V)	(380 - 4	80 V)	(380 - 480 V)	(380 - 480 V)	
			45 - 160 kW	at 690 V	200 - 400 kV	V at 690 V	45 - 160 kW at	200 - 400 kW	
			(525-69	90 V)	(525-69	90 V)	690 V	at 690 V	
							(525-690 V)	(525-690 V)	
IP			21	54	21	54	00	00	
NEMA			Type 1	Type 12	Type 1	Type 12	Chassis	Chassis	
Ship- ping dimen- sions	Height		650 mm	650 mm	650 mm	650 mm	650 mm	650 mm	
	Width		1730 mm	1730 mm	1730 mm	1730 mm	1220 mm	1490 mm	
	Depth		570 mm	570 mm	570 mm	570 mm	570 mm	570 mm	
Drive dimensions	Height		1209 mm	1209 mm	1589 mm	1589 mm	1046 mm	1327 mm	
	Width		420 mm	420 mm	420 mm	420 mm	408 mm	408 mm	
	Depth		380 mm	380 mm	380 mm	380 mm	375 mm	375 mm	
	Max weight		104 kg	104 kg	151 kg	151 kg	91 kg	138 kg	

Frame Size E1		E2	F1	F2	F3	F4	
		315 - 450 kW	315 - 450 kW	500 - 710 kW	800 - 1000	500 - 710 kW	800 - 1000
		at 400 V	at 400 V	at 400 V	kW at 400 V	at 400 V	kW at 400 V
		(380 - 480 V)					
		450 - 630 kW	450 - 630 kW	710 - 900 kW	1000 - 1200	710 - 900 kW	1000 - 1400
		at 690 V	at 690 V	at 690 V	kW at 690 V	at 690 V	kW at 690 V
		(525-690 V)					
IP		21, 54	00	21, 54	21, 54	21, 54	21, 54
NEMA		Type 1/ Type	Chassis	Type 1/ Type	Type 1/ Type	Type 1/ Type	Type 1/ Type
		12		12	12	12	12
Shipping	Heig						
dimen-	ht	840 mm	831 mm	2324 mm	2324 mm	2324 mm	2324 mm
sions							
	Widt	2197 mm	1705 mm	1569 mm	1962 mm	2159 mm	2559 mm
	h	2107 111111	1700 111111	1000 111111	1002 111111	2100 111111	2000 111111
	Dept	736 mm	736 mm	1130 mm	1130 mm	1130 mm	1130 mm
	h	700	700				
Drive di-	Heig	2000 mm	1547 mm	2204	2204	2204	2204
mensions	ht						
	Widt	600 mm	585 mm	1400	1800	2000	2400
	h	40.4	400		000		222
	Dept	494 mm	498 mm	606	606	606	606
	h						
	Max	0401	077.1	4004	4040	4000	4544
	weig	313 kg	277 kg	1004	1246	1299	1541
	ht						



Rated Power

Frame s	ize	D1	D2	D3	D4
Fredering		130BA816.10	130BA67.10	O S ROOMS	TOWARD UP
Enclosure	losure IP 21/54		21/54	00	00
protec- NE tion MA		Type 1/ Type 12	Type 1/ Type 12	Chassis	Chassis
Normal ov	er-	110 - 132 kW at 400 V	150 - 250 kW at 400 V	110 - 132 kW at 400 V	150 - 250 kW at 400 V
load rated	pow-	(380 - 480 V)			
er - 110%	over-	45 - 160 kW at 690 V	200 - 400 kW at 690 V	45 - 160 kW at 690 V	200 - 400 kW at 690 V
load torqu	е	(525-690 V)	(525-690 V)	(525-690 V)	(525-690 V)



NOTE: The F frames have four different sizes, F1, F2, F3 and F4. The F1 and F2 consist of an inverter cabinet on the right and rectifier cabinet on the left. The F3 and F4 have an additional options cabinet left of the rectifier cabinet. The F3 is an F1 with an additional options cabinet. The F4 is an F2 with an additional options cabinet.



Mechanical Installation

Preparation of the mechanical installation of the frequency converter must be done carefully to ensure a proper result and to avoid additional work during installation. Start taking a close look at the mechanical drawings at the end of this instruction to become familiar with the space demands.

Tools Needed


To perform the mechanical installation the following tools are needed:


- Drill with 10 or 12 mm drill
- Tape measure
- Wrench with relevant metric sockets (7-17 mm)
- · Extensions to wrench
- Sheet metal punch for conduits or cable glands in IP 21/Nema 1 and IP 54 units
- Lifting bar to lift the unit (rod or tube max. Ø 25 mm (1 inch), able to lift minimum 400 kg (880 lbs)).
- Crane or other lifting aid to place the frequency converter in position
- A Torx T50 tool is needed to install the E1 in IP21 and IP54 enclosure types.

General Considerations

Space

Ensure proper space above and below the frequency converter to allow airflow and cable access. In addition space in front of the unit must be considered to enable opening of the door of the panel.

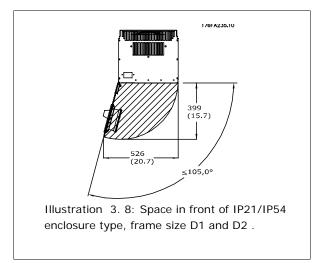

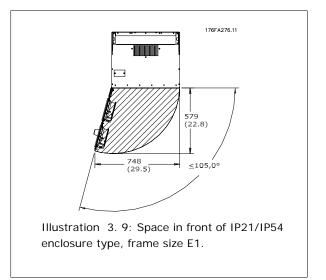

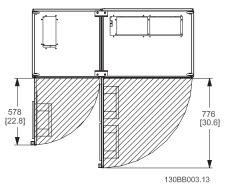


Illustration 3. 10: Space in front of IP21/IP54 enclosure type, frame size F1

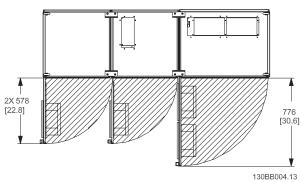


Illustration 3. 11: Space in front of IP21/IP54 enclosure type, frame size F3

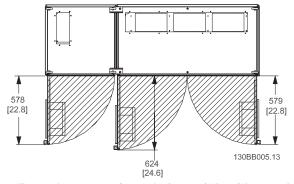


Illustration 3. 12: Space in front of IP21/IP54 enclosure type, frame size F2

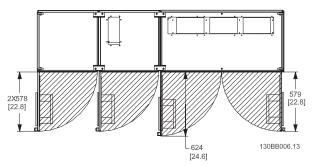


Illustration 3. 13: Space in front of IP21/IP54 enclosure type, frame size F4

Wire access

Ensure that proper cable access is present including necessary bending allowance. As the IP00 enclosure is open to the bottom cables must be fixed to the back panel of the enclosure where the frequency converter is mounted, i.e. by using cable clamps.


Note


All cable lugs/ shoes must mount within the width of the terminal bus bar.



Terminal Locations - Frame size D

Take the following position of the terminals into consideration when you design for cables access.

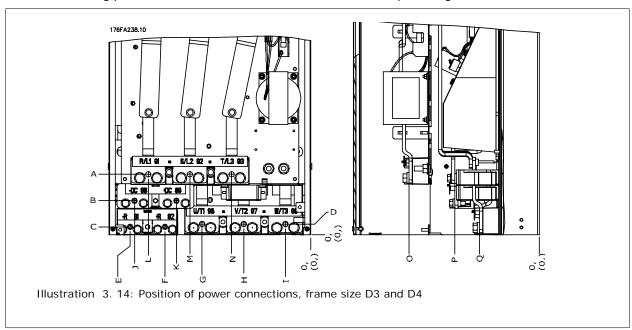

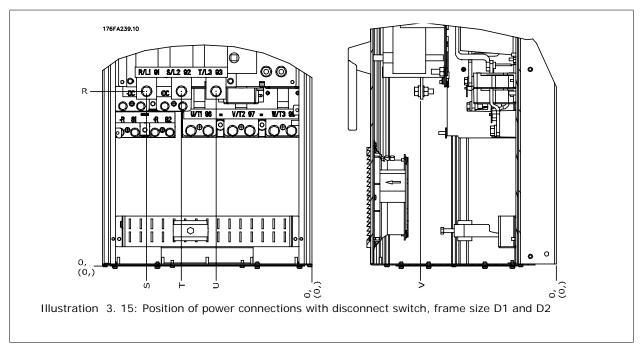

Be aware that the power cables are heavy and hard to bend. Consider the optimum position of the frequency converter for ensuring easy installation of the cables.

NOTE: All D frames are available with standard input terminals or disconnect switch. All terminal dimensions can be found in the following table.



	IP 21 (NEMA 1	1) / IP 54 (NEMA 12)	<u>IP 00 / Chassis</u>		
	Frame size D1	Frame size D2	Frame size D3 Frame size D4		
Α	277 (10.9)	379 (14.9)	119 (4.7)	122 (4.8)	
В	227 (8.9)	326 (12.8)	68 (2.7)	68 (2.7)	
С	173 (6.8)	273 (10.8)	15 (0.6)	16 (0.6)	
D	179 (7.0)	279 (11.0)	20.7 (0.8)	22 (0.8)	
E	370 (14.6)	370 (14.6)	363 (14.3)	363 (14.3)	
F	300 (11.8)	300 (11.8)	293 (11.5)	293 (11.5)	
G	222 (8.7)	226 (8.9)	215 (8.4)	218 (8.6)	
Н	139 (5.4)	142 (5.6)	131 (5.2)	135 (5.3)	
I	55 (2.2)	59 (2.3)	48 (1.9)	51 (2.0)	
J	354 (13.9)	361 (14.2)	347 (13.6)	354 (13.9)	
K	284 (11.2)	277 (10.9)	277 (10.9)	270 (10.6)	
L	334 (13.1)	334 (13.1)	326 (12.8)	326 (12.8)	
M	250 (9.8)	250 (9.8)	243 (9.6)	243 (9.6)	
N	167 (6.6)	167 (6.6)	159 (6.3)	159 (6.3)	
0	261 (10.3)	260 (10.3)	261 (10.3)	261 (10.3)	
P	170 (6.7)	169 (6.7)	170 (6.7)	170 (6.7)	
Q	120 (4.7)	120 (4.7)	120 (4.7)	120 (4.7)	
R	256 (10.1)	350 (13.8)	98 (3.8)	93 (3.7)	
S	308 (12.1)	332 (13.0)	301 (11.8)	324 (12.8)	
T	252 (9.9)	262 (10.3)	245 (9.6)	255 (10.0)	
U	196 (7.7)	192 (7.6)	189 (7.4)	185 (7.3)	
V	260 (10.2)	273 (10.7)	260 (10.2)	273 (10.7)	


Table 3. 1: Cable positions as shown in drawings above. Dimensions in mm (inch).




Terminal Locations - Frame size E

Terminal Locations - E1

Take the following position of the terminals into consideration when designing the cable access.

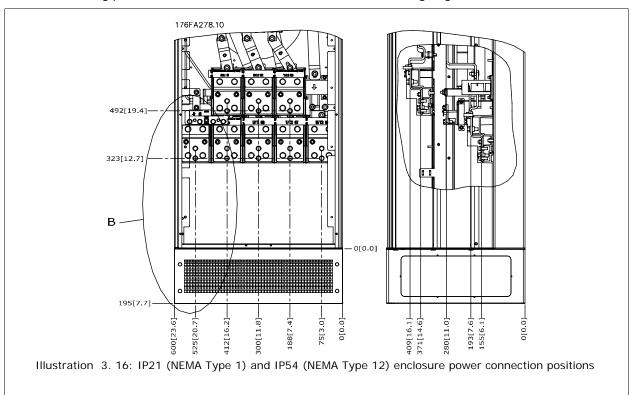

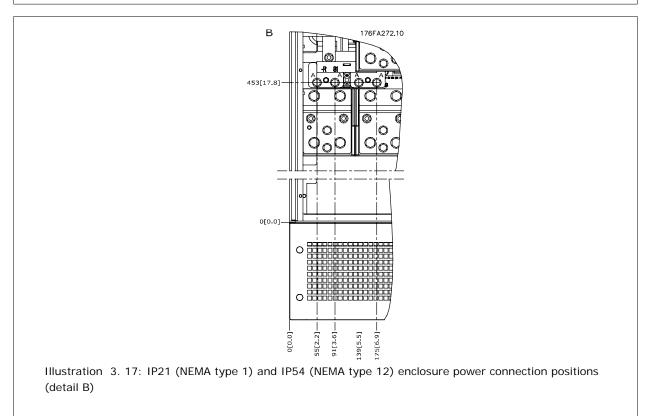



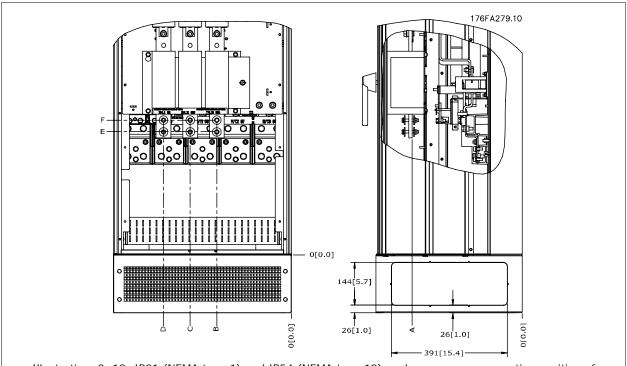



Illustration 3. 18: IP21 (NEMA type 1) and IP54 (NEMA type 12) enclosure power connection position of disconnect switch

Frame size	Unit type	Dimension for disconnect terminal					
	IP54/IP21 UL AND NEMA1/ NEMA12						
E1	250/315 kW (400V) AND 355/450-500/630 KW (690 V)	381 (15.0)	253 (9.9)	253 (9.9)	431 (17.0)	562 (22.1)	N/A
	315/355-400/450 kW (400V)	371 (14.6)	371 (14.6)	341 (13.4)	431 (17.0)	431 (17.0)	455 (17.9)



Terminal locations - Frame size E2

Take the following position of the terminals into consideration when designing the cable access.

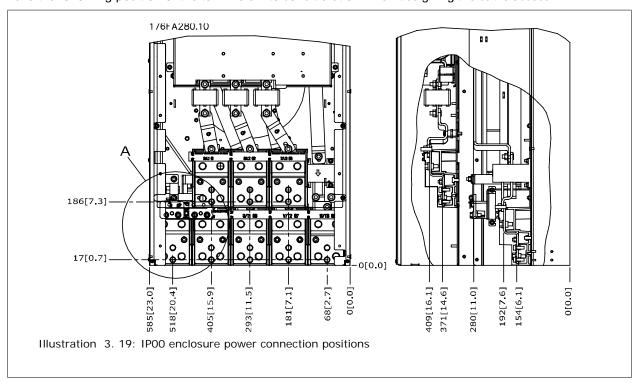



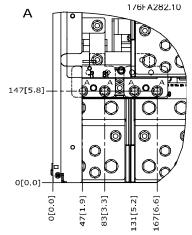


Illustration 3. 20: IP00 enclosure power connection positions

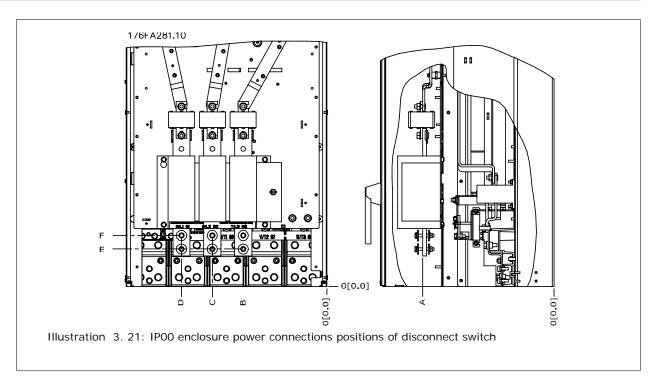

Note that the power cables are heavy and difficult to bend. Consider the optimum position of the frequency converter for ensuring easy installation of the cables.

Each terminal allows use of up to 4 cables with cable lugs or use of standard box lug. Earth is connected to relevant termination point in the drive.

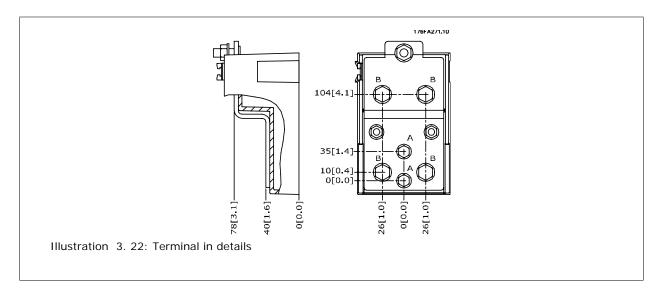

NOTE: Power connections can be made to positions A or B

Frame size	Unit type	Dimension for disconnect terminal					
E2	IPOO/CHASSIS	Α	В	С	D	Е	F
	250/315 kW (400V) AND 355/450-500/630 KW (690 V)	381 (15.0)	245 (9.6)	334 (13.1)	423 (16.7)	256 (10.1)	N/A
	315/355-400/450 kW (400V)	383 (15.1)	244 (9.6)	334 (13.1)	424 (16.7)	109 (4.3)	149 (5.8)



Terminal Locations - Frame size F

Terminal locations - Frame size F1 and F3

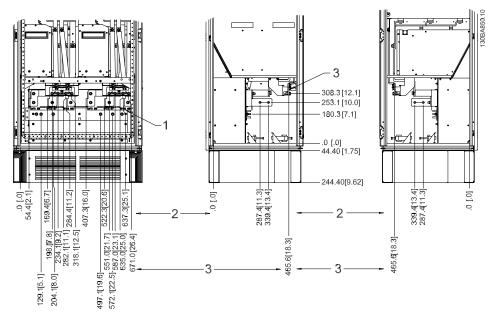


Illustration 3. 23: Terminal locations - Inverter Cabinet - F1 and F3 (front, left and right side view). The gland plate is 42 mm below .0 level.

- 1) Earth ground bar
- 2) Motor terminals
- 3) Brake terminals

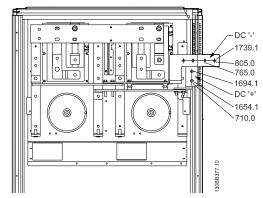


Illustration 3. 24: Terminal Locations - Regen Terminals - F1 and F3



Terminal locations - Frame size F2 and F4

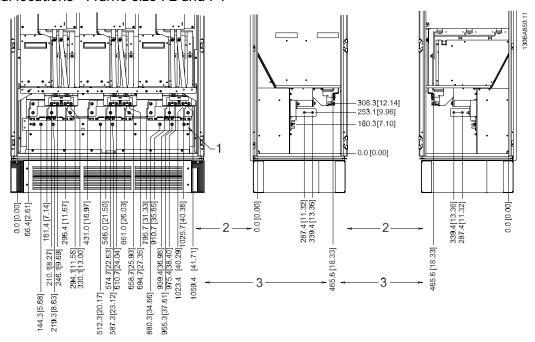


Illustration 3. 25: Terminal locations - Inverter Cabinet - F2 and F4 (front, left and right side view). The gland plate is 42 mm below .0 level.

1) Earth ground bar

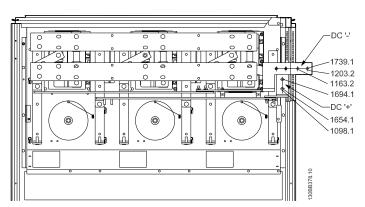


Illustration 3. 26: Terminal Locations - Regen Terminals - F2 and F4 $\,$



Terminal locations - Rectifier (F1, F2, F3 and F4)

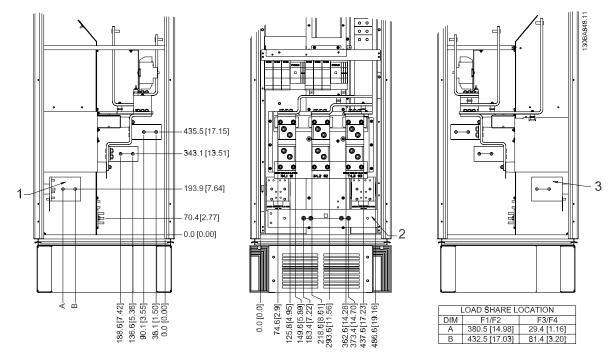


Illustration 3. 27: Terminal locations - Rectifier (Left side, front and right side view). The gland plate is 42 mm below .0 level.

- 1) Loadshare Terminal (-)
- 2) Earth ground bar
- 3) Loadshare Terminal (+)

Terminal locations - Options Cabinet (F3 and F4)

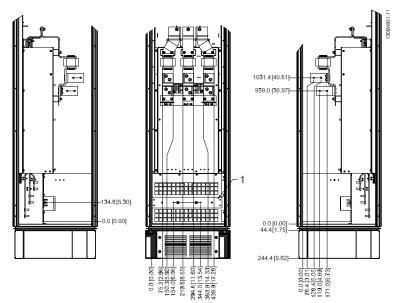


Illustration 3. 28: Terminal locations - Options Cabinet (Left side, front and right side view). The gland plate is 42 mm below .0 level.

1) Earth ground bar



Terminal locations - Options Cabinet with circuit breaker/ molded case switch (F3 and F4)

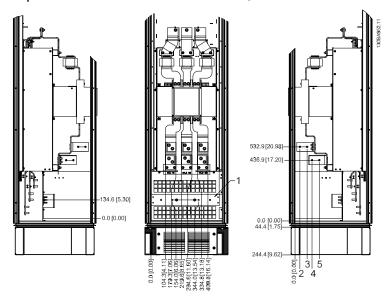


Illustration 3. 29: Terminal locations - Options Cabinet with circuit breaker/ molded case switch (Left side, front and right side view). The gland plate is 42 mm below .0 level.

1) Earth ground bar

Power size	2	3	4	5
500 kW (480 V), 710-800 kW (690 V)	34.9	86.9	122.2	174.2
560-1000 kW (480 V), 900-1400 kW (690 V)	46.3	98.3	119.0	171.0

Table 3. 2: Dimension for terminal

Cooling and Airflow

Cooling

Cooling can be obtained in different ways, by using the cooling ducts in the bottom and the top of the unit, by taking air in and out the back of the unit or by combining the cooling possibilities.

Duct cooling

A dedicated option has been developed to optimize installation of IP00/chassis frequency converters in Rittal TS8 enclosures utilizing the fan of the frequency converter for forced air cooling of the backchannel. The air out the top of the enclosure could but ducted outside a facility so the heat loses from the backchannel are not dissipated within the control room reducing air-conditioning requirements of the facility.

Please see Installation of Duct Cooling Kit in Rittal enclosures, for further information.

Back cooling

The backchannel air can also be ventilated in and out the back of a Rittal TS8 enclosure. This offers a solution where the backchannel could take air from outside the facility and return the heat loses outside the facility thus reducing air-conditioning requirements.



NOTICE

A door fan(s) is required on the enclosure to remove the heat losses not contained in the backchannel of the drive and any additional losses generated from other components installed inside the enclosure. The total required air flow must be calculated so that the appropriate fans can be selected. Some enclosure manufacturers offer software for performing the calculations (i.e. Rittal Therm software). If the drive is the only heat generating component in the enclosure, the minimum airflow required at an ambient temperature of 45°C for the D3 and D4 drives is 391 m³/h (230 cfm). The minimum airflow required at an ambient temperature of 45°C for the E2 drive is 782 m³/h (460 cfm). Failure to follow recommendations could result in equipment or property damage.

Airflow

The necessary airflow over the heat sink must be secured. The flow rate is shown below.

Enclosure protection	Frame size	Door fan(s) / Top fan airflow	Heatsink fan(s)
IP21 / NEMA 1	D1 and D2	170 m ³ /h (100 cfm)	765 m ³ /h (450 cfm)
IP54 / NEMA 12	E1 P315T5, P450T7, P500T7	340 m ³ /h (200 cfm)	1105 m ³ /h (650 cfm)
	E1P355-P450T5, P560- P630T7	340 m ³ /h (200 cfm)	1445 m ³ /h (850 cfm)
IP21 / NEMA 1	F1, F2, F3 and F4	700 m ³ /h (412 cfm)*	985 m ³ /h (580 cfm)*
IP54 / NEMA 12	F1, F2, F3 and F4	525 m ³ /h (309 cfm)*	985 m ³ /h (580 cfm)*
IP00 / Chassis	D3 and D4	255 m ³ /h (150 cfm)	765 m ³ /h (450 cfm)
	E2 P315T5, P450T7, P500T7	255 m ³ /h (150 cfm)	1105 m ³ /h (650 cfm)
	E2 P355-P450T5, P560- P630T7	255 m ³ /h (150 cfm)	1445 m ³ /h (850 cfm)
* Airflow per fan. Frame	size F contain multiple fans	i.	

Table 3. 3: Heatsink Air Flow



External ducts

If additional duct work is added externally to the Rittal cabinet the pressure drop in the ducting must be calculated. Use the charts below to derate the frequency converter according to the pressure drop.

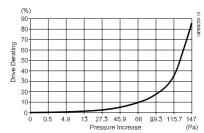


Illustration 3. 30: D frame Derating vs. Pressure Change

Drive air flow: $450 \text{ cfm} (765 \text{ m}^3/\text{h})$

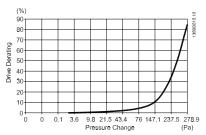


Illustration 3. 31: E frame Derating vs. Pressure Change (Small Fan), P315T5 and P450T7-P500T7 Drive air flow: $650 \text{ cfm} (1105 \text{ m}^3/\text{h})$

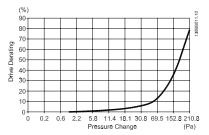


Illustration 3. 32: E frame Derating vs. Pressure Change (Large Fan), P355T5-P450T5 and P560T7-P630T7 Drive air flow: 850 cfm (1445 m^3/h)

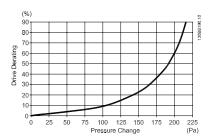


Illustration $\,$ 3. 33: F1, F2, F3, F4 frame Derating vs. Pressure Change

Drive air flow: $580 \text{ cfm } (985 \text{ m}^3/\text{h})$

Mechanical Installation


Installation on the Wall - IP21 (NEMA 1) and IP54 (NEMA 12) Units

This only applies to frame sizes D1 and D2. It must be considered where to install the unit.

Take the relevant points into consideration before you select the final installation site:

- Free space for cooling
- Access to open the door
- Cable entry from the bottom

Mark the mounting holes carefully using the mounting template on the wall and drill the holes as indicated. Ensure proper distance to the floor and the ceiling for cooling. A minimum of 225 mm (8.9 inch) below the frequency converter is needed. Mount the bolts at the bottom and lift the frequency converter up on the bolts. Tilt the frequency converter against the wall and mount the upper bolts. Tighten all four bolts to secure the frequency converter against the wall.

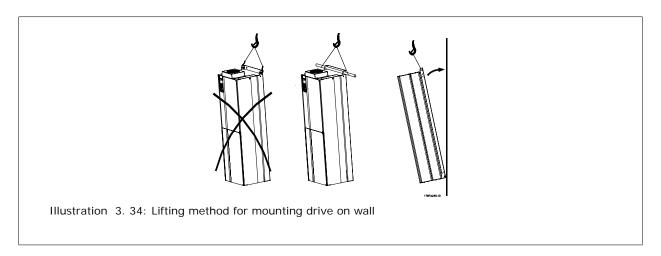



Gland/Conduit Entry - IP21 (NEMA 1) and IP54 (NEMA12)


Cables are connected through the gland plate from the bottom. Remove the plate and plan where to place the entry for the glands or conduits. Prepare holes in the marked area on the drawing.


Note


The gland plate must be fitted to the frequency converter to ensure the specified protection degree, as well as ensuring proper cooling of the unit. If the gland plate is not mounted, the frequency converter may trip on Alarm 69, Pwr. Card Temp.



Illustration 3. 35: Example of proper installation of the gland plate.

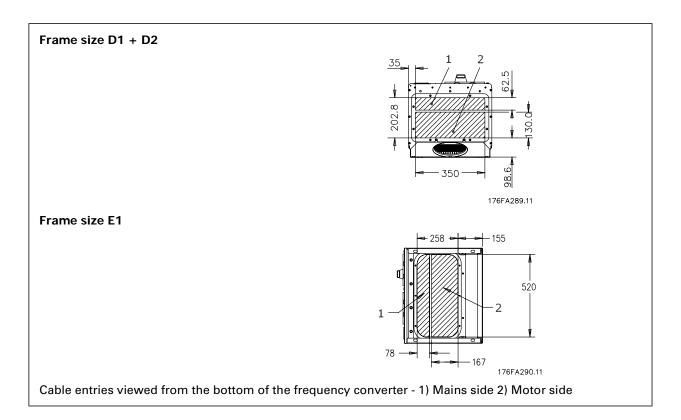

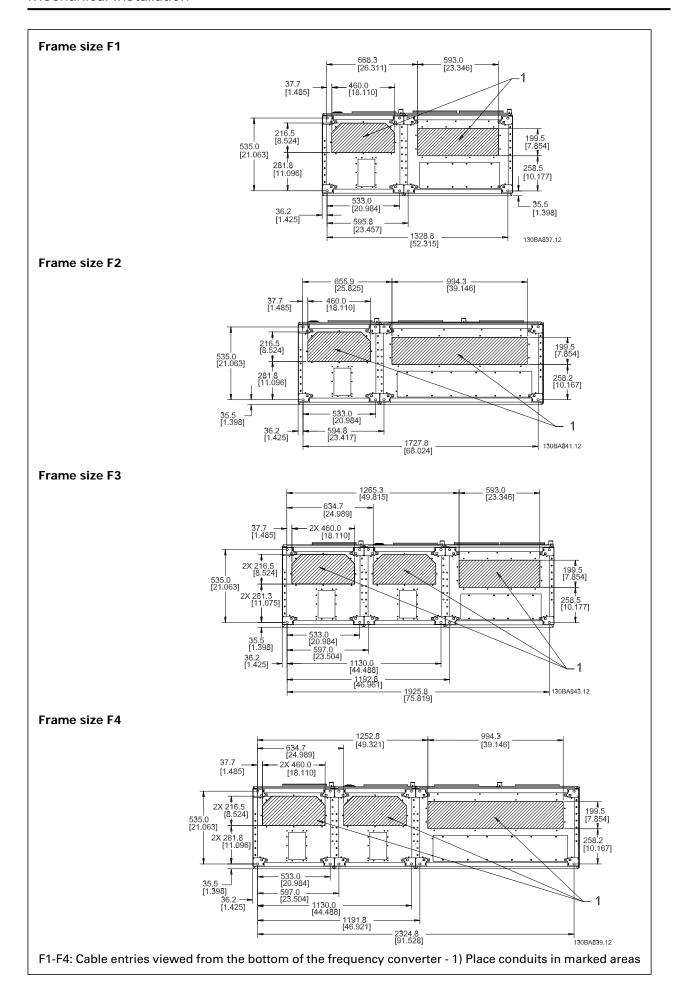

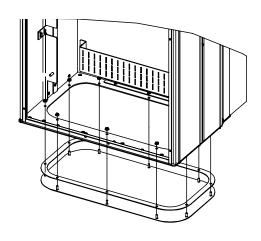

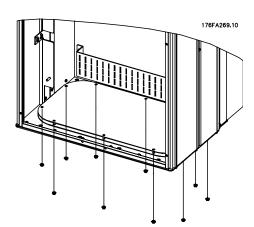


Illustration 3. 36: Mounting of bottom plate, frame size E1.

The bottom plate of the E1 can be mounted from either in- or outside of the enclosure, allowing flexibility in the installation process, i.e. if mounted from the bottom the glands and cables can be mounted before the frequency converter is placed on the pedestal.

IP21 Drip Shield Installation (Frame size D1 and D2)

To comply with the IP21 rating, a separate drip shield is to be installed as explained below:

- Remove the two front screws
- Insert the drip shield and replace screws
- Torque the screws to 5,6 Nm (50 in-lbs)

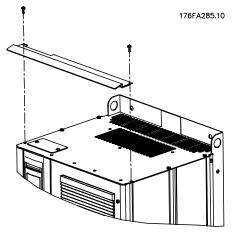


Illustration 3. 37: Drip shield installation.



Field Installation of Options

Installation of Duct Cooling Kit in Rittal Enclosures

This section deals with the installation of IP00 / chassis enclosed frequency converters with duct work cooling kits in Rittal enclosures. In addition to the enclosure a 200 mm base/plinth is required.

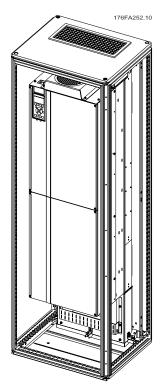


Illustration 3. 38: Installation of IP00 in Rittal TS8 enclosure.

The minimum enclosure dimension is:

- D3 and D4 frame: Depth 500 mm and width 600 mm.
- E2 frame: Depth 600 mm and width 800 mm.

The maximum depth and width are as required by the installation. When using multiple frequency converters in one enclosure it is recommended that each drive is mounted on its own back panel and supported along the mid-section of the panel. These duct work kits do not support the "in frame" mounting of the panel (see Rittal TS8 catalogue for details). The duct work cooling kits listed in the table below are suitable for use only with IP 00 / Chassis frequency converters in Rittal TS8 IP 20 and UL and NEMA 1 and IP 54 and UL and NEMA 12 enclosures.

NOTICE

For the E2 frames it is important to mount the plate at the absolute rear of the Rittal enclosure due to the weight of the frequency converter.

Failure to follow recommendation could result in equipment or property damage.

NOTICE

A doorfan(s) is required on the enclosure to remove the heat losses not contained in the backchannel of the drive and any additional losses generated from other components installed inside the enclosure. The total required air flow must be calculated so that the appropriate fans can be selected. Some enclosure manufacturers offer software for performing the calculations (i.e. Rittal Therm software). If the drive is the only heat generating component in the enclosure, the minimum airflow required at an ambient temperature of 45°C for the D3 and D4 drives is 391 m³/h (230 cfm). The minimum airflow required at an ambient temperature of 45°C for the E2 drive is 782 m³/h (460 cfm). Failure to follow recommendations could result in equipment or property damage.

Ordering Information

Frame D3 Kit Part No.	Frame D4Kit Part No.	Frame E2 Part No.
176F1824	176F1823	Not possible
176F1826	176F1825	176F1850
		176F0299
	176F1824	176F1824 176F1823

Note

Please see the Duct Kit Instruction Manual, 175R5640, for further information

External ducts

If additional duct work is added externally to the Rittal cabinet the pressure drop in the ducting must be calculated. Please see section *Cooling and Airflow* for further information.

Mechanical Installation

Installation of Top-only Duct Cooling Kit

This description is for the installation of the top section only of the back-channel cooling kits available for frame sizes D3, D4 and E2. In addition to the enclosure a 200 mm vented pedestal is required.

The minimum enclosure depth is 500 mm (600 mm for E2 frame) and the minimum enclosure width is 600 mm (800 mm for E2 frame). The maximum depth and width are as required by the installation. When using multiple frequency converters in one enclosure mount each drive on its own back panel and support along the midsection of the panel. The back-channel cooling kits are very similar in construction for all frames. The D3 and D4 kits do not support "in frame" mounting of the frequency converters. The E2 kit is mounted "in frame" for additional support of the frequency converter.

Using these kits as described removes 85% of the losses via the back channel using the drive's main heat sink fan. The remaining 15% must be removed via the door of the enclosure.

Note

Please see the Top-Only Back-Channel Cooling Kit Instruction, 175R1107, for further information.

Ordering information

Frame size D3 and D4: 176F1775

Ordering information

Installation of Top and Bottom Covers for Rittal Enclosures

The top and bottom covers, installed onto IP00 frequency converters, direct the heat sink cooling air in and out the back of the frequency converter. The kits are applicable to IP00 drive frames D3, D4 and E2. These kits are designed and tested to be used with IP00/Chassis drives in Rittal TS8 enclosures.

Notes:

- 1. If external duct work is added to the exhaust path of the drive, additional back pressure will be created that will reduce the cooling of the drive. The drive must be derated to accommodate the reduced cooling. First, the pressure drop must be calculated, then refer to the derating tables located earlier in this section.
- 2. A doorfan(s) is required on the enclosure to remove the heat losses not contained in the backchannel of the drive and any additional losses generated from other components installed inside the enclosure. The total required air flow must be calculated so that the appropriate fans can be selected. Some enclosure manufacturers offer software for performing the calculations (i.e. Rittal Therm software). If the frequency converter is the only heat generating component in the enclosure, the minimum airflow required at an ambient temperature of 45°C for the D3 and D4 frame drives is 391 m³/h (230 cfm). The minimum airflow required at an ambient temperature of 45°C for the E2 frame drive is 782 m³/h (460 cfm).

Note

Please see the instruction for *Top and Bottom Covers - Rittal Enclosure, 177R0076,* for further information.

Ordering information

Frame size D3: 176F1781 Frame size D4: 176F1782 Frame size E2: 176F1783



Installation of Top and Bottom Covers

Top and bottom covers can be installed on frame sizes D3, D4 and E2. These kits are designed to be used to direct the back-channel airflow in and out the back of the drive as opposed to in the bottom and out the top of the drive (when the drives are being mounted directly on a wall or inside a welded enclosure).

Notes:

- 1. If external duct work is added to the exhaust path of the drive, additional back pressure will be created that will reduce the cooling of the drive. The drive must be derated to accommodate the reduced cooling. First, the pressure drop must be calculated, then refer to the derating tables located earlier in this section.
- 2. A doorfan(s) is required on the enclosure to remove the heat losses not contained in the backchannel of the drive and any additional losses generated from other components installed inside the enclosure. The total required air flow must be calculated so that the appropriate fans can be selected. Some enclosure manufacturers offer software for performing the calculations (i.e. Rittal Therm software). If the frequency converter is the only heat generating component in the enclosure, the minimum airflow required at an ambient temperature of 45°C for the D3 and D4 frame drives is 391 m³/h (230 cfm). The minimum airflow required at an ambient temperature of 45°C for the E2 frame drive is 782 m³/h (460 cfm).

Please see the *Top and Bottom Covers Only Instruction, 175R1106,* for further information.

Ordering information

Frame size D3 and D4: 176F1862 Frame size E2: 176F1861



Outside Installation/ NEMA 3R Kit for Rittal Enclosures



This section is for the installation of NEMA 3R kits available for the frequency converter frames D3, D4 and E2. These kits are designed and tested to be used with IP00/ Chassis versions of these frames in Rittal TS8 NEMA 3R or NEMA 4 enclosures. The NEMA-3R enclosure is an outdoor enclosure that provides a degree of protection against rain and ice. The NEMA-4 enclosure is an outdoor enclosure that provides a greater degree of protection against weather and hosed water.

The minimum enclosure depth is 500 mm (600 mm for E2 frame) and the kit is designed for a 600 mm (800 mm for E2 frame) wide enclosure. Other enclosure widths are possible, however additional Rittal hardware is required. The maximum depth and width are as required by the installation.

Note

The current rating of drives in D3 and D4 frames are de-rated by 3%, when adding the NEMA 3R kit. Drives in E2 frames require no derating.

NOTICE

A doorfan(s) is required on the enclosure to remove the heat losses not contained in the backchannel of the drive and any additional losses generated from other components installed inside the enclosure. The total required air flow must be calculated so that the appropriate fans can be selected. Some enclosure manufacturers offer software for performing the calculations (i.e. Rittal Therm software). If the drive is the only heat generating component in the enclosure, the minimum airflow required at an ambient temperature of 45°C for the D3 and D4 drives is 391 m³/h (230 cfm). The minimum airflow required at an ambient temperature of 45°C for the E2 drive is 782 m³/h (460 cfm). Failure to follow recommendations could result in equipment or property damage.

Ordering information

Frame size D3: 176F4600 Frame size D4: 176F4601 Frame size E2: 176F1852

Note

Please see the instructions 175R5922 for further information.



Outside Installation /NEMA 3R Kit of Industrial Enclosures

The kits are available for the frame sizes D3, D4 and E2. These kits are designed and tested to be used with IP00/ Chassis drives in welded box construction enclosures with an environmental rating of NEMA-3R or NEMA-4. The NEMA-3R enclosure is a dust tight, rain tight, ice resistant, outdoor enclosure. The NEMA-4 enclosure is a dust tight and water tight enclosure.

This kit has been tested and complies with UL environmental rating Type-3R.

Note: The current rating of D3 and D4 frame drives are de-rated by 3% when installed in a NEMA- 3R enclosure. E2 frame drives require no de-rating when installed in a NEMA-3R enclosure.

Note

Please see the instruction for Outside Installation /NEMA 3R kit of industrial enclosures, 175R1068, for further information.

Ordering information

Frame size D3: 176F0296 Frame size D4: 176F0295 Frame size E2: 176F0298

Installation of IP00 to IP20 Kits

The kits can be installed on frame sizes D3, D4, and E2 (IP00).

Note

Please see the instruction for Installation of IP20 Kits, 175R1108, for further information.

Ordering information

Frame size D3/D4: 176F1779 Frame size E2: 176FXXXX

Installation of IP00s D3, D4, & E2 Cable Clamp Bracket

The motor cable clamp brackets can be installed on frame sizes D3 and D4 (IP00).

Please see the instruction for Cable Clamp Bracket Kit, 175R1109, for further information.

Ordering information

Frame size D3: 176F1774 Frame size D4: 176F1746 Frame size E2: 176F1745

Mechanical Installation

Installation on Pedestal

This section describes the installation of a pedestal unit available for the frequency converters frames D1 and D2. This is a 200 mm high pedestal that allows these frames to be floor mounted. The front of the pedestal has openings for input air to the power components.

The frequency converter gland plate must be installed to provide adequate cooling air to the control components of the frequency converter via the door fan and to maintain the IP21/NEMA 1 or IP54/NEMA 12 degrees of enclosure protections.

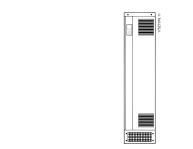


Illustration 3. 39: Drive on pedestal

There is one pedestal that fits both frames D1 and D2. Its ordering number is 176F1827. The pedestal is standard for E1 frame.

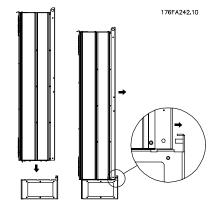


Illustration 3. 40: Mounting of drive to pedestal.

Note

Please see the *Pedestal Kit Instruction Manual, 175R5642*, for further information.

Installation of Mains Shield for Frequency Converters

This section is for the installation of a mains shield for the frequency converter series with D1, D2 and E1 frames. It is not possible to install in the IP00/ Chassis versions as these have included as standard a metal cover. These shields satisfy VBG-4 requirements.

Ordering numbers:

Frames D1 and D2: 176F0799

Frame E1: 176F1851

NOTE: For further information, please see the Instruction Sheet, 175R5923.

F Frame USB Extension Kit

A USB extension cable can be installed into the door of F-Frame VLT frequency converters.

Ordering number:

176F1784



Installation of Input Plate Options

This section is for the field installation of input option kits available for frequency converters in all D and E frames. Do not attempt to remove RFI filters from input plates. Damage may occur to RFI filters if they are removed from the input plate.

NOTE: Where RFI filters are available, there are two different type of RFI filters depending on the input plate combination and the RFI filters interchangeable. Field installable kits in certain cases are the same for all voltages.

	380 - 480 V 380 - 500 V	Fuses	Disconnect Fuses	RFI	RFI Fuses	RFI Discon- nect Fuses
D1	All D1 power sizes	176F8442	176F8450	176F8444	176F8448	176F8446
D2	All D2 power sizes	176F8443	176F8441	176F8445	176F8449	176F8447
E1	TR200/ : 315 kW TR200: 250 kW	176F0253	176F0255	176F0257	176F0258	176F0260
	TR200/: 355 - 450 kW TR200: 315 - 400 kW	176F0254	176F0256	176F0257	176F0259	176F0262

	525 - 690 V	Fuses	Disconnect Fuses	RFI	RFI Fuses	RFI Discon- nect Fuses
D1	TR200/: 45-90 kW TR200: 37-75 kW	175L8829	175L8828	175L8777	NA	NA
	TR200/ : 110-160 kW TR200: 90-132 kW	175L8442	175L8445	175L8777	NA	NA
D2	All D2power sizes	175L8827	175L8826	175L8825	NA	NA
E1	TR200/: 450-500 kW TR200: 355-400 kW	176F0253	176F0255	NA	NA	NA
	TR200/: 560-630 kW TR200: 500-560 kW	176F0254	176F0258	NA	NA	NA

NOTE: For further information, please see the Instruction Sheet, 175R5795

Installation of D or E Loadshare Option

The loadshare option can be installed on frame sizes D1, D2, D3, D4, E1 and E2.

Note

Please see the Loadshare Terminal Kit Instructions, 175R5637 (D frames) or 177R1114 (E frames), for further information

Ordering information

Frame size D1/D3: 176F8456 Frame size D2/D4: 176F8455 Frame size E1/E2: 176F1843



Electrical Installation

Electrical Installation

Power Connections

Cabling and Fusing

Note


Cables General

All cabling must comply with national and local regulations on cable cross-sections and ambient temperature. UL applications require 75 °C copper conductors. 75 and 90 °C copper conductors are thermally acceptable for the frequency converter to use in non UL applications.

The power cable connections are situated as shown below. Dimensioning of cable cross section must be done in accordance with the current ratings and local legislation. See the *Specifications section* for details.

For protection of the frequency converter, the recommended fuses must be used or the unit must be with built-in fuses. Recommended fuses can be seen in the tables of the fuse section. Always ensure that proper fusing is made according to local regulation.

The mains connection is fitted to the mains switch if this is included.

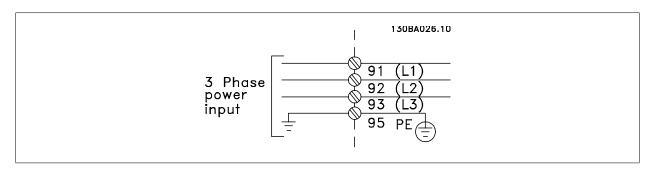

Note

The motor cable must be screened/armoured. If an unscreened/unarmoured cable is used, some EMC requirements are not complied with. Use a screened/armoured motor cable to comply with EMC emission specifications. For more information, see *EMC specifications* in the *Design Guide*.

See section General Specifications for correct dimensioning of motor cable cross-section and length.



Screening of cables:

Avoid installation with twisted screen ends (pigtails). They spoil the screening effect at higher frequencies. If it is necessary to break the screen to install a motor isolator or motor contactor, the screen must be continued at the lowest possible HF impedance.

Connect the motor cable screen to both the de-coupling plate of the frequency converter and to the metal housing of the motor.

Make the screen connections with the largest possible surface area (cable clamp). This is done by using the supplied installation devices within the frequency converter.

Cable-length and cross-section:

The frequency converter has been EMC tested with a given length of cable. Keep the motor cable as short as possible to reduce the noise level and leakage currents.

Switching frequency:

When frequency converters are used together with Sine-wave filters to reduce the acoustic noise from a motor, the switching frequency must be set according to the instruction in par.14-01 <u>Switching Frequency</u>.


Term. no.	96	97	98	99	
	U	V	W	PE ¹⁾	Motor voltage 0-100% of mains voltage.
					3 wires out of motor
	U1	V1	W1	PE1)	Delta-connected
	W2	U2	V2	PE''	6 wires out of motor
	U1	V1	W1	PE1)	Star-connected U2, V2, W2
					U2, V2 and W2 to be interconnected separately.

¹⁾Protected Earth Connection

NOTICE

In motors without phase insulation paper or other insulation reinforcement suitable for operation with voltage supply (such as a frequency converter), fit a Sine-wave filter on the output of the frequency converter.

Failure to follow recommendations could result in equipment or property damage.

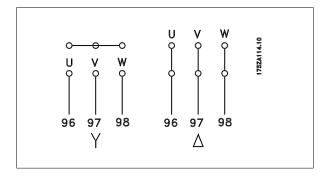

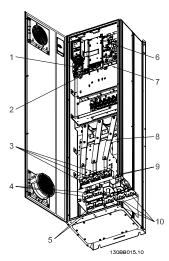


Illustration 4. 1: Compact IP 21 (NEMA 1) and IP 54 (NEMA 12), frame size D1

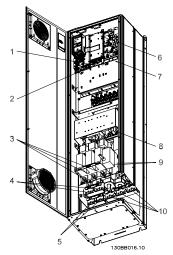


Illustration 4. 2: Compact IP 21 (NEMA 1) and IP 54 (NEMA 12) with disconnect, fuse and RFI filter, frame size D2

1)	AUX R	elay		5) Brake
	01	02	03	-R +R
	04	05	06	81 82
2)	Temp 9	Swite	h	6) SMPS Fuse (see fuse tables for part number)
	106 1	104	105	7) AUX Fan
3)	Line			100 101 102 103
	R S	S	T	L1 L2 L1 L2
	91 9	92	93	8) Fan Fuse (see fuse tables for part number)
	L1 L	_2	L3	9) Mains ground
4)	Load s	har-		10) Motor
	ing			
	-DC	+DC		U V W
	88	89		96 97 98
				T1 T2 T3

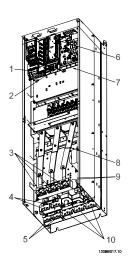


Illustration 4. 3: Compact IP 00 (Chassis), frame size D3

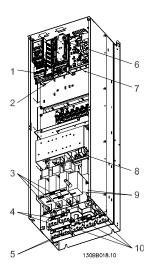


Illustration 4. 4: Compact IP 00 (Chassis) with disconnect, fuse and RFI filter, frame size D4



Electrical Installation

1)	AUX	Relay		5) Brake
	01	02	03	-R +R
	04	05	06	81 82
2)	Temp	Swite	ch	6) SMPS Fuse (see fuse tables for part number)
	106	104	105	7) AUX Fan
3)	Line			100 101 102 103
	R	S	Т	L1 L2 L1 L2
	91	92	93	8) Fan Fuse (see fuse tables for part number)
	L1	L2	L3	9) Mains ground
4)	Load	shar-		10) Motor
	ing			
	-DC	+DC		U V W
	88	89		96 97 98
				T1 T2 T3
				11 12 13

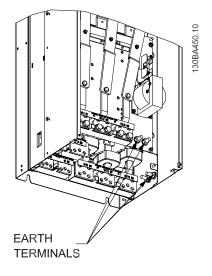


Illustration $\ 4.\ 5:$ Position of earth terminals IP00, frame sizes D

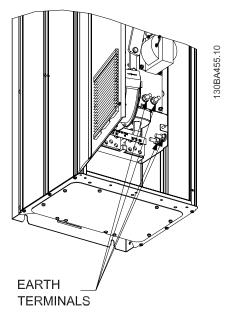


Illustration 4. 6: Position of earth terminals IP21 (NEMA type 1) and IP54 (NEMA type 12)

NOTE: D2 and D4 shown as examples. D1 and D3 are equivalent.

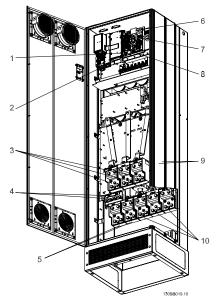


Illustration 4. 7: Compact IP 21 (NEMA 1) and IP 54 (NEMA 12) frame size E1

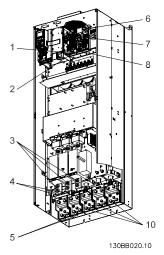


Illustration 4. 8: Compact IP 00 (Chassis) with disconnect, fuse and RFI filter, frame size E2

1) AUX Relay 01 02 03 04 05 06 2) Temp Switch 106 104 105 3) Line S Τ 91 92 93 L2 L1 L3 4) Brake -R +R 81 82

- 5) Load sharing -DC +DC 88 89
- 6) SMPS Fuse (see fuse tables for part number)
- 7) Fan Fuse (see fuse tables for part number)
- 8) AUX Fan 100 101 102 103 L1 L2 L1 L2
- 9) Mains ground
- 10) Motor U V W 96 97 98 T1 T2 T3



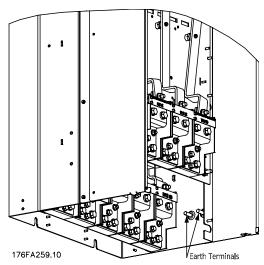


Illustration 4. 9: Position of earth terminals IP00, frame sizes E

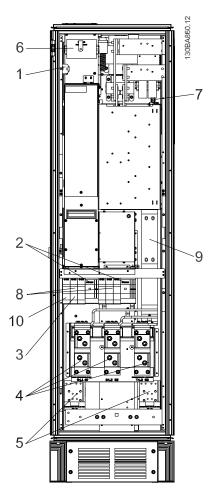


Illustration 4. 10: Rectifier Cabinet, frame size F1, F2, F3 and F4

1)	24 V DC, 5 A
	T1 Output Taps
	Temp Switch
	106 104 105

- 2) Manual Motor Starters
- 30 A Fuse Protected Power Ter- 8) minals
- 4) Line

R S T L1 L2 L3

- 5) Loadsharing -DC +DC 88 89
- 6) Control Transformer Fuses (2 or 4 pieces). See fuse tables for part numbers
- 7) SMPS Fuse. See fuse tables for part numbers
- 8) Manual Motor Controller fuses (3 or 6 pieces). See fuse tables for part numbers
- 9) Line Fuses, F1 and F2 frame (3 pieces). See fuse tables for part numbers
- 10) 30 Amp Fuse Protected Power fuses

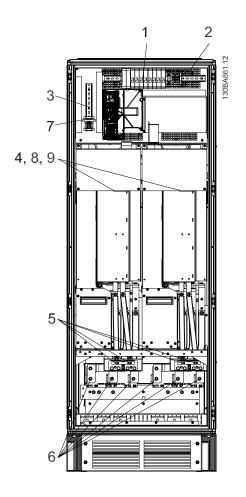


Illustration 4. 11: Inverter Cabinet, frame size F1 and F3

- 1) External Temperature Monitoring
- 2) AUX Relay
 - 01 02 03
 - 04 05 06
- 3) NAMUR
- 4) AUX Fan
 - 100 101 10 103

2

L1 L2 L1 L2

- 5) Brake
 - -R +R
 - 81 82

6) Motor

U V W 96 97 98

T1 T2 T3

- 7) NAMUR Fuse. See fuse tables for part numbers
- 8) Fan Fuses. See fuse tables for part numbers
- 9) SMPS Fuses. See fuse tables for part numbers

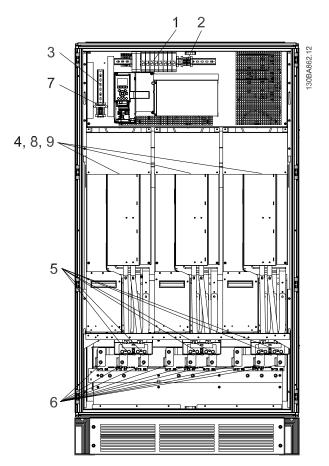


Illustration 4. 12: Inverter Cabinet, frame size F2 and F4

11	Evtornal	Temperature	Monitoring

2) AUX Relay

01 02 03 04 05 06

3) NAMUR

4) AUX Fan

100 101 10 103

2

L1 L2 L1 L2

5) Brake

-R +R

81 82

6) Motor

U V W

96 97 98

T1 T2 T3

- 7) NAMUR Fuse. See fuse tables for part numbers
- 8) Fan Fuses. See fuse tables for part numbers
- 9) SMPS Fuses. See fuse tables for part numbers

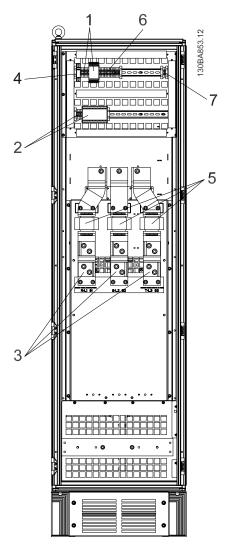


Illustration 4. 13: Options Cabinet, frame size F3 and F4

- 1) Pilz Relay Terminal
- 2) RCD or IRM Terminal
- 3) Mains

R S T

91 92 93

L1 L2 L3

- 4) Safety Relay Coil Fuse with PILS Relay See fuse tables for part numbers
- 5) Line Fuses, F3 and F4 (3 pieces) See fuse tables for part numbers
- 6) Contactor Relay Coil (230 VAC). N/C and N/O Aux Contacts
- 7) Circuit Breaker Shunt Trip Control Terminals (230 VAC or 230 VDC)

Earthing

The following basic issues need to be considered when installing a frequency converter, so as to obtain electromagnetic compatibility (EMC).

- Safety earthing: Please note that the frequency converter has a high leakage current and must be earthed
 appropriately for safety reasons. Apply local safety regulations.
- High-frequency earthing: Keep the earth wire connections as short as possible.

Connect the different earth systems at the lowest possible conductor impedance. The lowest possible conductor impedance is obtained by keeping the conductor as short as possible and by using the greatest possible surface area.

The metal cabinets of the different devices are mounted on the cabinet rear plate using the lowest possible HF impedance. This avoids having different HF voltages for the individual devices and avoids the risk of radio interference currents running in connection cables that may be used between the devices. The radio interference will have been reduced.

In order to obtain a low HF impedance, use the fastening bolts of the devices as HF connection to the rear plate. It is necessary to remove insulating paint or similar from the fastening points.

Extra Protection (RCD)

ELCB relays, multiple protective earthing or earthing can be used as extra protection, provided that local safety regulations are complied with.

In the case of an earth fault, a DC component may develop in the fault current.

If ELCB relays are used, local regulations must be observed. Relays must be suitable for protection of 3-phase equipment with a bridge rectifier and for a brief discharge on power-up.

See also the section Special Conditions in the Design Guide.

RFI Switch

Mains supply isolated from earth


If the frequency converter is supplied from an isolated mains source (IT mains, floating delta and grounded delta) or TT/TN-S mains with grounded leg, the RFI switch is recommended to be turned off (OFF) ¹⁾ via par. 14-50 RFI Filter. For further reference, see IEC 364-3. In case optimum EMC performance is needed, parallel motors are connected or the motor cable length is above 25 m, it is recommended to set par.14-50 RFI Filter to [ON].

1) Not available for 525-600/690 V frequency converters in frame sizes D, E and F. In OFF, the internal RFI capacities (filter capacitors) between the chassis and the intermediate circuit are cut off to avoid damage to the intermediate circuit and to reduce the earth capacity currents (according to IEC 61800-3). Please also refer to the application note *VLT on IT mains, MN.90.CX.02*. It is important to use isolation monitors that are capable for use together with power electronics (IEC 61557-8).

Electrical Installation

Torque

When tightening all electrical connections it is very important to tighten with the correct torque. Too low or too high torque results in a bad electrical connection. Use a torque wrench to ensure correct torque

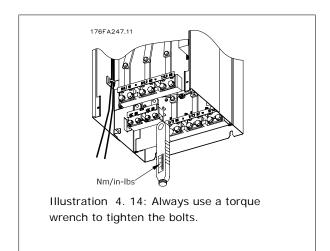

Frame size	Terminal	Torque	Bolt size
D1, D2, D3 and D4	Mains Motor	19 Nm (168 in-lbs)	M10
	Load sharing Brake	9.5 Nm (84 in-lbs)	M8
E1 and E2	Mains Motor Load sharing	19 NM (168 in-lbs)	M10
F1, F2, F3 and F4	Brake Mains Motor	9.5 Nm (84 in-lbs) 19 Nm (168 in-lbs)	M8 M10
	Load sharing Brake Regen	19 Nm (168 in-lbs) 9.5 Nm (84 in-lbs) 19 Nm (168 in-lbs)	M10 M8 M10

Table 4. 1: Torque for terminals

Shielded Cables

It is important that shielded and armoured cables are connected in a proper way to ensure high EMC immunity and low emissions.


Connection can be made using either cable glands or clamps:

- EMC cable glands: Generally available cable glands can be used to ensure an optimum EMC connection.
- EMC cable clamp: Clamps allowing easy connection are supplied with the frequency converter.

Motor Cable

The motor must be connected to terminals U/T1/96, V/T2/97, W/T3/98. Earth to terminal 99. All types of three-phase asynchronous standard motors can be used with a frequency converter unit. The factory setting is for clockwise rotation with the frequency converter output connected as follows:

	Terminal No.	Function
1	96, 97, 98, 99	Mains U/T1, V/T2, W/T3
		Earth

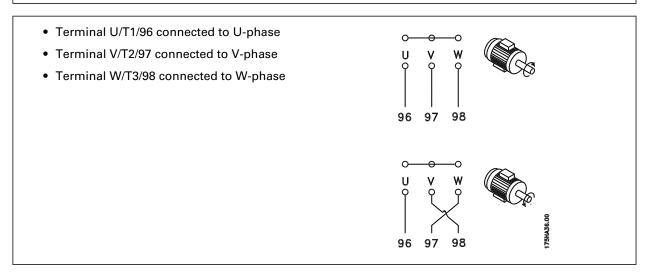

The direction of rotation can be changed by switching two phases in the motor cable or by changing the setting of par.4-10 <u>Motor Speed Direction</u>.

Motor rotation check can be performed using par.1-28 <u>Motor Rotation Check</u> and following the steps shown in the display.

F frame Requirements

F1/F3 requirements: Motor phase cable quantities must be multiples of 2, resulting in 2, 4, 6, or 8 (1 cable is not allowed) to obtain equal amount of wires attached to both inverter module terminals. The cables are required to be equal length within 10% between the inverter module terminals and the first common point of a phase. The recommended common point is the motor terminals.

F2/F4 requirements: Motor phase cable quantities must be multiples of 3, resulting in 3, 6, 9, or 12 (1 or 2 cables are not allowed) to obtain equal amount of wires attached to each inverter module terminal. The wires are required to be equal length within 10% between the inverter module terminals and the first common point of a phase. The recommended common point is the motor terminals.

Output junction box requirements: The length, minimum 2.5 meters, and quantity of cables must be equal from each inverter module to the common terminal in the junction box.

Electrical Installation

Brake Cable Drives with Factory Installed Brake Chopper Option

(Only standard with letter B in position 18 of typecode).

The connection cable to the brake resistor must be screened and the max. length from frequency converter to the DC bar is limited to 25 metres (82 feet).

Terminal No.	Function	
81, 82	Brake resistor terminals	

The connection cable to the brake resistor must be screened. Connect the screen by means of cable clamps to the conductive back plate at the frequency converter and to the metal cabinet of the brake resistor. Size the brake cable cross-section to match the brake torque. See also *Brake Instructions, MI.90.Fx.yy* and *MI. 50.Sx.yy* for further information regarding safe installation.

⚠WARNING

Please note that voltages up to 1099 VDC, depending on the supply voltage, may occur on the terminals.

Touching live parts could result in death or serious injury.

F Frame Requirements

The brake resistor(s) must be connected to the brake terminals in each inverter module.

Brake Resistor Temperature Switch

Frame size D-E-F

Torque: 0.5-0.6 Nm (5 in-lbs)

Screw size: M3

This input can be used to monitor the temperature of an externally connected brake resistor. If the input between 104 and 106 is established, the frequency converter will trip on warning / alarm 27, "Brake IGBT". If the connection is closed between 104 and 105, the frequency converter will trip on warning / alarm 27, "Brake IGBT". A KLIXON switch must be installed that is `normally closed'. If this function is not used, 106 and 104 must be short-circuited together.


Normally closed: 104-106 (factory installed jumper)

Normally open: 104-105

Terminal No.	Eunation
Terrificativo.	Function
106, 104, 105	Brake resistor temperature switch.

Note

If the temperature of the brake resistor gets too high and the thermal switch drops out, the frequency converter will stop braking. The motor will start coasting.

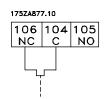

Load Sharing

Terminal No.	Function
88, 89	Loadsharing

The connection cable must be screened and the max. length from the frequency converter to the DC bar is limited to 25 metres (82 feet).

Load sharing enables linking of the DC intermediate circuits of several frequency converters.

≜WARNING

Please note that voltages up to 1099 VDC may occur on the terminals.

Load Sharing calls for extra equipment and safety considerations. For further information, see load sharing Instructions MI.50.NX.YY.

Touching live parts could result in death or serious injury.

≜WARNING

Please note that mains disconnect may not isolate the frequency converter due to DC link connection

Touching live parts could result in death or serious injury.

Shielding against Electrical Noise

Before mounting the mains power cable, mount the EMC metal cover to ensure best EMC performance.

NOTE: The EMC metal cover is only included in units with an RFI filter.



Illustration 4. 15: Mounting of EMC shield.

Electrical Installation

Mains Connection

Mains must be connected to terminals 91, 92 and 93. Earth is connected to the terminal to the right of terminal 93.

Terminal No.	Function
91, 92, 93	Mains R/L1, S/L2, T/L3
94	Earth

NOTICE

Check the name plate to ensure that the mains voltage of the frequency converter matches the power supply of your plant.

Failure to follow recommendations could result in equipment or property damage.

Ensure that the power supply can supply the necessary current to the frequency converter.

If the unit is without built-in fuses, ensure that the appropriate fuses have the correct current rating.

External Fan Supply

Frame size D-E-F

In case the frequency converter is supplied by DC or if the fan must run independently of the power supply, an external power supply can be applied. The connection is made on the power card.

Terminal No.	Function
100, 101	Auxiliary supply S, T
102, 103	Internal supply S, T

The connector located on the power card provides the connection of line voltage for the cooling fans. The fans are connected from factory to be supplied form a common AC line (jumpers between 100-102 and 101-103). If external supply is needed, the jumpers are removed and the supply is connected to terminals 100 and 101. A 5 Amp fuse should be used for protection. In UL applications this should be LittleFuse KLK-5 or equivalent.



Fuses

Branch circuit protection:

In order to protect the installation against electrical and fire hazard, all branch circuits in an installation, switch gear, machines etc., must be short-circuited and over-current protected according to national/international regulations.

Short-circuit protection:

The frequency converter must be protected against short-circuit to avoid electrical or fire hazard. Trane recommends using the fuses mentioned below to protect service personnel and equipment in case of an internal failure in the drive. The frequency converter provides full short-circuit protection in case of a short-circuit on the motor output.

Over-current protection

Provide overload protection to avoid fire hazard due to overheating of the cables in the installation. The frequency converter is equipped with an internal over-current protection that can be used for upstream overload protection (UL-applications excluded). See par.4-18 <u>Current Limit</u>. Moreover, fuses or circuit breakers can be used to provide the over-current protection in the installation. Over-current protection must always be carried out according to national regulations.

Non UL compliance

If UL/cUL is not to be complied with, we recommend using the following fuses, which will ensure compliance with EN50178:

P110 - P250 380 - 480 V type gG P315 - P450 380 - 480 V type gR
--

UL Compliance

380-480 V, frame sizes D, E and F

The fuses below are suitable for use on a circuit capable of delivering 100,000 Arms (symmetrical), 240V, or 480V, or 500V, or 600V depending on the drive voltage rating. With the proper fusing the drive Short Circuit Current Rating (SCCR) is 100,000 Arms.

Size/ Type	Buss- mann E1958 JFHR2**	Buss- mann E4273 T/ JDDZ**	SIBA E180276 JFHR2	LittelFuse E71611 JFHR2**	Ferraz- Shawmut E60314 JFHR2**	Buss- mann E4274 H/ JDDZ**	Bussmann E125085 JFHR2*	Internal Option Bussmann
P110	FWH-	JJS-	2061032.315	L50S-300	A50-P300	NOS-	170M3017	170M3018
	300	300				300		
P132	FWH-	JJS-	2061032.35	L50S-350	A50-P350	NOS-	170M3018	170M3018
	350	350				350		
P160	FWH-	JJS-	2061032.40	L50S-400	A50-P400	NOS-	170M4012	170M4016
	400	400				400		
P200	FWH-	JJS-	2061032.50	L50S-500	A50-P500	NOS-	170M4014	170M4016
	500	500				500		
P250	FWH-	JJS-	2062032.63	L50S-600	A50-P600	NOS-	170M4016	170M4016
	600	600				600		

Table 4. 2: Frame size D, Line fuses, 380-480 V

Electrical Installation

Size/Type	Bussmann PN*	Rating	Ferraz	Siba
P315	170M4017	700 A, 700 V	6.9URD31D08A0700	20 610 32.700
P355	170M6013	900 A, 700 V	6.9URD33D08A0900	20 630 32.900
P400	170M6013	900 A, 700 V	6.9URD33D08A0900	20 630 32.900
P450	170M6013	900 A, 700 V	6.9URD33D08A0900	20 630 32.900

Table 4. 3: Frame size E, Line fuses, 380-480 V

Size/Type	Bussmann PN*	Rating	Siba	Internal Bussmann Option
P500	170M7081	1600 A, 700 V	20 695 32.1600	170M7082
P560	170M7081	1600 A, 700 V	20 695 32.1600	170M7082
P630	170M7082	2000 A, 700 V	20 695 32.2000	170M7082
P710	170M7082	2000 A, 700 V	20 695 32.2000	170M7082
P800	170M7083	2500 A, 700 V	20 695 32.2500	170M7083
P1M0	170M7083	2500 A, 700 V	20 695 32.2500	170M7083

Table 4. 4: Frame size F, Line fuses, 380-480 V

Size/Type	Bussmann PN*	Rating	Siba
P500	170M8611	1100 A, 1000 V	20 781 32.1000
P560	170M8611	1100 A, 1000 V	20 781 32.1000
P630	170M6467	1400 A, 700 V	20 681 32.1400
P710	170M6467	1400 A, 700 V	20 681 32.1400
P800	170M8611	1100 A, 1000 V	20 781 32.1000
P1M0	170M6467	1400 A, 700 V	20 681 32.1400

Table 4. 5: Frame size F, Inverter module DC Link Fuses, 380-480 V

525-690 V, frame sizes D, E and F

Size/	Bussmann		SIBA	Ferraz-Shawmut	Internal
	E125085	Amps	E180276	E76491	Option
Туре	JFHR2		JFHR2	JFHR2	Bussmann
P45K	170M3013	125	2061032.125	6.6URD30D08A0125	170M3015
P55K	170M3014	160	2061032.16	6.6URD30D08A0160	170M3015
P75K	170M3015	200	2061032.2	6.6URD30D08A0200	170M3015
P90K	170M3015	200	2061032.2	6.6URD30D08A0200	170M3015
P110	170M3016	250	2061032.25	6.6URD30D08A0250	170M3018
P132	170M3017	315	2061032.315	6.6URD30D08A0315	170M3018
P160	170M3018	350	2061032.35	6.6URD30D08A0350	170M3018
P200	170M4011	350	2061032.35	6.6URD30D08A0350	170M5011
P250	170M4012	400	2061032.4	6.6URD30D08A0400	170M5011
P315	170M4014	500	2061032.5	6.6URD30D08A0500	170M5011
P400	170M5011	550	2062032.55	6.6URD32D08A550	170M5011

Table 4. 6: Frame size D, 525-690 V

^{*170}M fuses from Bussmann shown use the -/80 visual indicator, -TN/80 Type T, -/110 or TN/110 Type T indicator fuses of the same size and amperage may be substituted for external use

^{**}Any minimum 500 V UL listed fuse with associated current rating may be used to meet UL requirements.



Size/Type	Bussmann PN*	Rating	Ferraz	Siba
P450	170M4017	700 A, 700 V	6.9URD31D08A07 00	20 610 32.700
P500	170M4017	700 A, 700 V	6.9URD31D08A07 00	20 610 32.700
P560	170M6013	900 A, 700 V	6.9URD33D08A09 00	20 630 32.900
P630	170M6013	900 A, 700 V	6.9URD33D08A09 00	20 630 32.900

Table 4. 7: Frame size E, 525-690 V

Size/Type	Bussmann PN*	Rating	Siba	Internal Bussmann Option
P710	170M7081	1600 A, 700 V	20 695 32.1600	170M7082
P800	170M7081	1600 A, 700 V	20 695 32.1600	170M7082
P900	170M7081	1600 A, 700 V	20 695 32.1600	170M7082
P1M0	170M7081	1600 A, 700 V	20 695 32.1600	170M7082
P1M2	170M7082	2000 A, 700 V	20 695 32.2000	170M7082
P1M4	170M7083	2500 A, 700 V	20 695 32.2500	170M7083

Table 4. 8: Frame size F, Line fuses, 525-690 V

Size/Type	Bussmann PN*	Rating	Siba
P710	170M8611	1100 A, 1000 V	20 781 32. 1000
P800	170M8611	1100 A, 1000 V	20 781 32. 1000
P900	170M8611	1100 A, 1000 V	20 781 32. 1000
P1M0	170M8611	1100 A, 1000 V	20 781 32. 1000
P1M2	170M8611	1100 A, 1000 V	20 781 32. 1000
P1M4	170M8611	1100 A, 1000 V	20 781 32.1000

Table 4. 9: Frame size F, Inverter module DC Link Fuses, 525-690 V

*170M fuses from Bussmann shown use the -/80 visual indicator, -TN/80 Type T, -/110 or TN/110 Type T be substituted for external use.

Suitable for use on a circuit capable of delivering not more than 100 000 rms symmetrical amperes, 500/600/690 Volts maximum when protected by the above fuses.

Supplementary fuses

Frame size	Bussmann PN*	Rating
D, E and F KTK-4		4 A, 600 V

Table 4. 10: SMPS Fuse

Size/Type	Bussmann PN*	LittelFuse	Rating
P110-P315, 380-480 V	KTK-4		4 A, 600 V
P45K-P500, 525-690 V	KTK-4		4 A, 600 V
P355-P1M0, 380-480 V		KLK-15	15A, 600 V
P560-P1M4, 525-690 V		KLK-15	15A, 600 V

Table 4. 11: Fan Fuses



Size/Type		Bussmann PN*	Rating	Alternative Fuses
P500-P1M0, 380-480 V	2.5-4.0 A	LPJ-6 SP or SPI	6 A, 600 V	Any listed Class J Du- al Element, Time De- lay, 6A
P710-P1M4, 525-690 V		LPJ-10 SP or SPI	10 A, 600 V	Any listed Class J Du- al Element, Time De- lay, 10 A
P500-P1M0, 380-480 V	4.0-6.3 A	LPJ-10 SP or SPI	10 A, 600 V	Any listed Class J Du- al Element, Time De- lay, 10 A
P710-P1M4, 525-690 V		LPJ-15 SP or SPI	15 A, 600 V	Any listed Class J Du- al Element, Time De- lay, 15 A
P500-P1M0, 380-480 V	6.3 - 10 A	LPJ-15 SP or SPI	15 A, 600 V	Any listed Class J Du- al Element, Time De- lay, 15 A
P710-P1M4, 525-690 V		LPJ-20 SP or SPI	20 A, 600 V	Any listed Class J Du- al Element, Time De- lay, 20A
P500-P1M0, 380-480 V	10 - 16 A	LPJ-25 SP or SPI	25 A, 600 V	Any listed Class J Du- al Element, Time De- lay, 25 A
P710-P1M4, 525-690 V		LPJ-20 SP or SPI	20 A, 600 V	Any listed Class J Du- al Element, Time De- lay, 20 A

Table 4. 12: Manual Motor Controller Fuses

Frame size	Bussmann PN*	Rating	Alternative Fuses
F	LPJ-30 SP or SPI	30 A, 600 V	Any listed Class J Dual El-
			ement, Time Delay, 30 A

Table 4. 13: 30 A Fuse Protected Terminal Fuse

Frame size	Bussmann PN*	Rating	Alternative Fuses
F	LPJ-6 SP or SPI	6 A, 600 V	Any listed Class J Dual El-
			ement, Time Delay, 6 A

Table 4. 14: Control Transformer Fuse

Frame size	Bussmann PN*	Rating
F	GMC-800MA	800 mA, 250 V

Table 4. 15: NAMUR Fuse

Frame size	Bussmann PN*	Rating	Alternative Fuses
F	LP-CC-6	6 A, 600 V	Any listed Class CC, 6 A

Table 4. 16: Safety Relay Coil Fuse with PILS Relay

Mains Disconnectors - Frame Size D, E and F

Frame size	Power & Voltage	Type
	P110-P132 380-480V & P110-P160	
D1/D3	525-690V	ABB OETL-NF200A or OT200U12-91
	P160-P250 380-480V & P200-P400	
D2/D4	525-690V	ABB OETL-NF400A or OT400U12-91
E1/E2	P315 380-480V & P450-P630 525-690V	ABB OETL-NF600A
E1/E2	P355-P450 380-480V	ABB OETL-NF800A
F3	P500 380-480V & P710-P800 525-690V	Merlin Gerin NPJF36000S12AAYP
F3	P560-P710 380-480V & P900 525-690V	Merlin Gerin NRK36000S20AAYP
	P800-P1M0 380-480V & P1M0-P1M4	
F4	525-690V	Merlin Gerin NRK36000S20AAYP

F Frame circuit breakers

Frame size	Power & Voltage	Туре
F3	P500 380-480V & P710-P800 525-690V	Merlin Gerin NPJF36120U31AABSCYP
F3	P560-P710 380-480V & P900 525-690V	Merlin Gerin NRJF36200U31AABSCYP
F4	P800 380-480V & P1M0-P1M4 525-690V	Merlin Gerin NRJF36200U31AABSCYP
F4	P1M0 380-480V	Merlin Gerin NRJF36250U31AABSCYP

F Frame Mains Contactors

P500-P560 380-480V & P710-P900 F3 525-690V Eaton XTCE650N22A F3 P 630-P710 380-480V Eaton XTCEC14P22B P800-P1M0 380-480V & P1M0-P1M4	Frame size	Power & Voltage	Type
F3 P 630-P710 380-480V Eaton XTCEC14P22B P800-P1M0 380-480V & P1M0-P1M4		P500-P560 380-480V & P710-P900	
P800-P1M0 380-480V & P1M0-P1M4	F3	525-690V	Eaton XTCE650N22A
	F3	P 630-P710 380-480V	Eaton XTCEC14P22B
F4 F2F C20V F-+- ** VTCFC14P22P		P800-P1M0 380-480V & P1M0-P1M4	
F4 525-690V Eaton XTCEC14P22B	F4	525-690V	Eaton XTCEC14P22B

Electrical Installation

Motor Insulation

For motor cable lengths ≤ the maximum cable length listed in the General Specifications tables the following motor insulation ratings are recommended because the peak voltage can be up to twice the DC link voltage, 2.8 times the mains voltage, due to transmission line effects in the motor cable. If a motor has lower insulation rating it recommended to use a du/dt or sine wave filter.

Nominal Mains Volt- age	Motor Insulation
U _N ≤ 420 V	Standard U _{LL} = 1300 V
420 V < U _N ≤ 500 V	Reinforced U _{LL} = 1600 V
$500 \text{ V} < U_N \le 600 \text{ V}$	Reinforced U _{LL} = 1800 V
600 V < U _N ≤ 690 V	Reinforced U _{LL} = 2000 V

Motor Bearing Currents



Electrocution and Fire Hazards with Improperly Installed and Grounded Field Wiring!

Improperly installed and grounded field wiring poses FIRE & ELECTROCUTION hazards. To avoid these hazards, you MUST follow requirements for field wiring installation and grounding as described in the National Electrical Codes (NEC) and your local/state electrical codes. All field wiring MUST be performed by qualified personnel. Failure to follow these requirements could result in death or serious injury.

It is generally recommended that motors of a rating 110kW or higher operating via Variable Frequency Drives should have NDE (Non-Drive End) insulated bearings installed to eliminate circulating bearing currents due to the physical size of the motor. To minimize DE (Drive End) bearing and shaft currents proper grounding of the drive, motor, driven machine, and motor to the driven machine is required. Although failure due to bearing currents is low and very dependent on many different items, for security of operation the following are mitigation strategies which can be implemented.

Standard Mitigation Strategies:

- 1. Use an insulated bearing
- Apply rigorous installation procedures

Ensure the motor and load motor are aligned

Strictly follow the EMC Installation guideline

Reinforce the PE so the high frequency impedance is lower in the PE than the input power leads

Provide a good high frequency connection between the motor and the frequency converter for instance by screened cable which has a 360° connection in the motor and the frequency converter

Make sure that the impedance from frequency converter to building ground is lower that the grounding impedance of the machine. This can be difficult for pumps- Make a direct earth connection between the motor and load motor.

- 3. Apply conductive lubrication
- 4. Try to ensure the line voltage is balanced to ground. This can be difficult for IT, TT, TN-CS or Grounded leg systems
- Use an insulated bearing as recommended by the motor manufacturer (note: Motors from reputable manufacturers will typically have these fitted as standard in motors of this size)

If found to be necessary and after consultation with Danfoss:


- 6. Lower the IGBT switching frequency
- 7. Modify the inverter waveform, 60° AVM vs. SFAVM
- 8. Install a shaft grounding system or use an isolating coupling between motor and load
- 9. Use minimum speed settings if possible
- 10. Use a dU/dt or sinus filter


Control Cable Routing

Tie down all control wires to the designated control cable routing as shown in the picture. Remember to connect the shields in a proper way to ensure optimum electrical immunity.

Fieldbus connection

Connections are made to the relevant options on the control card. For details see the relevant fieldbus instruction. The cable must be placed in the provided path inside the frequency converter and tied down together with other control wires (see pictures).

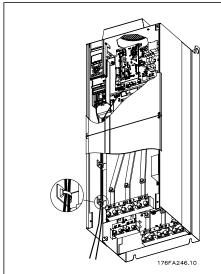

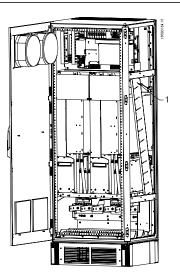

Control card wiring path for the D3. Control card wir- Control card wiring path for the F1/F3. Control card ing for the D1, D2, D4, E1 and E2 use the same path. wiring for the F2/F4 use the same path.

In the Chassis (IP00) and NEMA 1 units it is also possible to connect the fieldbus from the top of the unit as shown in the following pictures. On the NEMA 1 unit a cover plate must be removed.

Kit number for fieldbus top connection: 176F1742



Illustration 4. 16: Top connection for fieldbus.



Electrical Installation





Installation of 24 Volt external DC Supply

Torque: 0.5 - 0.6 Nm (5 in-lbs)

Screw size: M3

No.	Function
35 (-), 36 (+)	24 V external DC supply

24 VDC external supply can be used as low-voltage supply to the control card and any option cards installed. This enables full operation of the keypad (including parameter setting) without connection to mains. Please note that a warning of low voltage will be given when 24 VDC has been connected; however, there will be no tripping.

MARNING

Use 24 VDC supply of type PELV to ensure correct galvanic isolation (type PELV) on the control terminals of the frequency converter.

Failure to follow recommendations could result in death or serious injury.

Access to Control Terminals

All terminals to the control cables are located beneath the keypad. They are accessed by opening the door of the IP21/54 version or removing the covers of the IP00 version.




Electrical Installation, Control Terminals


To connect the cable to the terminal:

- 1. Strip insulation by about 9-10 mm
- 2. Insert a screwdriver¹⁾ in the square hole.
- 3. Insert the cable in the adjacent circular hole.
- 4. Remove the screwdriver. The cable is now mounted in the terminal.

To remove the cable from the terminal:

- 1. Insert a screw driver¹⁾ in the square hole.
- 2. Pull out the cable.
- 1) Max. 0.4 x 2.5 mm

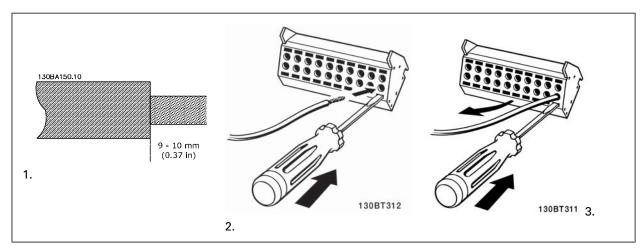

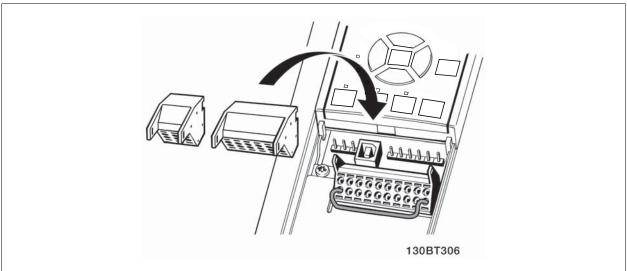


Connection Examples

Start/Stop

Terminal 18 = par.5-10 <u>Terminal 18 Digital Input</u> [8] Start

Terminal 27 = par.5-12 <u>Terminal 27 Digital Input</u> [0] *No operation* (Default *coast inverse*)


Terminal 37 = Safe stop

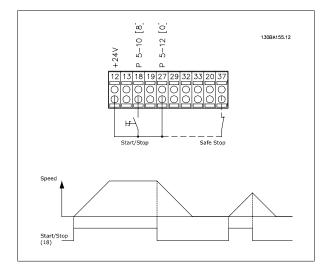

Pulse Start/Stop

Terminal 18 = par.5-10 <u>Terminal 18 Digital Input</u> [9] *Latched start*Terminal 27= par.5-12 <u>Terminal 27 Digital Input</u> [6] *Stop inverse*

Terminal 37 = Safe stop

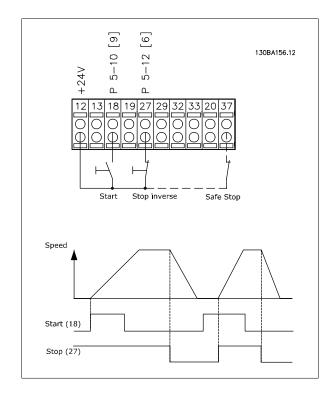

Electrical Installation

Speed Up/Down

Terminals 29/32 = Speed up/down:


Terminal 18 = par.5-10 <u>Terminal 18 Digital Input</u> Start [9] (default)

Terminal 27 = par.5-12 <u>Terminal 27 Digital Input</u> Freeze reference [19]

Terminal 29 = par.5-13 <u>Terminal 29 Digital Input</u> Speed up [21]

Terminal 32 = par.5-14 <u>Terminal 32 Digital Input</u> Speed down [22]

NOTE: Terminal 29 only in FC x02 (x=series type).

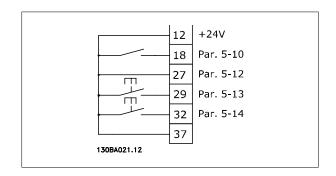

Potentiometer Reference

Voltage reference via a potentiometer:

Reference Source 1 = [1] *Analog input 53* (default)


Terminal 53, Low Voltage = 0 Volt

Terminal 53, High Voltage = 10 Volt

Terminal 53, Low Ref./Feedback = 0 RPM


Terminal 53, High Ref./Feedback = 1500 RPM

Switch S201 = OFF (U)

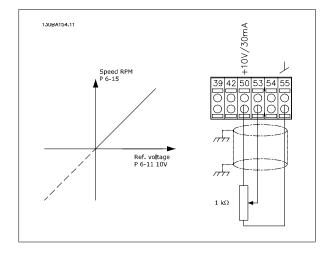

Electrical Installation - additional

Electrical Installation, Control Cables

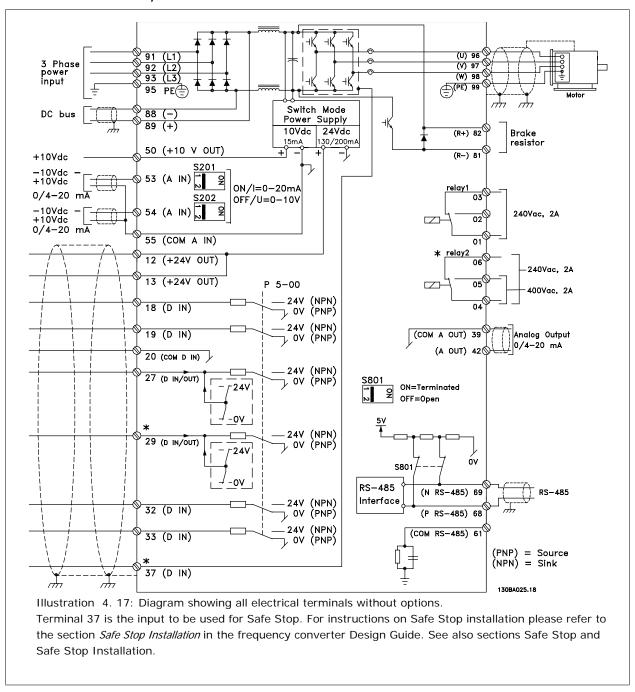

Very long control cables and analogue signals may in rare cases and depending on installation result in 50/60 Hz earth loops due to noise from mains supply cables.


If this occurs, it may be necessary to break the screen or insert a 100 nF capacitor between screen and chassis.

The digital and analog inputs and outputs must be connected separately to the frequency converter common inputs (terminal 20, 55, 39) to avoid earth currents from both groups to affect other groups. For example, switching on the digital input may disturb the analog input signal.




Input polarity of control terminals

+24 VDC	+ N	PNP (Source) Digital input wiring																	
12	2	13	1	8	1	9	2	7	2	9	3	2	3	3	20)	3	7	130BT106.10
•)	•	•)	•)	•	•	•	•	•	•	•)	•		•		130
0)	•	•		•		•	•	•	•	(•	•		•		•		
							_									_		 	

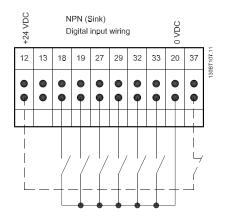

NOTE: Control cables must be screened/armoured.

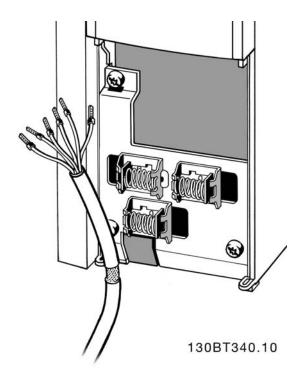

Connect the wires as described in the Operating Instruction for the frequency converter. Remember to connect the shields in a proper way to ensure optimum electrical immunity.

Switches S201, S202, and S801

Switches S201 (A53) and S202 (A54) are used to select a current (0-20 mA) or a voltage (-10 to 10 V) configuration of the analog input terminals 53 and 54 respectively.

Switch S801 (BUS TER.) can be used to enable termination on the RS-485 port (terminals 68 and 69).

See drawing Diagram showing all electrical terminals in section Electrical Installation.

Default setting:


S201 (A53) = OFF (voltage input)

S202 (A54) = OFF (voltage input)

S801 (Bus termination) = OFF

Note

When changing the function of S201, S202 or S801 be careful not to use force for the switch over. It is recommended to remove the keypad fixture (cradle) when operating the switches. The switches must not be operated with power on the frequency converter.

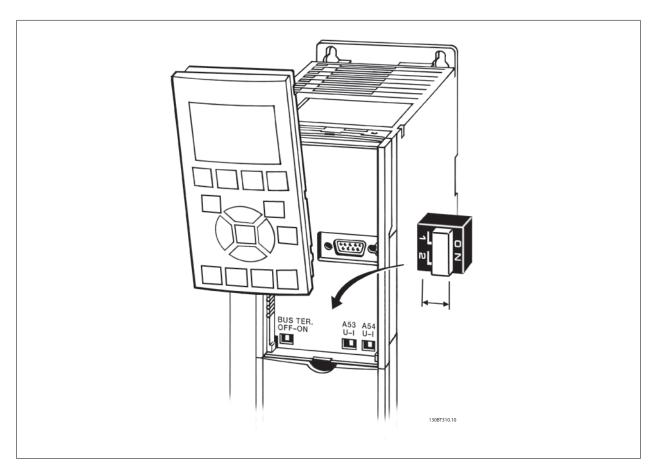




Final Set-up and Test

To test the set-up and ensure that the frequency converter is running, follow these steps.

Step 1. Locate the motor name plate

NOTE: The motor is either star- (Y) or delta- connected (). This information is located on the motor name plate data.

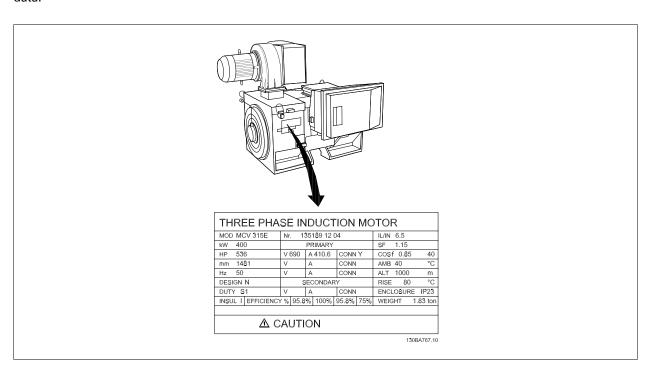

Step 2. Enter the motor name plate data in this parameter list.

To access this list first press the [QUICK MENU] key then select "Q2 Quick Setup".

1.	Par.1-20 Motor Power [kW]
	Par.1-21 Motor Power [HP]
2.	Par.1-22 Motor Voltage
3.	Par.1-23 Motor Frequency
4.	Par.1-24 Motor Current
5.	Par.1-25 Motor Nominal Speed
	<u> </u>

Step 3. Activate the Automatic Motor Adaptation (AMA)

Performing an AMA will ensure optimum performance. The AMA measures the values from the motor model equivalent diagram.

- 1. Connect terminal 37 to terminal 12 (if terminal 37 is available).
- 2. Connect terminal 27 to terminal 12 or set par.5-12 <u>Terminal 27 Digital Input</u> to 'No function' (par.5-12 <u>Terminal 27 Digital Input</u> [0])
- 3. Activate the AMA par.1-29 Automatic Motor Adaptation (AMA).
- 4. Choose between complete or reduced AMA. If a Sine-wave filter is mounted, run only the reduced AMA, or remove the Sine-wave filter during the AMA procedure.
- 5. Press the [OK] key. The display shows "Press [Hand on] to start".
- 6. Press the [Hand on] key. A progress bar indicates if the AMA is in progress.

Stop the AMA during operation

1. Press the [OFF] key - the frequency converter enters into alarm mode and the display shows that the AMA was terminated by the user.

Successful AMA

- 1. The display shows "Press [OK] to finish AMA".
- 2. Press the [OK] key to exit the AMA state.

Unsuccessful AMA

- 1. The frequency converter enters into alarm mode. A description of the alarm can be found in the *Warnings* and *Alarms* chapter.
- 2. "Report Value" in the [Alarm Log] shows the last measuring sequence carried out by the AMA, before the frequency converter entered alarm mode. This number along with the description of the alarm will assist you in troubleshooting. If you contact Trane for service, make sure to mention number and alarm description.

NOTE: Unsuccessful AMA is often caused by incorrectly registered motor name plate data or a too big difference between the motor power size and the frequency converter power size.

Step 4. Set speed limit and ramp time

Par.3-02 <u>Minimum Reference</u> Par.3-03 <u>Maximum Reference</u>

Table 4. 17: Set up the desired limits for speed and ramp time.

Par.4-11 Motor Speed Low Limit [RPM] or par.4-12 Motor Speed Low Limit [Hz]

Par.4-13 Motor Speed High Limit [RPM] or par.4-14 Motor Speed High Limit [Hz]

Par.3-41 Ramp 1 Ramp up Time

Par.3-42 Ramp 1 Ramp Down Time



Additional Connections

Mechanical Brake Control

In hoisting/lowering applications, it is necessary to be able to control an electro-mechanical brake:

- Control the brake using any relay output or digital output (terminal 27 or 29).
- Keep the output closed (voltage-free) as long as the frequency converter is unable to 'support' the motor, for example due to the load being too heavy.
- Select Mechanical brake control [32] in par. 5-4* for applications with an electro-mechanical brake.
- The brake is released when the motor current exceeds the preset value in par.2-20 Release Brake Current.
- The brake is engaged when the output frequency is less than the frequency set in par.2-21 <u>Activate Brake Speed [RPM]</u> or par.2-22 <u>Activate Brake Speed [Hz]</u>, and only if the frequency converter carries out a stop command.

If the frequency converter is in alarm mode or in an over-voltage situation, the mechanical brake immediately cuts in.

Parallel Connection of Motors

The frequency converter can control several parallel-connected motors. The total current consumption of the motors must not exceed the rated output current I_{M.N} for the frequency converter.

Note

Installations with cables connected in a common joint as in the illustration below, is only recommended for short cable lengths.


Note

When motors are connected in parallel, par.1-29 Automatic Motor Adaptation (AMA) cannot be used.

Note

The electronic thermal relay (ETR) of the frequency converter cannot be used as motor protection for the individual motor in systems with parallel-connected motors. Provide further motor protection by e.g. thermistors in each motor or individual thermal relays (circuit breakers are not suitable as protection).



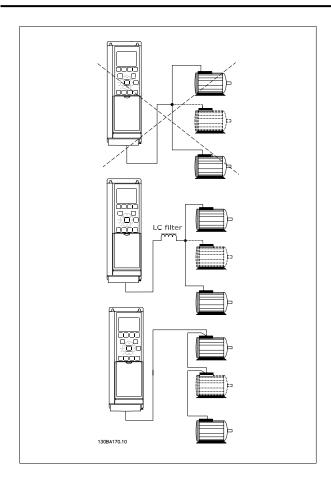

Problems may arise at start and at low RPM values if motor sizes are widely different because small motors' relatively high ohmic resistance in the stator calls for a higher voltage at start and at low RPM values.



Electrical Installation

Motor Thermal Protection

The electronic thermal relay in the frequency converter has received UL-approval for single motor protection, when par.1-90 <u>Motor Thermal Protection</u> set for *ETR Trip* and par.1-24 <u>Motor Current</u> is set to the rated motor current (see motor name plate).

For thermal motor protection it is also possible to use the MCB 112 PTC Thermistor Card option. This card provides ATEX certificate to protect motors in explosion hazardous areas, Zone 1/21 and Zone 2/22. Please refer to the *Design Guide* for further information.



How to Operate the Frequency Converter

Two Ways of Operating

The frequency converter can be operated in 2 ways:

- 1. Graphical keypad, see 5.1.2
- 2. RS-485 serial communication or USB, both for PC connection, see 5.1.4

If the frequency converter is fitted with fieldbus option, please refer to relevant documentation.

How to Operate Graphical keypad

The keypad is divided into four functional groups:


- 1. Graphical display with Status lines.
- 2. Menu keys and indicator lights (LED's) selecting mode, changing parameters and switching between display functions.
- 3. Navigation keys and indicator lights (LEDs).
- 4. Operation keys and indicator lights (LEDs).

Graphical display:

The LCD-display is back-lit with a total of 6 alpha-numeric lines. All data is displayed on the keypad which can show up to five operating variables while in [Status] mode.

Display lines:

- Status line: Status messages displaying icons and graphics.
- b. Line 1-2: Operator data lines displaying data and variables defined or chosen by the user. By pressing the [Status] key, up to one extra line can be added.
- c. Status line: Status messages displaying text.

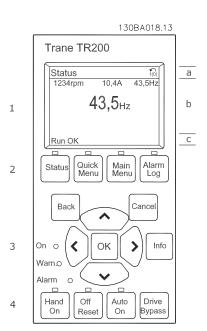

How to Operate the Frequency Converter

The display is divided into 3 sections:

Top section (a) shows the status when in status mode or up to 2 variables when not in status mode and in the case of Alarm/Warning.

The number of the Active Set-up (selected as the Active Set-up in par.0-10 <u>Active Set-up</u>) is shown. When programming in another Set-up than the Active Set-up, the number of the Set-up being programmed appears to the right in brackets.

The **Middle section** (b) shows up to 5 variables with related unit, regardless of status. In case of alarm/warning, the warning is shown instead of the variables.

The Bottom section (c) always shows the state of the frequency converter in Status mode.

It is possible to toggle between three status read-out displays by pressing the [Status] key. Operating variables with different formatting are shown in each status screen - see below.

Several values or measurements can be linked to each of the displayed operating variables. The values / measurements to be displayed can be defined via par.0-20 <u>Display Line 1.1 Small</u>, par.0-21 <u>Display Line 1.2 Small</u>, par.0-22 <u>Display Line 1.3 Small</u>, par.0-23 <u>Display Line 2 Large</u> and par.0-24 <u>Display Line 3 Large</u>, which can be accessed via [QUICK MENU], "Q3 Function Setups", "Q3-1 General Settings", "Q3-13 Display Settings".

Each value / measurement readout parameter selected in par.0-20 <u>Display Line 1.1 Small</u> to par.0-24 <u>Display Line 3 Large</u> has its own scale and number of digits after a possible decimal point. Larger numeric values are displayed with few digits after the decimal point.


Ex.: Current readout 5.25 A; 15.2 A 105 A.

Status display I:

This read-out state is standard after start-up or initialization.

Use [INFO] to obtain information about the value/ measurement linked to the displayed operating variables (1.1, 1.2, 1.3, 2, and 3).

See the operating variables shown in the display in this illustration. 1.1, 1.2 and 1.3 are shown in small size. 2 and 3 are shown in medium size.

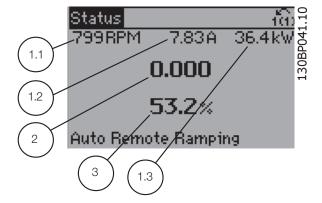


Status display II:

See the operating variables (1.1, 1.2, 1.3, and 2) shown in the display in this illustration.

In the example, Speed, Motor current, Motor power and Frequency are selected as variables in the first and second lines.


1.1, 1.2 and 1.3 are shown in small size. 2 is shown in large size.

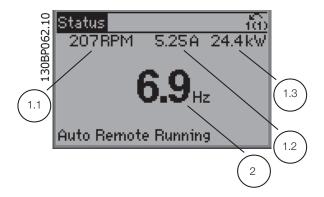




Status display III:

This state displays the event and action of the Smart Logic Control. For further information, see section *Smart Logic Control*.

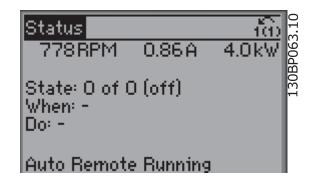

Display Contrast Adjustment

Press [status] and [▲] for darker display
Press [status] and [▼] for brighter display

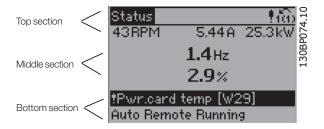

Indicator lights (LEDs):

If certain threshold values are exceeded, the alarm and/or warning LED lights up. A status and alarm text appear on the control panel.

The On LED is activated when the frequency converter receives power from mains voltage, a DC bus terminal, or an external 24 V supply. At the same time, the back light is on.

- Green LED/On: Control section is working.
- Yellow LED/Warn.: Indicates a warning.
- Flashing Red LED/Alarm: Indicates an alarm.



How to Operate the Frequency Converter

Keys

Menu keys

The menu keys are divided into functions. The keys below the display and indicator lamps are used for parameter set-up, including choice of display indication during normal operation.



[Status]

indicates the status of the frequency converter and/or the motor. 3 different readouts can be chosen by pressing the [Status] key:

5 line readouts, 4 line readouts or Smart Logic Control.

Use [Status] for selecting the mode of display or for changing back to Display mode from either the Quick Menu mode, the Main Menu mode or Alarm mode. Also use the [Status] key to toggle single or double read-out mode.

[Quick Menu]

allows quick set-up of the frequency converter. The most common TR200 functions can be programmed here.

The [Quick Menu] consists of:

- My Personal Menu
- Quick Set-up
- Function Set-up
- Changes Made
- Loggings

The Function set-up provides quick and easy access to all parameters required for the majority of TR200 applications including most VAV and CAV supply and return fans, cooling tower fans, Primary, Secondary and Condenser Water Pumps and other pump, fan and compressor applications. Amongst other features it also includes parameters for selecting which variables to display on the keypad, digital preset speeds, scaling of analog references, closed loop single zone and multi-zone applications and specific functions related to Fans, Pumps and Compressors.

The Quick Menu parameters can be accessed immediately unless a password has been created via par. 0-60 Main Menu Password, par.0-61 Access to Main Menu w/o Password, par.0-65 Personal Menu Password or par.0-66 Access to Personal Menu w/o Password.

It is possible to switch directly between Quick Menu mode and Main Menu mode.

[Main Menu]

is used for programming all parameters. The Main Menu parameters can be accessed immediately unless a password has been created via par.0-60 Main Menu Password, par.0-61 Access to Main Menu w/o Password, par.0-65 Personal Menu Password or par.0-66 Access to Personal Menu w/o Password. For the majority of TR200 applications it is not necessary to access the Main Menu parameters but instead the Quick Menu, Quick Set-up and Function Set-up provides the simplest and quickest access to the typical required parameters. It is possible to switch directly between Main Menu mode and Quick Menu mode.

Parameter shortcut can be carried out by pressing down the [Main Menu] key for 3 seconds. The parameter shortcut allows direct access to any parameter.

[Alarm Log]

displays an Alarm list of the five latest alarms (numbered A1-A5). To obtain additional details about an alarm, use the arrow keys to manoeuvre to the alarm number and press [OK]. Information is displayed about the condition of the frequency converter before it enters the alarm mode.

The Alarm log button on the keypad allows access to both Alarm log and Maintenance log.



[Back]

reverts to the previous step or layer in the navigation structure.


[Cancel]

last change or command will be cancelled as long as the display has not been changed.

[Info]

displays information about a command, parameter, or function in any display window. [Info] provides detailed information when needed.

Exit Info mode by pressing either [Info], [Back], or [Cancel].

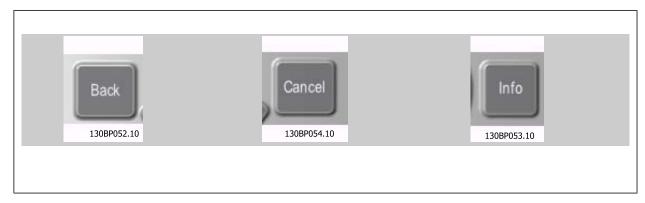


Navigation Keys

The four navigation arrows are used to navigate between the different choices available in [Quick Menu], [Main Menu] and [Alarm Log]. Use the keys to move the cursor.

[OK] is used for choosing a parameter marked by the cursor and for enabling the change of a parameter.

Operation Keys for local control are found at the bottom of the control panel.

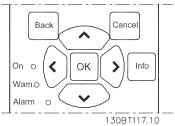



[Hand On]

enables control of the frequency converter via the GLCP. [Hand On] also starts the motor, and it is now possible to enter the motor speed data by means of the arrow keys. The key can be selected as *Enable* [1] or *Disable* [0] via par.0-40 [Hand on] Key on LCP.

The following control signals will still be active when [Hand On] is activated:

- [Hand On] [Off] [Auto on]
- Reset
- Coasting stop inverse
- Reversing
- Set-up select lsb Set-up select msb
- Stop command from serial communication
- Quick stop
- DC brake

How to Operate the Frequency Converter

NOTE: External stop signals activated by means of control signals or a serial bus will override a "start" command via the keypad.

[Off]

stops the connected motor. The key can be selected as Enable [1] or Disable [0] via par.0-41 [Off] Key on LCP. If no external stop function is selected and the [Off] key is inactive the motor can only be stopped by disconnecting the mains supply.

[Auto on]

enables the frequency converter to be controlled via the control terminals and/or serial communication. When a start signal is applied on the control terminals and/or the bus, the frequency converter will start. The key can be selected as Enable [1] or Disable [0] via par.0-42 [Auto on] Key on LCP.

NOTE: An active HAND-OFF-AUTO signal via the digital inputs has higher priority than the control keys [Hand on] – [Auto on].

[Reset]

is used for resetting the frequency converter after an alarm (trip). It can be selected as *Enable* [1] or *Disable* [0] via par.0-43 [Reset] Key on LCP.

The parameter shortcut can be carried out by holding down the [Main Menu] key for 3 seconds. The parameter shortcut allows direct access to any parameter.

RS-485 Bus Connection

One or more frequency converters can be connected to a controller (or master) using the RS-485 standard interface. Terminal 68 is connected to the P signal (TX+, RX+), while terminal 69 is connected to the N signal (TX-,RX-).

If more than one frequency converter is connected to a master, use parallel connections.

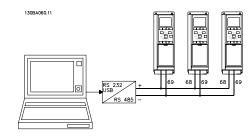


Illustration 5. 1: Connection example.

In order to avoid potential equalizing currents in the screen, earth the cable screen via terminal 61, which is connected to the frame via an RC-link.

Bus termination

The RS-485 bus must be terminated by a resistor network at both ends. If the drive is the first or the last device in the RS-485 loop, set the switch S801 on the control card for ON.


For more information, see the paragraph Switches S201, S202, and S801.



How to Connect a PC to the Frequency Converter

To control or program the frequency converter from a PC, install the PC-based Configuration Tool TDU. The PC is connected via a standard (host/device) USB cable, or via the RS-485 interface as shown in the TR200 Design Guide, chapter How to Install > Installation of misc. connections.

NOTE: The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals. The USB connection is connected to protection earth on the frequency converter. Use only isolated laptop as PC connection to the USB connector on the frequency converter.

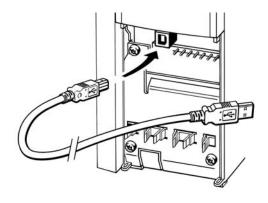

130BT308

Illustration 5. 2: For control cable connections, see section on *Control Terminals*.

PC Software Tools

PC-based Configuration Tool Trane Drive Utility (TDU)

All Frequency converters are equipped with a serial communication port. Trane provides a PC tool for communication between PC and frequency converter, PC-based Configuration Tool TDU. Please check the section on *Available Literature* for detailed information on this tool.

TDU Set-up Software

TDU has been designed as an easy to use interactive tool for setting parameters in our frequency converters. . The TDU Set-up software will be useful for:

- Planning a communication network off-line. TDU contains a complete frequency converter database
- Commissioning frequency converters on line
- Saving settings for all frequency converters
- Replacing a frequency converter in a network
- Simple and accurate documentation of frequency converter settings after commissioning.
- Expanding an existing network
- Future developed frequency converters will be supported

Save frequency converter settings:

- 1. Connect a PC to the unit via USB comport. (NOTE: Use a PC, which is isolated from the mains, in conjunction with the USB port. Failure to do so may damage equipment.)
- 2. Open TDU Set-up Software
- 3. Choose "Read from drive"
- 4. Choose "Save as"

All parameters are now stored in the PC.

How to Operate the Frequency Converter

Load frequency converter settings:

- 1. Connect a PC to the frequency converter via USB comport
- 2. Open TDU Set-up software
- 3. Choose "Open" stored files will be shown
- 4. Open the appropriate file
- 5. Choose "Write to drive"

All parameter settings are now transferred to the frequency converter.

A separate manual for TDU Set-up Software is available.

The TDU Set-up software modules

The following modules are included in the software package:



TDU Set-up Software

Setting parameters

Copy to and from frequency converters

Documentation and print out of parameter settings incl. diagrams

Ext. user interface

Preventive Maintenance Schedule

Clock settings

Timed Action Programming

Smart Logic Controller Set-up

Ordering number:

Please order the CD containing TDU Set-up Software using code number 130B1000.

Tips and Tricks

- * For the majority of HVAC applications the Quick Menu, Quick Set-up and Function Set-up provides the simplest and quickest access to all the typical parameters required.
- * Whenever possible, performing an AMA, will ensure best shaft performance
- * Contrast of the display can be adjusted by pressing [Status] and [♠] for darker display or by pressing [Status] and [▼] for brighter dispaly
- * Under [Quick Menu] and [Changes Made] all parameters that have been changed from factory settings are displayed
- * Press and hold [Main Menu] key for 3 seconds for access to any parameter
- * For service purposes it is recommended to copy all parameters to the keypad, see par. 0-50 <u>LCP Copy</u> for further information

Table 5. 1: Tips and tricks



Quick Transfer of Parameter Settings when using keypad

Once the set-up of a frequency converter is complete, it is recommended to store (backup) the parameter settings in the keypad or on a PC via TDU Set-up Software Tool.

⚠WARNING

Stop the motor before performing any of these operations otherwise unexpected operation can occur. Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized.

Failure to follow recommendations could result in death or serious injury..

Data storage in keypad:

- 1. Go to par.0-50 LCP Copy
- 2. Press the [OK] key
- 3. Select "All to keypad"
- 4. Press the [OK] key

All parameter settings are now stored in the GLCP indicated by the progress bar. When 100% is reached, press [OK].

The GLCP can now be connected to another frequency converter and the parameter settings copied to this frequency converter.

Data transfer from keypad to Frequency converter:

- 1. Go to par.0-50 LCP Copy
- 2. Press the [OK] key
- 3. Select "All from keypad"
- 4. Press the [OK] key

The parameter settings stored in the GLCP are now transferred to the frequency converter indicated by the progress bar. When 100% is reached, press [OK].

Initialisation to Default Settings

There are two ways to initialise the frequency converter to default: Recommended initialisation and manual initialisation.

Please be aware that they have different impact according to the below description.

Recommended initialisation (via par.14-22 Operation Mode)

- 1. Select par.14-22 Operation Mode
- 2. Press [OK]
- 3. Select "Initialisation"
- 4. Press [OK]
- Remove power to unit and wait for display to turn off.
- Reconnect power and the frequency converter is reset. Note that first start-up takes a few more seconds
- 7. Press [Reset]

Par.14-22 Operation Mode initialises all except:
Par.14-50 RFI Filter
Par.8-30 Protocol
Par.8-31 Address
Par.8-32 Baud Rate
Par.8-35 Minimum Response Delay
Par.8-36 Max Response Delay
Par.8-37 Maximum Inter-Char Delay
Par.15-00 Operating Hours to par.15-05 Over
Volt's
Par.15-20 Historic Log: Event to par.15-22 Historic
Log: Time
Par.15-30 Alarm Log: Error Code to par.
15-32 Alarm Log: Time



How to Operate the Frequency Converter

NOTE: Parameters selected in par.0-25 My Personal Menu, will stay present, with default factory setting.

Manual initialisation

NOTE: When carrying out manual initialisation, serial communication, RFI filter settings and fault log settings are reset.

Removes parameters selected in par.0-25 My Personal Menu.

- 1. Disconnect from mains and wait until the display turns off.
- 2a. Press [Status] [Main Menu] [OK] at the same time while power up for Graphical LCP (GLCP)
- 3. Release the keys after 5 s
- 4. The frequency converter is now programmed according to default settings

This parameter initialises all except:

Par.15-00 Operating Hours
Par.15-03 Power Up's

Par.15-04 Over Temp's

Par.15-05 Over Volt's



How to Programme

Parameter Set-Up

Group	Title	Function
0-	Operation and Display	Parameters used to program the fundamental functions of the frequency converter and the keypad including: selection of language; selection of which variables are displayed at each position in the display (e.g. static duct pressure or condenser water return temperature can be displayed with the setpoint in small digits in the top row and feedback in large digits in the centre of the dispay); enabling/disabling of the keypad keys/buttons; passwords for the keypad; upload and download of commissioned parameters to/from the keypad and setting the built in clock.
1-	Load / Motor	Parameters used to configure the frequency converter for the specific application and motor including: open or closed loop operation; type of application such as compressor, fan or centrifual pump; motor nameplate data; auto-tuning of the drive to the motor for optimum performance; flying start (typically used for fan applications) and motor thermal protection.
2-	Brakes	Parameters used to configure braking functions of the frequency converter which although not common in many HVAC applications, can be useful on special fan applications. Parameters including: DC braking; dymamic/resistor braking and over voltage control (which provides automatic adjustment of the deceleration rate (auto-ramping) to avoid tripping when decelerating large inertia fans)
3-	Reference / Ramps	Parameters used to program the minimum and maximum reference limits of speed (RPM/Hz) in open loop or in actual units when operating in closed loop); digital/preset references; jog speed; definition of the source of each reference (e.g. which analog input the reference signal is connected to); ramp up and down times and digital potentiometer settings.
4-	Limits / Warnings	Parameters used to program limits and warnings of operation including: allowable motor direction; minimum and maximum motor speeds (e.g. in pump applications it is typical to program a minimum speed to approx 30-40% to ensure pump seals are adequately lubricated at all times, avoid cavitation and ensure adequate head is produced at all times to create flow); torque and current limits to protect the pump, fan or compressor driven by the motor; warnings for low/high current, speed, reference, and feedback; missing motor phase protection; speed bypass frequencies including semi-automatic setup of these frequencies (e.g. to avoid resonance conditions on cooling tower and other fans).
5-	Digital In / Out	Parameters used to program the functions of all digital inputs, digital outputs, relay outputs, pulse inputs and pulse outputs for terminals on the control card and all option cards.

Table 6. 1: Parameter Groups



Group	Title	Function
6-	Analog In / Out	Parameters used to program the functions associated with all analog inputs and analog outputs for the terminals on the control card and General Purpose I/O option (MCB101) (note: NOT Analog I/O option MCB109, see parameter group 26-00) including: analog input live zero timeout function (which for example can be used to command a cooling tower fan to operate at full speed if the condenser water return sensor fails); scaling of the analog input signals (for example to match the analog input to the mA and pressure range of a static duct pressure sensor); filter time constant to filter out electrical noise on the analog signal which can sometimes occur when long cables are installed; function and scaling of the analog outputs (for example to provide an analog output representing motor current or kW to an analog input of a DDC controller) and to configure the analog outputs to be controlled by the BMS via a high level interface (HLI) (e.g. to control a chilled water valve) including ability to define a default value of these outputs in the event of the HLI failing.
8-	Communication and Options	Parameters used for configuring and monitoring functions associated with the serial communications / high level interface to the frequency converter
10-	CAN Fieldbus	Parameters only applicable when a DeviceNet option is installed.
11-13-	LonWorks Smart Logic Controller	Parameters only applicable when a Lonworks option is installed. Parameters used to configure the built in Smart Logic Controller (SLC) which can be used for simple functions such as comparators (e.g. if running above xHz, activate output relay), timers (e.g. when a start signal is applied, first activate output relay to open supply air damper and wait x seconds before ramping up) or a more complex sequence of user defined actions executed by the SLC when the associated user defined event is evaluated as TRUE by the SLC. (For example, initiate an economiser mode in a simple AHU cooling application control scheme where there is no BMS. For such an application the SLC can monitor the outside air relative humidity and if it is below a defined value, the supply air temperature setpoint could be automatically increased. With the frequency converter monitoring the outside air relative humidity and supply air temperature via it's analog inputs and controlling the chilled water valve via one of the extended PI(D) loops and an analog output, it would then modulate that valve to maintain a higher supply air temperature). The SLC can often replace the need for other external control equipment.
14-	Special Functions	Parameters used to configure special functions of the frequency converter including: setting of the switching frequency to reduce audible noise from the motor (sometimes required for fan applications); kinetic back-up function (especially useful for critical applications in semi-conductor installations where performance under mains dip/mains loss is important); mains imbalance protection; automatic reset (to avoid the need for a manual reset of Alarms); energy optimisation parameters (which typically do not need changing but enable fine tuning of this automatic function (if necessary) ensuring the frequency converter and motor combination operate at their optimum efficiency at full and partial load conditions) and auto-derating functions (which enable the frequency converter to continue operation at reduced performance under extreme operating conditions ensuring maximum up time).
15-	FC Information	Parameters providing operating data and other drive information including: operating and running hour counters; kWh counter; resetting of the running and kWh counters; alarm/fault log (where the past 10 alarms are logged along with any associated value and time) and drive and option card indentification parameters such as code number and software version.

Group	Title	Function
16-	Data Readouts	Read only parameters which display the status/value of many operating variables which can be displayed on the keypad or viewed in this parameter group. These parameters can be particularly useful during commissioning when interfacing with a BMS via a high level interface.
18-	Info & Readouts	Read only parameters which display the last 10 prevantative maintenance log items, actions and time and the value of analog inputs and outputs on the Analog I/O option card which can be particularly useful during commissioning when interfacing with a BMS via a high level interface.
20-	FC Closed Loop	Parameters used to configure the closed loop PI(D) controller which controls the speed of the pump, fan or compressor in closed loop mode including: defining where each of the 3 possible feedback signals come from (e.g. which analog input or the BMS HLI); conversion factor for each of the feedback signals (e.g. where a pressure signal is used for indication of flow in an AHU or converting from pressure to temperature in a compressor application); engineering unit for the reference and feedback (e.g. Pa, kPa, m Wg, in Wg, bar, m3/s, m3/h, °C, °F etc); the function (e.g. sum, difference, average, minimum or maximum) used to calculate the resulting feedback for single zone applications or the control philosophy for multi-zone applications; programming of the setpoint(s) and manual or auto-tuning of the PI(D) loop.
21-	Extended Closed Loop	Parameters used to configure the 3 extended closed loop PI(D) controllers which for example can be used to control external actuators (e.g. chilled water valve to maintain supply air temperature in a VAV system) including: engineering unit for the reference and feedback of each controller (e.g. °C, °F etc); defining the range of the reference/setpoint for each controller; defining where each of the references/setpoints and feedback signals come from (e.g. which analog input or the BMS HLI); programming of the setpoint and manual or auto-tuning of the each of the PI(D) controllers.
22-	Application Functions	Parameters used to monitor, protect and control pumps, fans and compressors including: no flow detection and protection of pumps (including autosetup of this function); dry pump protection; end of curve detection and protection of pumps; sleep mode (especially useful for cooling tower and booster pump sets); broken belt detection (typically used for fan applications to detect no air flow instead of using a Δp switch installed across the fan); short cycle protection of compressors and pump flow compensation of setpoint (especially useful for secondary chilled water pump applications where the Δp sensor has been installed close to the pump and not acoss the furthest most significant load(s) in the system; using this function can compensate for the sensor installation and help to realise the maximum energy savings).
23-	Time Based Func- tions	Time based parameters including: those used to initiate daily or weekly actions based on the built in real time clock (e.g. change of setpoint for night set back mode or start/stop of the pump/fan/compressor start/stop of a external equipment); preventative maintenance functions which can be based on running or operating hour time intervals or on specific dates and times; energy log (especially useful in retrofit applications or where information of the actual historical load (kW) on the pump/fan/compressor is of interest); trending (especially useful in retrofit or other applications where there is an interest to log operating power, current, frequency or speed of the pump/fan/compressor for analysis and a payback counter.

How to Programme

Group	Title	Function
24-	Application Func- tions 2	Parameters used to set-up Fire Mode and/or to control a bypass contactor/ starter if designed into the system.
25-	Cascade Controller	Parameters used to configure and monitor the built in pump cascade controller (typically used for pump booster sets).
26-	Analog I/O Option MCB 109	Parameters used to configure the Analog I/O option (MCB109) including: definition of the analog input types (e.g. voltage, Pt1000 or Ni1000) and scaling and definition of the analog output functions and scaling.

Parameter descriptions and selections are displayed on the graphic (GLCP) or numeric (NLCP) display. (See relevant section for details.) Access the parameters by pressing the [Quick Menu] or [Main Menu] button on the control panel. The Quick Menu is used primarily for commissioning the unit at start-up by providing the parameters necessary to start operation. The Main Menu provides access to all parameters for detailed application programming.

All digital input/output and analog input/output terminals are multifunctional. All terminals have factory default functions suitable for the majority of HVAC applications but if other special functions are required, they must be programmed as explained in parameter group 5 or 6.

Parameter Descriptions

Quick Menu Mode

Parameter Data

The keypad provides access to all parameters listed under the Quick Menus. To set parameters using the [Quick Menu] button - enter or change parameter data or settings in accordance with the following procedure:

- 1. Press Quick Menu button
- 2. Use the [▲] and [▼] buttons to find the parameter you want to change
- 3. Press [OK]
- 4. Use [▲] and [▼] buttons to select the correct parameter setting
- 5. Press [OK]
- 6. To move to a different digit within a parameter setting, use the [◀] and [▶] buttons
- 7. Highlighted area indicates digit selected for change
- 8. Press [Cancel] button to disregard change, or press [OK] to accept change and enter the new setting

Example of changing parameter data

Assume parameter 22-60 is set to [Off]. However, you want to monitor the fan-belt condition - non- broken or broken - according to the following procedure:

- 1. Press Quick Menu key
- 2. Choose Function Setups with the [▼] button
- 3. Press [OK]
- 4. Choose Application Settings with the [▼] button
- 5. Press [OK]
- 6. Press [OK] again for Fan Functions
- 7. Choose Broken Belt Function by pressing [OK]
- 8. With [▼] button, choose [2] Trip

The frequency converter will now trip if a broken fan-belt is detected.

Select [My Personal Menu] to display personal parameters:

Select [My Personal Menu] to display only the parameters, which have been pre-selected and programmed as personal parameters. For example, you may have pre-programmed personal parameters to be in My Personal Menu during factory commissioning to make on-site commissioning/fine tuning simpler. These parameters are selected in par.0-25 My Personal Menu. Up to 20 different parameters can be programmed in this menu.

Select [Changes Made] to get information about:

- The last 10 changes. Use the up/down navigation keys to scroll between the last 10 changed parameters.
- The changes made since default setting.

Select [Loggings]:

to get information about the display line read-outs. The information is shown as graphs.

Only display parameters selected in par.0-20 <u>Display Line 1.1 Small</u> and par.0-24 <u>Display Line 3 Large</u> can be viewed. It is possible to store up to 120 samples in the memory for later reference.

Quick Setup

Efficient Parameter Set-up for TR200 Applications:

The parameters can easily be set up for the vast majority of the TR200 applications only by using the **[Quick Setup]** option.

After pressing [Quick Menu], the different choices in the Quick Menu are listed. See also illustration 6.1 below and tables Q3-1 to Q3-4 in the following *Function Setups* section.

Example of using the Quick Setup option:

Assume you want to set the Ramp Down Time to 100 seconds!

- 1. Select [Quick Setup]. The first par.0-01 Language in Quick Setup appears
- 2. Press [▼] repeatedly until par.3-42 Ramp 1 Ramp Down Time appears with the default setting of 20 seconds
- 3. Press [OK]
- 4. Use the [◀] button to highlight the 3rd digit before the comma
- 5. Change '0' to '1' by using the [▲] button
- 6. Use the [▶] button to highlight the digit '2'
- 7. Change '2' to '0' with the [▼] button
- 8. Press [OK]

The new ramp-down time is now set to 100 seconds.

It is recommended to do the set-up in the order listed.

NOTE: A complete description of the function is found in the parameter sections of this manual.



130BP064.11

Illustration 6. 1: Quick Menu view.

How to Programme

The Quick Setup menu gives access to the 18 most important setup parameters of the frequency converter. After programming the frequency converter will, in most cases, be ready for operation. The 18 Quick Setup parameters are shown in the table below. A complete description of the function is given in the parameter description sections of this manual.

Parameter	[Units]
par.0-01 <u>Language</u>	
par.1-20 Motor Power [kW]	[kW]
par.1-21 Motor Power [HP]	[HP]
par.1-22 Motor Voltage*	[V]
par.1-23 Motor Frequency	[Hz]
par.1-24 Motor Current	[A]
par.1-25 Motor Nominal Speed	[RPM]
par.1-28 Motor Rotation Check	[Hz]
par.3-41 Ramp 1 Ramp up Time	[s]
par.3-42 Ramp 1 Ramp Down Time	[s]
par.4-11 Motor Speed Low Limit [RPM]	[RPM]
par.4-12 Motor Speed Low Limit [Hz]*	[Hz]
par.4-13 Motor Speed High Limit [RPM]	[RPM]
par.4-14 Motor Speed High Limit [Hz]*	[Hz]
Par.3-19 Jog Speed [RPM]	[RPM]
par.3-11 Jog Speed [Hz]*	[Hz]
Par.5-12 <u>Terminal 27 Digital Input</u>	
par.5-40 <u>Function Relay</u> **	

Table 6. 2: Quick Setup parameters

See the parameter description in the section Commonly Used Parameters.

For a detailed information about settings and programming, please see the TR200 Programming Guide

NOTE: If [No Operation] is selected in par.5-12 <u>Terminal 27 Digital Input</u>, no connection to +24 V on terminal 27 is necessary to enable start.

If [Coast Inverse] (factory default value) is selected in par.5-12 <u>Terminal 27 Digital Input</u>, a connection to +24V is necessary to enable start.

0-01	Language	
Option	:	Function:
		Defines the language to be used in the display. The frequency converter can be delivered with 4 different language packages. English and German are included in all packages. English cannot be erased or manipulated.
[0] *	English	Part of Language packages 1 - 4
[1]	Deutsch	Part of Language packages 1 - 4
[2]	Francais	Part of Language package 1
[3]	Dansk	Part of Language package 1
[4]	Spanish	Part of Language package 1
[5]	Italiano	Part of Language package 1

^{*}The display showing depends on choices made in par.0-02 Motor Speed Unit and par.0-03 Regional Settings. The default settings of par.0-02 Motor Speed Unit and par.0-03 Regional Settings depend on which region of the world the frequency converter is supplied to but can be re-programmed as required.

^{**} par.5-40 Function Relay, is an array, where one may choose between Relay1 [0] or Relay2 [1]. Standard setting is Relay1 [0] with the default choice Alarm [9].

	Svenska	Part of Language package 1
[7]	Nederlands	Part of Language package 1
	Chinese	Part of Language package 2
	Suomi	Part of Language package 1
	English US	Part of Language package 4
	Greek	Part of Language package 4
	Bras.port	Part of Language package 4
	Slovenian	Part of Language package 3
	Korean	Part of Language package 2
	Japanese	Part of Language package 2
	Turkish	Part of Language package 4
	Trad.Chinese	Part of Language package 2
	Bulgarian	Part of Language package 3
	Srpski	Part of Language package 3
	Romanian	Part of Language package 3
	Magyar	Part of Language package 3
	Czech	Part of Language package 3
	Polski	Part of Language package 4
	Russian	Part of Language package 3
	Thai	Part of Language package 2
	Bahasa Indonesia	Part of Language package 2
1-20	Motor Power [kW]	
Range:		Function:
4.00 kW*	[0.09 - 3000.00 kW]	Enter the nominal motor power in kW according to the motor nameplate data. The default value corresponds to the nominal rated output of the unit. This parameter cannot be adjusted while the motor is running. Depending on the choices made in par.0-03 Regional Settings, either par. 1-20 Motor Power [kW] or par.1-21 Motor Power [HP] is made invisible.
1-21	Motor Power [HP]	
Range:		Function:
4.00 hp	* [0.09 - 3000.00 hp]	Enter the nominal motor power in HP according to the motor nameplate data. The default value corresponds to the nominal rated output of the unit. This parameter cannot be adjusted while the motor is running. Depending on the choices made in par.0-03 Regional Settings, either par. 1-20 Motor Power [kW] or par.1-21 Motor Power [HP] is made invisible.

How to Programme

1-22 Motor Voltage	
Range:	Function:
400. V* [10 1000. V]	Enter the nominal motor voltage according to the motor nameplate data. The default value corresponds to the nominal rated output of the unit. This parameter cannot be adjusted while the motor is running.
1-23 Motor Frequency	
Range:	Function:
50. Hz* [20 - 1000 Hz]	Select the motor frequency value from the motor nameplate data.For 87 Hz operation with 230/400 V motors, set the nameplate data for 230 V/50 Hz. Adapt par.4-13 Motor Speed High Limit [RPM] and par.3-03 Maximum Reference to the 87 Hz application.

NOTE: This parameter cannot be adjusted while the motor is running.

1-24 Motor Current	
Range:	Function:
7.20 A* [0.10 - 10000.00 A]	Enter the nominal motor current value from the motor nameplate data. This data is used for calculating motor torque, motor thermal protection etc.

Note

This parameter cannot be adjusted while the motor is running.

1-25 Motor Nominal Speed	
Range:	Function:
1420. [100 - 60000 RPM] RPM*	Enter the nominal motor speed value from the motor nameplate data. This data is used for calculating automatic motor compensations.

Note

This parameter cannot be adjusted while the motor is running.

1-28 Motor Rotation Check		
Option:		Function:
		Following installation and connection of the motor, this function allows the correct motor rotation direction to be verified. Enabling this function overrides any bus commands or digital inputs, except External Interlock and Safe Stop (if included).
[0] *	Off	Motor Rotation Check is not active.
[1]	Enabled	Motor Rotation Check is enabled. Once enabled, Display shows: "Note! Motor may run in wrong direction".

Pressing [OK], [Back] or [Cancel] will dismiss the message and display a new message: "Press [Hand on] to start the motor. Press [Cancel] to abort". Pressing [Hand on] starts the motor at 5 Hz in forward direction and the display shows: "Motor is running. Check if motor rotation direction is correct. Press [Off] to stop the motor". Pressing [Off] stops the motor and resets par.1-28 Motor Rotation Check. If motor rotation direction is incorrect, two motor phase cables should be interchanged. IMPORTANT:

∆WARNING

Hazardous Voltage!

Main power must be removed before disconnecting motor phase cables. Failure to follow recommendation could result in death or serious injury.

3-41 Ramp 1 Ramp up Time	
Range:	Function:
3.00 s* [0.01 - 3600.00 s]	Enter the ramp-up time, i.e. the acceleration time from 0 RPM to par. 1-25 <u>Motor Nominal Speed</u> . Choose a ramp-up time such that the output current does not exceed the current limit in par.4-18 <u>Current Limit</u> during ramping. See ramp-down time in par.3-42 <u>Ramp 1 Ramp Down Time</u> .
	$par.3 - 41 = \frac{tacc \times nnorm[par.1 - 25]}{ref[rpm]}[s]$

3-42 Ramp 1 Ramp Down Time	
Range:	Function:
3.00 s* [0.01 - 3600.00 s]	Enter the ramp-down time, i.e. the deceleration time from par.1-25 <u>Motor Nominal Speed</u> to 0 RPM. Choose a ramp-down time such that no overvoltage arises in the inverter due to regenerative operation of the motor, and such that the generated current does not exceed the current limit set in par.4-18 <u>Current Limit</u> . See ramp-up time in par.3-41 <u>Ramp 1 Ramp up Time</u> . $par.3 - 42 = \frac{tdec \times nnorm [par.1 - 25]}{ref [rpm]} [s]$
	[

Range: 50/60.0 [par. 4-12 - par. 4-19 Hz] Hz* Enter the maximum limit for motor speed. The Motor Speed High Limit can be set to correspond to the manufacturer's recommended maximum of the motor shaft. The Motor Speed High Limit must exceed the in par. 4-12 Motor Speed Low Limit [Hz]. Only par.4-11 Motor Speed Low Limit [RPM] or par.4-12 Motor Speed Low Limit [Hz] will be displayed depending on other parameters in the Main Menu and depending on default settings dependant on global location.

NOTE: Max. output frequency cannot exceed 10% of the inverter switching frequency (par.14-01 <u>Switching Frequency</u>).

4-12 Motor Speed Low Limit [Hz]		
Range:		Function:
0 Hz*	[0 - par. 4-14 Hz]	Enter the minimum limit for motor speed. The Motor Speed Low Limit can be set to correspond to the minimum output frequency of the motor shaft. The Speed Low Limit must not exceed the setting in par.4-14 Motor Speed High Limit [Hz].
4-13 Motor Speed High Limit [RPM]		

4-13 Motor Speed High Limit [RPM]		
Range:		Function:
1500. RPM*	[par. 4-11 - 60000. RPM]	Enter the maximum limit for motor speed. The Motor Speed High Limit can be set to correspond to the manufacturer's maximum rated motor. The Motor Speed High Limit must exceed the setting in par.4-11 Motor Speed Low Limit [RPM]. Only par.4-11 Motor Speed Low Limit [RPM] or par.4-12 Motor Speed Low Limit [Hz] will be displayed depending on other parameters in the Main Menu and depending on default settings dependant on global location.

NOTE: Max. output frequency cannot exceed 10% of the inverter switching frequency (par.14-01 <u>Switching Frequency</u>).

NOTE: Any changes in par.4-13 <u>Motor Speed High Limit [RPM]</u> will reset the value in par.4-53 <u>Warning Speed High</u> to the same value as set in par.4-13 <u>Motor Speed High Limit [RPM]</u>.

4-11 Motor Speed Low Limit [RPM]		
Range:	Function:	
0 RPM* [0 - par. 4-13 RPM]	Enter the minimum limit for motor speed. The Motor Speed Low Limit can be set to correspond to the manufacturer's recommended minimum motor speed. The Motor Speed Low Limit must not exceed the setting in par.4-13 Motor Speed High Limit [RPM].	
3-11 Jog Speed [Hz]		
Range:	Function:	
10.0 Hz* [0.0 - par. 4-14 Hz]	The jog speed is a fixed output speed at which the frequency converter is running when the jog function is activated. See also par.3-80 <u>Jog Ramp Time</u> .	

Function Setups

The Function set-up provides quick and easy access to all parameters required for the majority of TR200 applications including most VAV and CAV supply and return fans, cooling tower fans, Primary, Secondary and Condenser Water Pumps and other pump, fan and compressor applications.

How to access Function set-up - example



Illustration 6. 2: Step 1: Turn on the frequency converter (yellow LED lights)

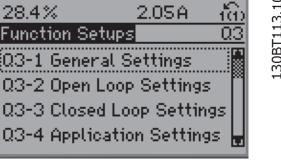


Illustration 6. 5: Step 4: Function set-ups choices appear. Choose 03-1 *General Settings*. Press [OK].



Illustration 6. 3: Step 2: Press the [Quick Menus] button (Quick Menus choices appear).

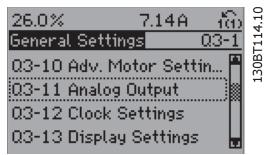


Illustration 6. 6: Step 5: Use the up/down navigation keys to scroll down to i.e. 03-11 *Analog Outputs*. Press [OK].

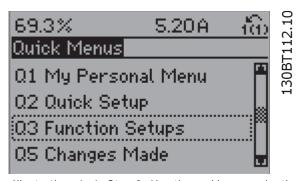


Illustration 6. 4: Step 3: Use the up/down navigation keys to scroll down to Function set-ups. Press [OK].

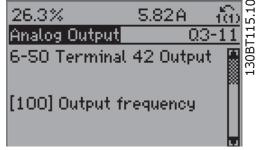


Illustration 6. 7: Step 6: Choose par. 6-50. Press [OK].



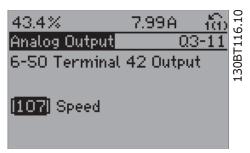


Illustration 6. 8: Step 7: Use the up/down navigation keys to select between the different choices. Press [OK].

Function Set-ups parameters

The Function Setups parameters are grouped in the following way:

Q3-1 General Settings					
Q3-10 Adv. Motor Set- Q3-11 Analog Output Q3-12 Clock Settings Q3-13 Display Settings					
tings					
par.1-90 <u>Motor Thermal</u>	par.6-50 Terminal 42 Out-	par.0-70 Date and Time	Par.0-20 Display Line 1.1		
<u>Protection</u>	put		<u>Small</u>		
par.1-93 <u>Thermistor</u>	par.6-51 Terminal 42 Out-	par.0-71 Date Format	Par.0-21 Display Line 1.2		
Source	put Min Scale		<u>Small</u>		
par.1-29 <u>Automatic Mo-</u>	par.6-52 Terminal 42 Out-	par.0-72 Time Format	Par.0-22 Display Line 1.3		
tor Adaptation (AMA)	put Max Scale		<u>Small</u>		
par.14-01 Switching Fre-		par.0-74 <u>DST/Summer-</u>	Par.0-23 Display Line 2		
quency		<u>time</u>	<u>Large</u>		
par.4-53 Warning Speed		par.0-76 DST/Summer-	Par.0-24 Display Line 3		
<u>High</u>		time Start	Large		
		par.0-77 DST/Summer-	par.0-37 Display Text 1		
		time End			
			par.0-38 Display Text 2		
			par.0-39 Display Text 3		

Q3-2 Open Loop Settings		
Q3-21 Analog Reference		
par.3-02 Minimum Reference		
par.3-03 <u>Maximum Reference</u>		
par.6-10 <u>Terminal 53 Low Voltage</u>		
par.6-11 <u>Terminal 53 High Voltage</u>		
Par.6-12 <u>Terminal 53 Low Current</u>		
Par.6-13 <u>Terminal 53 High Current</u>		
par.6-14 <u>Terminal 53 Low Ref./Feedb. Value</u>		
par.6-15 <u>Terminal 53 High Ref./Feedb. Value</u>		



Q3-3 Closed Loop Settings		
Q3-30 Single Zone Int. Set Point	Q3-31 Single Zone Ext. Set Point	
par.1-00 Configuration Mode	par.1-00 Configuration Mode	
Par.20-12 Reference/Feedback Unit	Par.20-12 Reference/Feedback Unit	
Par.20-13 Minimum Reference/Feedb.	Par.20-13 Minimum Reference/Feedb.	
Par.20-14 Maximum Reference/Feedb.	Par.20-14 Maximum Reference/Feedb.	
par.6-22 Terminal 54 Low Current	par.6-10 Terminal 53 Low Voltage	
par.6-24 Terminal 54 Low Ref./Feedb. Value	par.6-11 Terminal 53 High Voltage	
par.6-25 Terminal 54 High Ref./Feedb. Value	Par.6-12 <u>Terminal 53 Low Current</u>	
par.6-26 Terminal 54 Filter Time Constant	Par.6-13 Terminal 53 High Current	
par.6-27 <u>Terminal 54 Live Zero</u>	par.6-14 Terminal 53 Low Ref./Feedb. Value	
par.6-00 <u>Live Zero Timeout Time</u>	par.6-15 Terminal 53 High Ref./Feedb. Value	
par.6-01 <u>Live Zero Timeout Function</u>	par.6-22 Terminal 54 Low Current	
par.20-21 <u>Setpoint 1</u>	par.6-24 Terminal 54 Low Ref./Feedb. Value	
par.20-81 PID Normal/ Inverse Control	par.6-25 Terminal 54 High Ref./Feedb. Value	
Par.20-82 PID Start Speed [RPM]	par.6-26 Terminal 54 Filter Time Constant	
Par.20-83 PID Start Speed [Hz]	par.6-27 <u>Terminal 54 Live Zero</u>	
par.20-93 PID Proportional Gain	par.6-00 <u>Live Zero Timeout Time</u>	
par.20-94 PID Integral Time	par.6-01 Live Zero Timeout Function	
Par.20-70 Closed Loop Type	par.20-81 PID Normal/ Inverse Control	
Par.20-71 PID Performance	Par.20-82 PID Start Speed [RPM]	
Par.20-72 PID Output Change	Par.20-83 PID Start Speed [Hz]	
Par.20-73 Minimum Feedback Level	par.20-93 PID Proportional Gain	
Par.20-74 Maximum Feedback Level	par.20-94 PID Integral Time	
Par.20-79 PID Autotuning	Par.20-70 Closed Loop Type	
	Par.20-71 PID Performance	
	Par.20-72 PID Output Change	
	Par.20-73 Minimum Feedback Level	
	Par.20-74 Maximum Feedback Level	
	Par.20-79 PID Autotuning	



Q3-32 Multi Zone / Adv
par.1-00 Configuration Mode
par.3-15 Reference 1 Source
par.3-16 Reference 2 Source
par.20-00 Feedback 1 Source
par.20-01 Feedback 1 Conversion
Par.20-02 Feedback 1 Source Unit
par.20-03 Feedback 2 Source
par.20-04 Feedback 2 Conversion
Par.20-05 Feedback 2 Source Unit
Par.20-06 Feedback 3 Source
par.20-07 Feedback 3 Conversion
Par.20-08 Feedback 3 Source Unit
Par.20-12 Reference/Feedback Unit
Par.20-13 Minimum Reference/Feedb.
Par.20-14 Maximum Reference/Feedb.
par.6-10 Terminal 53 Low Voltage
par.6-11 Terminal 53 High Voltage
Par.6-12 Terminal 53 Low Current
Par.6-13 Terminal 53 High Current
par.6-14 Terminal 53 Low Ref./Feedb. Value
par.6-15 Terminal 53 High Ref./Feedb. Value
par.6-16 Terminal 53 Filter Time Constant
par.6-17 Terminal 53 Live Zero
par.6-20 Terminal 54 Low Voltage
par.6-21 Terminal 54 High Voltage
par.6-22 Terminal 54 Low Current
par.6-23 Terminal 54 High Current
par.6-24 Terminal 54 Low Ref./Feedb. Value
par.6-25 Terminal 54 High Ref./Feedb. Value
par.6-26 Terminal 54 Filter Time Constant
par.6-27 Terminal 54 Live Zero
par.6-00 Live Zero Timeout Time
par.6-01 Live Zero Timeout Function
par.4-56 Warning Feedback Low
par.4-57 Warning Feedback High
par.20-20 Feedback Function
par.20-21 Setpoint 1
par.20-22 Setpoint 2
par.20-81 PID Normal/ Inverse Control
Par.20-82 PID Start Speed [RPM]
Par.20-83 PID Start Speed [Hz]
par.20-93 PID Proportional Gain
par.20-94 PID Integral Time
Par.20-70 Closed Loop Type
Par.20-71 PID Performance
Par.20-72 PID Output Change
Par.20-73 Minimum Feedback Level
Par.20-74 Maximum Feedback Level
Par.20-79 PID Autotuning
<u>-</u>

	Q3-4 Application Settings	
Q3-40 Fan Functions	Q3-41 Pump Functions	Q3-42 Compressor Functions
par.22-60 Broken Belt Function	par.22-22 Low Speed Detection	par.1-03 Torque Characteristics
par.22-61 Broken Belt Torque	par.22-23 No-Flow Function	par.1-71 Start Delay
par.22-62 Broken Belt Delay	par.22-24 No-Flow Delay	par.22-75 Short Cycle Protection
par.4-64 Semi-Auto Bypass Set-	par.22-40 Minimum Run Time	par.22-76 Interval between Starts
<u>up</u>		
par.1-03 Torque Characteristics	par.22-41 Minimum Sleep Time	par.22-77 Minimum Run Time
par.22-22 Low Speed Detection	par.22-42 Wake-up Speed [RPM]	par.5-01 Terminal 27 Mode
par.22-23 No-Flow Function	par.22-43 Wake-up Speed [Hz]	par.5-02 Terminal 29 Mode
par.22-24 No-Flow Delay	par.22-44 Wake-up Ref./FB Differ-	Par.5-12 Terminal 27 Digital Input
	<u>ence</u>	
par.22-40 Minimum Run Time	Par.22-45 Setpoint Boost	Par.5-13 Terminal 29 Digital Input
par.22-41 Minimum Sleep Time	Par.22-46 Maximum Boost Time	par.5-40 Function Relay
par.22-42 Wake-up Speed [RPM]		par.1-73 Flying Start
par.22-43 Wake-up Speed [Hz]		Par.1-86 Trip Speed Low [RPM]
par.22-44 Wake-up Ref./FB Differ-	par.1-03 Torque Characteristics	Par.1-87 Trip Speed Low [Hz]
<u>ence</u>		
Par.22-45 Setpoint Boost	par.1-73 Flying Start	
Par.22-46 Maximum Boost Time		
par.2-10 Brake Function		
Par.2-16 AC brake Max. Current		
par.2-17 Over-voltage Control		
par.1-73 Flying Start		
par.1-71 Start Delay		
par.1-80 Function at Stop		
par.2-00 DC Hold/Preheat Current		
par.4-10 Motor Speed Direction		
	,	*

See also for a detailed description of the Function Setups parameter groups.

1-00	Configuration Mode	
Option	:	Function:
[0] *	Open Loop	Motor speed is determined by applying a speed reference or by setting desired speed when in Hand Mode. Open Loop is also used if the frequency converter is part of a closed loop control system based on an external PID controller providing a speed reference signal as output.
[3]	Closed Loop	Motor Speed will be determined by a reference from the built-in PID controller varying the motor speed as part of a closed loop control process (e.g. constant pressure or flow). The PID controller must be configured in par. 20-** or via the Function Setups accessed by pressing the [Quick Menus] button.

NOTE: This parameter cannot be changed when motor is running.

NOTE: When set for Closed Loop, the commands Reversing and Start Reversing will not reverse the direction of the motor.



1-03	1-03 Torque Characteristics		
Option		Function:	
[0] *	Compressor torque	<i>Compressor</i> [0]: For speed control of screw and scroll compressors. Provides a voltage which is optimized for a constant torque load characteristic of the motor in the entire range down to 10 Hz.	
[1]	Variable torque	Variable Torque [1]: For speed control of centrifugal pumps and fans. Also to be used when controlling more than one motor from the same frequency converter (e.g. multiple condenser fans or cooling tower fans). Provides a voltage which is optimized for a squared torque load characteristic of the motor.	
[2]	Auto Energy Optim. CT	Auto Energy Optimization Compressor [2]: For optimum energy efficient speed control of screw and scroll compressors. Provides a voltage which is optimized for a constant torque load characteristic of the motor in the entire range down to 15Hz but in addition the AEO feature will adapt the voltage exactly to the current load situation, thereby reducing energy consumption and audible noise from the motor. To obtain optimal performance, the motor power factor cos phi must be set correctly. This value is set in par.14-43 Motor Cosphi. The parameter has a default value which is automatically adjusted when the motor data is programmed. These settings will typically ensure optimum motor voltage but if the motor power factor cos phi requires tuning, an AMA function can be carried out using par.1-29 Automatic Motor Adaptation (AMA). It is very rarely necessary to adjust the motor power factor parameter manually.	
[3] *	Auto Energy Optim. VT	Auto Energy Optimization VT[3]: For optimum energy efficient speed control of centrifugal pumps and fans. Provides a voltage which is optimized for a squared torque load characteristic of the motor but in addition the AEO feature will adapt the voltage exactly to the current load situation, thereby reducing energy consumption and audible noise from the motor. To obtain optimal performance, the motor power factor cos phi must be set correctly. This value is set in par.14-43 Motor Cosphi. The parameter has a default value and is automatically adjusted when the motor data is programmed. These settings will typically ensure optimum motor voltage but if the motor power factor cos phi requires tuning, an AMA function can be carried out using par.1-29 Automatic Motor Adaptation (AMA). It is very rarely necessary to adjust the motor power factor parameter manually.	

1-29	Automatic Motor Ada	aptation (AMA)
Option:		Function:
		The AMA function optimizes dynamic motor performance by automatically optimizing the advanced motor parameters par.1-30 <u>Stator Resistance (Rs)</u> to par.1-35 <u>Main Reactance (Xh)</u>) while the motor is stationary.
[0] *	Off	No function
[1]	Enable complete AMA	performs AMA of the stator resistance RS, the rotor resistance Rr, the stator leakage reactance X_1 , the rotor leakage reactance X_2 and the main reactance X_h .
[2]	Enable reduced AMA	Performs a reduced AMA of the stator resistance $R_{\rm S}$ in the system only. Select this option if an LC filter is used between the frequency converter and the motor.

Activate the AMA function by pressing [Hand on] after selecting [1] or [2]. See also the item *Automatic Motor Adaptation* in the Design Guide. After a normal sequence, the display will read: "Press [OK] to finish AMA". After pressing the [OK] key the frequency converter is ready for operation.

NOTE:

- For the best adaptation of the frequency converter, run AMA on a cold motor
- AMA cannot be performed while the motor is running

NOTE: It is important to set motor par. 1-2* Motor Data correctly, since these form part of the AMA algorithm. An AMA must be performed to achieve optimum dynamic motor performance. It may take up to 10 min., depending on motor power rating.

NOTE: Avoid generating external torque during AMA.

NOTE: If one of the settings in par. 1-2* Motor Data is changed, par.1-30 <u>Stator Resistance (Rs)</u> to par.1-39 <u>Motor Poles</u>, the advanced motor parameters, will return to default setting.

This parameter cannot be adjusted while the motor is running.

NOTE: Full AMA should be run without filter only while reduced AMA can be run with filter.


See section: Application Examples > Automatic Motor Adaptation in the Design Guide.

1-71 Start Delay	
Range:	Function:
0.0 s* [0.0 - 120.0 s]	The function selected in par.1-80 Function at Stop is active in the delay period. Enter the time delay required before commencing acceleration.
1-73 Flying Start	
Option:	Function:
	This function makes it possible to catch a motor which is spinning freely due to a mains drop-out.
	When par.1-73 Flying Start is enabled, par.1-71 Start Delay has no function. Search direction for flying start is linked to the setting in par.4-10 Motor Speed Direction. Clockwise [0]: Flying start search in clockwise direction. If not successful, a DC brake is carried out. Both Directions [2]: The flying start will first make a search in the direction determined by the last reference (direction). If not finding the speed it will make a search in the other direction. If not successful, a DC brake will be activated in the time set in par.2-02 DC Braking Time. Start will then take place from 0 Hz.
[0] * Disabled	Select Disable [0] if this function is not required
[1] Enabled	Select <i>Enable</i> [1] to enable the frequency converter to "catch" and control a spinning motor.



1-80	Function at Stop	
Option	•	Function:
		Select the frequency converter function after a stop command or after the speed is ramped down to the settings in par.1-81 Min Speed for Function at Stop [RPM].
[0] *	Coast	Leaves motor in free mode.
[1]	DC Hold/Motor Preheat	Energizes motor with a DC holding current (see par.2-00 <u>DC Hold/Preheat Current</u>).
1-90	Motor Thermal Prote	ection
Option	:	Function:
		The frequency converter determines the motor temperature for motor protection in two different ways:
		 Via a thermistor sensor connected to one of the analog or digital inputs (par.1-93 <u>Thermistor Source</u>).
		 Via calculation (ETR = Electronic Thermal Relay) of the thermal load, based on the actual load and time. The calculated ther- mal load is compared with the rated motor current I_{M,N} and the rated motor frequency f_{M,N}. The calculations estimate the need for a lower load at lower speed due to less cooling from the fan incorporated in the motor.
[0]	No protection	If the motor is continuously overloaded and no warning or trip of frequency converter is wanted.
[1]	Thermistor warning	Activates a warning when the connected thermistor in the motor reacts in the event of motor over-temperature.
[2]	Thermistor trip	Stops (trips) the frequency converter when the connected thermistor in the motor reacts in the event of motor over-temperature.
[3]	ETR warning 1	
[4] *	ETR trip 1	
[5]	ETR warning 2	
[6]	ETR trip 2	
[7]	ETR warning 3	
[8]	ETR trip 3	
[9]	ETR warning 4	
[10]	ETR trip 4	

ETR (Electronic Thermal Relay) functions 1-4 will calculate the load when set-up where they were selected is active. For example ETR-3 starts calculating when set-up 3 is selected. For the North American market: The ETR functions provide class 20 motor overload protection in accordance with NEC.

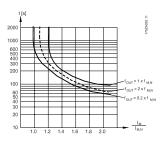

NOTE: Trane recommends using 24 VDC as thermistor supply voltage.

1-93	Thermistor Source	
Option		Function:
		Select the input to which the thermistor (PTC sensor) should be connected. An analog input option [1] or [2] cannot be selected if the analog input is already in use as a reference source (selected in par.3-15 Reference 2 Source or par.3-17 Reference 2 Source). When using MCB112, choice [0] <i>None</i> must always be selected.
[0] *	None	
[1]	Analog input 53	
[2]	Analog input 54	
[3]	Digital input 18	
[4]	Digital input 19	
[5]	Digital input 32	
[6]	Digital input 33	

NOTE: This parameter cannot be adjusted while the motor is running.

2-00 DC Hold/Preheat Current		
Range:	Function:	
50 %* [0 - 160. %]	Enter a value for holding current as a percentage of the rated motor current I _{M,N} set in par.1-24 Motor Current. 100% DC holding current corresponds to I _{M,N} . This parameter holds the motor (holding torque) or pre-heats the motor. This parameter is active if [1] DC hold/Preheat is selected in par. 1-80 Function at Stop.	

Note

The maximum value depends on the rated motor current. Avoid 100 % current for too long. It may damage the motor.

2-10	Brake Function	
Option	:	Function:
[0] *	Off	No brake resistor installed.
[1]	Resistor brake	Brake resistor incorporated in the system, for dissipation of surplus brake energy as heat. Connecting a brake resistor allows a higher DC link voltage during braking (generating operation). The Resistor brake function is only active in frequency converters with an integral dynamic brake.
[2]	AC brake	AC Brake will only work in Compressor Torque mode in par.1-03 <u>Torque Characteristics</u> .

2-17	Over-voltage Contro	ol Carlos
Option	:	Function:
		Over-voltage control (OVC) reduces the risk of the frequency converter tripping due to an over voltage on the DC link caused by generative power from the load.
[0]	Disabled	No OVC required.
[2] *	Enabled	Activates OVC.

NOTE: The ramp time is automatically adjusted to avoid tripping of the frequency converter.



3-02 Minimum Reference

Range:

Function:

0.000 [-999999.999 - par. 3-03 Referen- ReferenceFeedbackUnit] ceFeedEnter the Minimum Reference. The Minimum Reference is the lowest value obtainable by summing all references. The Minimum Reference value and unit matches the configuration choice made in par.1-00 Configuration Mode and par.20-12 Reference/Feedback Unit, respectively.

backUnit*

NOTE: This parameter is used in open loop only.

3-03 Maximum Reference

Range:

Function:

50.000 [par. 3-02 - 999999.999 Ref-Referen- erenceFeedbackUnit]

Enter the maximum acceptable value for the remote reference. The Maximum Reference value and unit matches the configuration choice made in par.1-00 <u>Configuration Mode</u> and par.20-12 <u>Reference/Feedback Unit</u>, respectively.

ceFeedbackUnit*

NOTE: If operating with par.1-00 <u>Configuration Mode</u> set for Closed Loop [3], par.20-14 <u>Maximum Reference/Feedb.</u> must be used.

3-10 Preset Reference


Array [8]


Range:

Function:

0.00 %* [-100.00 - 100.00 %]

Enter up to eight different preset references (0-7) in this parameter, using array programming. The preset reference is stated as a percentage of the value RefMAX (par.3-03 Maximum Reference, for closed loop see par. 20-14 Maximum Reference/Feedb.). When using preset references, select Preset ref. bit 0 / 1 / 2 [16], [17] or [18] for the corresponding digital inputs in parameter group 5-1* Digital Inputs.

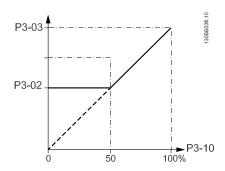

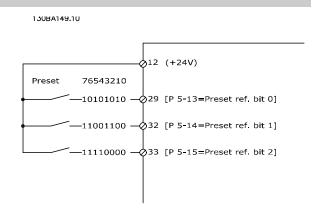

3-15 Reference 1 Source

Option:

Function:

Select the reference input to be used for the first reference signal. par. 3-15 <u>Reference 1 Source</u>, par.3-16 <u>Reference 2 Source</u> and par.3-17 <u>Reference 3 Source</u> define up to three different reference signals. The sum of these reference signals defines the actual reference.

This parameter cannot be adjusted while the motor is running.

ı	0	Nο	function	าท
	•		IUIICU	,,,

[1] * Analog input 53

[2] Analog input 54

[7] Pulse input 29

[8] Pulse input 33

[20]	Digital pot.meter	
[21]	Analog input X30/11	
[22]	Analog input X30/12	
[30]	Ext. Closed Loop 1	
[31]	Ext. Closed Loop 2	
[32]	Ext. Closed Loop 3	
3-16	Reference 2 Source	
Option	:	Function:
		Select the reference input to be used for the second reference signal. par.3-15 Reference 1 Source, par.3-16 Reference 2 Source and par. 3-17 Reference 3 Source define up to three different reference signals. The sum of these reference signals defines the actual reference.
		This parameter cannot be adjusted while the motor is running.
[0]	No function	
[1]	Analog input 53	
[2]	Analog input 54	
[7]	Pulse input 29	
[8]	Pulse input 33	
[20] *	Digital pot.meter	
[21]	Analog input X30/11	
[22]	Analog input X30/12	
[30]	Ext. Closed Loop 1	
[31]	Ext. Closed Loop 2	
[32]	Ext. Closed Loop 3	
4-10	Motor Speed Direction	on
Option	:	Function:
		Selects the motor speed direction required. Use this parameter to prevent unwanted reversing.
[0]	Clockwise	Only operation in clockwise direction will be allowed.

NOTE: The setting in par.4-10 Motor Speed Direction has impact on the Flying Start in par.1-73 Flying Start.

Operation in both clockwise and anti-clockwise direction will be allowed.

4-53 Warning Speed High	
Range:	Function:
par. 4-13 [par. 4-52 - par. 4-13 RPM] RPM*	Enter the nHIGH value. When the motor speed exceeds this limit (nHIGH), the display reads SPEED HIGH. The signal outputs can be programmed to produce a status signal on terminal 27 or 29 and on relay output 01 or 02. Programme the upper signal limit of the motor speed, nHIGH, within the normal working range of the frequency converter. Refer to the drawing in this section.

NOTE: Any changes in par.4-13 Motor Speed High Limit [RPM] will reset the value in par.4-53 Warning Speed High to the same value as set in par.4-13 Motor Speed High Limit [RPM].

If a different value is needed in par.4-53 Warning Speed High, it must be set after programming of par.

4-13 Motor Speed High Limit [RPM]!

Both directions

[2] *

4-56	Warning	Feed	hack	LOW

Range: Function:

-999999. [-999999.999 - par. 4-57

999 ProcessCtrlUnit] Proc-

essCtrlUnit* Enter the lower feedback limit. When the feedback falls below this limit, the display reads Feedb Low. The signal outputs can be programmed to produce a status signal on terminal 27 or 29 and on relay output 01 or

02.

4-57 Warning Feedback High

Range:	Function:
999 ProcessCtrlUnit]	Enter the upper feedback limit. When the feedback exceeds this limit, the display reads Feedb High. The signal outputs can be programmed to
'	produce a status signal on terminal 27 or 29 and on relay output 01 or 02.

4-64 Semi-Auto Bypass Set-up

Option:		Function:
[0] *	Off	No function
[1]	Enabled	Starts the Semi-Automatic Bypass set-up and continue with the procedure described above.

5-01 Terminal 27 Mode Option: Function: [0] * Input Defines terminal 27 as a digital input. [1] Output Defines terminal 27 as a digital output.

Please note that this parameter cannot be adjusted while the motor is running.

5-02	Terminal 29 Mode	
Option	:	Function:
[0] *	Input	Defines terminal 29 as a digital input.
[1]	Output	Defines terminal 29 as a digital output.

This parameter cannot be adjusted while the motor is running.

5-1* Digital Inputs

Parameters for configuring the input functions for the input terminals.

The digital inputs are used for selecting various functions in the frequency converter. All digital inputs can be set to the following functions:

No operation [0]	
Coast inverse [2] 27 Coast and reset inverse [3] All DC-brake inverse [5] All Stop inverse [6] All External interlock [7] All Start [8] All *terminal 18 Latched start [9] All Reversing [10] All Start reversing [11] All Jog [14] All *terminal 29 Preset reference on [15] All Preset reference on [16] All Preset ref bit 0 [16] All Preset ref bit 1 [17] All Preset ref bit 2 [18] All Freeze output [20] All Freeze output [20] All Speed up [21] All Set-up select bit 0 [23] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input	
Coast and reset inverse [3] All DC-brake inverse [5] All Stop inverse [6] All Stop inverse [6] All External interlock [7] All Start [8] All *terminal 18 Latched start [9] All Reversing [10] All Start reversing [11] All Jog [14] All *terminal 29 Preset reference on [15] All Preset reference on [16] All Preset ref bit 0 [16] All Preset ref bit 2 [18] All Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed up [21] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0	
DC-brake inverse [5]	
Stop inverse [6] All External interlock [7] All Start [8] All *terminal 18 Latched start [9] All Reversing [10] All Start reversing [11] All Jog [14] All *terminal 29 Preset reference on [15] All Preset ref bit 0 [16] All Preset ref bit 1 [17] All Preset ref bit 2 [18] All Preset ref bit 2 [18] All Freeze reference [19] All Freeze reference [19] All Speed up [21] All Speed up [21] All Speed up [21] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse <	
External interlock [7]	
Start [8] All *terminal 18 Latched start [9] All Reversing [10] All Start reversing [11] All Start reversing [11] All Preset reference on [15] All Preset refebit 0 [16] All Preset ref bit 1 [17] All Preset ref bit 2 [18] All Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All	
Latched start [9] All Reversing [10] All Start reversing [11] All Jog [14] All *terminal 29 Preset reference on [15] All Preset ref bit 0 [16] All Preset ref bit 1 [17] All Preset ref bit 2 [18] All Preeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Hand start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All	
Reversing [10] All Start reversing [11] All Jog [14] All *terminal 29 Preset reference on [15] All Preset ref bit 0 [16] All Preset ref bit 1 [17] All Preset ref bit 2 [18] All Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Hand start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All <td></td>	
Start reversing [11] All Jog [14] All *terminal 29 Preset reference on [15] All Preset ref bit 0 [16] All Preset ref bit 1 [17] All Preset ref bit 2 [18] All Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Teset reference on Teset reference on Teset reference on Teset reference on Teset ref bit 0 Teset ref bit 0 Teset ref bit 1 Teset ref bit 1 Teset ref bit 2 Teset reference Teset reference	
Preset reference on [15] All Preset ref bit 0 [16] All Preset ref bit 1 [17] All Preset ref bit 2 [18] All Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Clear [56] All Counter A (up) [60] 29, 33	
Preset reference on [15] All Preset ref bit 0 [16] All Preset ref bit 1 [17] All Preset ref bit 2 [18] All Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Preset ref bit 1 [17] All Preset ref bit 2 [18] All Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Preset ref bit 2 [18] All Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Preset ref bit 2 [18] All Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Clear [56] All Counter A (up) [60] 29, 33	
Freeze reference [19] All Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Freeze output [20] All Speed up [21] All Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Speed down [21] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Speed down [22] All Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Set-up select bit 0 [23] All Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Set-up select bit 1 [24] All Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Pulse input [32] terminal 29, 33 Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Ramp bit 0 [34] All Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Mains failure inverse [36] All Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Fire mode [37] All Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Run Permissive [52] All Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Hand start [53] All Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Auto start [54] All DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
DigiPot Increase [55] All DigiPot Decrease [56] All DigiPot Clear [57] All Counter A (up) [60] 29, 33	
DigiPot Decrease[56]AllDigiPot Clear[57]AllCounter A (up)[60]29, 33	
DigiPot Clear [57] All Counter A (up) [60] 29, 33	
Counter A (up) [60] 29, 33	
Reset Counter A [62] All	
Counter B (up) [63] 29, 33	
Counter B (down) [64] 29, 33	
Reset Counter B [65] All	
Sleep Mode [66] All	
Reset Maintenance Word [78] All	
Lead Pump Start [120] All	
Lead Pump Alternation [121] All	
Pump 1 Interlock [130] All	
Pump 2 Interlock [131] All	
Pump 3 Interlock [132] All	



5-12 Terminal 27 Digital Input

Same options and functions as par. 5-1*, except for *Pulse input*.

Option: Function:

[0] * No operation

5-15 Terminal 33 Digital Input

Same options and functions as par. 5-1* Digital Inputs.

Option: Function:

[0] * No operation

5-40 Function Relay

Array [8]

(Relay 1 [0], Relay 2 [1]

Option MCB 105: Relay 7 [6], Relay 8 [7] and Relay 9 [8]).

Select o	Select options to define the function of the relays.		
The sele	ection of each mechanical relay is	ealised in an array parameter.	
Option	:	Function:	
[0] *	No operation	Array [8] (Relay 1 [0], Relay 2 [1] Option MCB 105: Relay 7 [6], Relay 8 [7] and Relay 9 [8])	
[1]	Control ready		
[2]	Drive ready		
[3]	Drive rdy/rem ctrl		
[4]	Standby / no warning		
[5] *	Running	Default setting for relay 2.	
[6]	Running / no warning		

ı	[6]	Running /	no warning
	[O]	nullilling /	110 warriing

[8] Run on ref/no warn

[9] * Alarm	Default setting for relay 1.	

- [10] Alarm or warning
- [11] At torque limit
- Out of current range [12]
- [13] Below current, low
- [14] Above current, high
- [15] Out of speed range
- [16] Below speed, low
- Above speed, high [17]
- [18] Out of feedb. range
- [19] Below feedback, low
- [20] Above feedback, high
- [21] Thermal warning
- [25] Reverse
- **Bus OK** [26]
- [27] Torque limit & stop
- [28] Brake, no brake war
- [29] Brake ready, no fault
- [30] Brake fault (IGBT)

[35]	External Interlock
[36]	Control word bit 11
[37]	Control word bit 12
[40]	Out of ref range
[41]	Below reference, low
[42]	Above ref, high
[45]	Bus ctrl.
[46]	Bus ctrl, 1 if timeout
[47]	Bus ctrl, 0 if timeout
[60]	Comparator 0
[61]	Comparator 1
[62]	Comparator 2
[63]	Comparator 3
[64]	Comparator 4
[65]	Comparator 5
[70]	Logic rule 0
[71]	Logic rule 1
[72]	Logic rule 2
[73]	Logic rule 3
[74]	Logic rule 4
[75]	Logic rule 5
[80]	SL digital output A
[81]	SL digital output B
[82]	SL digital output C
[83]	SL digital output D
[84]	SL digital output E
[85]	SL digital output F
[160]	No alarm
[161]	Running reverse
[165]	Local ref active
[166]	Remote ref active
[167]	Start command act.
[168]	Hand mode
[169]	Auto mode
[180]	Clock Fault
[181]	Prev. Maintenance
[190]	No-Flow
[193]	Sleep Mode
[194]	Broken Belt
[195]	Bypass Valve Control
[196]	Fire Mode
[197]	Fire Mode was Act.
[198]	Drive Bypass



6-00 Live Zero Timeout Time

Range:

10 s* [1 - 99 s] Enter the Live Zero Time-out time period. Live Zero Time-out Time is active for analog inputs, i.e. terminal 53 or terminal 54, used as reference or feedback sources. If the reference signal value associated with the selected current input falls below 50% of the value set in par.6-10 Terminal 53 Low Voltage, par.6-12 Terminal 53 Low Current, par. 6-20 Terminal 54 Low Voltage or par.6-22 Terminal 54 Low Current for a time period longer than the time set in par.6-00 Live Zero Timeout Time, the function selected in par.6-01 Live Zero Timeout Function will be activated.

6-01 Live Zero Timeout Function

Option:

Function:

Select the time-out function. The function set in par.6-01 Live Zero Timeout Function will be activated if the input signal on terminal 53 or 54 is below 50% of the value in par.6-10 Terminal 53 Low Voltage, par. 6-12 Terminal 53 Low Current, par.6-20 Terminal 54 Low Voltage or par. 6-22 Terminal 54 Low Current for a time period defined in par.6-00 Live Zero Timeout Time. If several time-outs occur simultaneously, the frequency converter prioritises the time-out functions as follows:

- par.6-01 Live Zero Timeout Function
- Par.8-04 Control Timeout Function

The output frequency of the frequency converter can be:


- [1] frozen at the present value
- [2] overruled to stop
- [3] overruled to jog speed
- [4] overruled to max. speed
- [5] overruled to stop with subsequent trip
- [0] * Off [1] Freeze output [2] Stop

[3]

- [4] Max. speed

Jogging

[5] Stop and trip

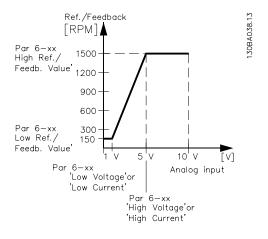

6-10	Terminal	53 Low	Voltage
------	----------	--------	---------

Range: Function:

0.07 V* [0.00 - par. 6-11 V] Enter the low voltage value. This analog input scaling value should cor-

respond to the low reference/feedback value set in par.6-14 Terminal 53

Low Ref./Feedb. Value.

6-11 Terminal 53 High Voltage

Range: Function:

10.00 V* [par. 6-10 - 10.00 V] Enter the high voltage value. This analog input scaling value should cor-

respond to the high reference/feedback value set in par.6-15 Terminal 53

High Ref./Feedb. Value.

6-14 Terminal 53 Low Ref./Feedb. Value

Range: Function:

Α* N/A]

 $0.000\ N/\ [-999999.999\ -\ 999999.999\ Enter\ the\ analog\ input\ scaling\ value\ that\ corresponds\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ corresponds\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ corresponds\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ corresponds\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ corresponds\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ corresponds\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ corresponds\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ corresponds\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ corresponds\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ correspond\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ correspond\ to\ the\ low\ voltage/\ analog\ input\ scaling\ value\ that\ correspond\ that\ correspon$ low current set in par.6-10 Terminal 53 Low Voltage and par.6-12 Termi-

nal 53 Low Current.

6-15 Terminal 53 High Ref./Feedb. Value

Range: Function:

50.000 [-999999.999 - 999999.999

N/A*

Enter the analog input scaling value that corresponds to the high voltage/ high current value set in par.6-11 Terminal 53 High Voltage and par.

6-13 Terminal 53 High Current.

6-16 Terminal 53 Filter Time Constant

Range: Function:

0.001 s* [0.001 - 10.000 s] Enter the time constant. This is a first-order digital low pass filter time

> constant for suppressing electrical noise in terminal 53. A high time constant value improves dampening but also increases the time delay

through the filter.

This parameter cannot be adjusted while the motor is running.

6-17 Terminal 53 Live Zero

Option: Function:

> This parameter makes it possible to disable the Live Zero monitoring. E.g. to be used if the analog outputs are used as part of a de-central I/O system (e.g. when not as part of any frequency converter related control functions, but feeding a Building Management system with data).

[0] Disabled

[1] * Enabled

6-20 Terminal 54 Low Voltage

Range: Function:

0.07 V* [0.00 - par. 6-21 V]

Enter the low voltage value. This analog input scaling value should correspond to the low reference/feedback value, set in par.6-24 Terminal 54

Low Ref./Feedb. Value.

6-21 Terminal 54 High Voltage

Range: Function:

10.00 V* [par. 6-20 - 10.00 V] Enter the high voltage value. This analog input scaling value should cor-

respond to the high reference/feedback value set in par.6-25 Terminal 54

High Ref./Feedb. Value.



6-24	Terminal	5/1	OW	Dof	/Eoodh	Value

Function: Range:

0.000 N/ [-999999.999 - 999999.999 Enter the analog input scaling value that corresponds to the low voltage/ A* N/A]

low current value set in par.6-20 Terminal 54 Low Voltage and par.

6-22 Terminal 54 Low Current.

6-25 Terminal 54 High Ref./Feedb. Value

Range: Function:

100.000 [-999999.999 - 9999999.999 Enter the analog input scaling value that corresponds to the high voltage/ N/A* N/A]

high current value set in par.6-21 Terminal 54 High Voltage and par.

6-23 Terminal 54 High Current.

6-26 Terminal 54 Filter Time Constant

Function: Range:

0.001 s* [0.001 - 10.000 s] Enter the time constant. This is a first-order digital low pass filter time

> constant for suppressing electrical noise in terminal 54. A high time constant value improves dampening but also increases the time delay

through the filter.

This parameter cannot be adjusted while the motor is running.

6-27 Terminal 54 Live Zero

Option: Function:

> This parameter makes it possible to disable the Live Zero monitoring. E.g. to be used if the analog outputs are used as part of a de-central I/O system (e.g. when not as part of any frequency converter related control

functions, but feeding a Building Management System with data).

[0] Disabled

[1] * Enabled

6-50 Terminal 42 Output

Option: Function:

Select the function of Terminal 42 as an analog current output. A motor

current of 20 mA corresponds to Imax.

[0] * No operation

[100] Output freq. 0-100 : 0 - 100 Hz, (0-20 mA)

[101] Reference Min-Max : Minimum reference - Maximum reference, (0-20 mA)

[102] Feedback +-200% : -200% to +200% of par.20-14 Maximum Reference/Feedb., (0-20 mA)

[103] Motor cur. 0-lmax : 0 - Inverter Max. Current (par.16-37 Inv. Max. Current), (0-20 mA)

[104] Torque 0-Tlim : 0 - Torque limit (par.4-16 Torque Limit Motor Mode), (0-20 mA)

[105] Torque 0-Tnom : 0 - Motor rated torque, (0-20 mA)

[106] Power 0-Pnom : 0 - Motor rated power, (0-20 mA)

[107] * Speed 0-HighLim : 0 - Speed High Limit (par.4-13 Motor Speed High Limit [RPM] and par.

4-14 Motor Speed High Limit [Hz]), (0-20 mA)

[113] : 0 - 100%, (0-20 mA) Ext. Closed Loop 1

[114] Ext. Closed Loop 2 : 0 - 100%, (0-20 mA)

[115] Ext. Closed Loop 3 : 0 - 100%, (0-20 mA)

[130]	Out frq 0-100 4-20mA	: 0 - 100 Hz
[131]	Reference 4-20mA	: Minimum Reference - Maximum Reference
[132]	Feedback 4-20mA	: -200% to +200% of par.20-14 Maximum Reference/Feedb.
[133]	Motor cur. 4-20mA	: 0 - Inverter Max. Current (par.16-37 <u>Inv. Max. Current</u>)
[134]	Torq.0-lim 4-20 mA	: 0 - Torque limit (par.4-16 <u>Torque Limit Motor Mode</u>)
[135]	Torq.0-nom 4-20mA	: 0 - Motor rated torque
[136]	Power 4-20mA	: 0 - Motor rated power
[137]	Speed 4-20mA	: 0 - Speed High Limit (4-13 and 4-14)
[139]	Bus ctrl.	: 0 - 100%, (0-20 mA)
[140]	Bus ctrl. 4-20 mA	: 0 - 100%
[141]	Bus ctrl t.o.	: 0 - 100%, (0-20 mA)
[142]	Bus ctrl t.o. 4-20mA	: 0 - 100%
[143]	Ext. CL 1 4-20mA	: 0 - 100%
[144]	Ext. CL 2 4-20mA	: 0 - 100%
[145]	Ext. CL 3 4-20mA	: 0 - 100%

NOTE: Values for setting the Minimum Reference is found in open loop par.3-02 <u>Minimum Reference</u> and for closed loop par.20-13 <u>Minimum Reference/Feedb.</u> - values for maximum reference for open loop is found in par.3-03 <u>Maximum Reference</u> and for closed loop par.20-14 <u>Maximum Reference/Feedb.</u>.

6-51 Terminal 42 Output Min Scale		
Range:	Function:	
0.00 %* [0.00 - 200.00 %]	Scale for the minimum output (0 or 4 mA) of the analogue signal at terminal 42.	
	Set the value to be the percentage of the full range of the variable selected in par.6-50 <u>Terminal 42 Output</u> .	



6-52 Terminal 42 Output Max Scale


Range:

100.00

[0.00 - 200.00 %] %*

Scale for the maximum output (20 mA) of the analog signal at terminal

Set the value to be the percentage of the full range of the variable selected in par.6-50 Terminal 42 Output.

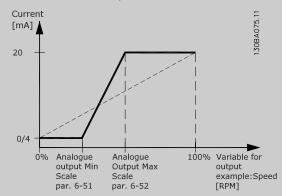

It is possible to get a value lower than 20 mA at full scale by programming values >100% by using a formula as follows:

20 mA / desired maximum current × 100 %


i.e.
$$10 \, mA : \frac{20 \, mA}{10 \, mA} \times 100 \, \% = 200 \, \%$$

EXAMPLE 1:

Variable value= OUTPUT FREQUENCY, range = 0-100 Hz

Range needed for output = 0-50 Hz

Output signal 0 or 4 mA is needed at 0 Hz (0% of range) - set par.6-51 Terminal 42 Output Min Scale to 0% Output signal 20 mA is needed at 50 Hz (50% of range) - set par.6-52 Terminal 42 Output Max Scale to 50%

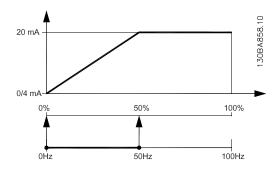


EXAMPLE 2:

Variable= FEEDBACK, range= -200% to +200%

Range needed for output= 0-100%

Output signal 0 or 4 mA is needed at 0% (50% of range) - set par.6-51 <u>Terminal 42 Output Min Scale</u> to 50% Output signal 20 mA is needed at 100% (75% of range) - set par.6-52 <u>Terminal 42 Output Max Scale</u> to 75%

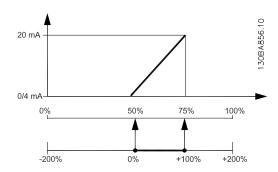


EXAMPLE 3:

Variable value= REFERENCE, range= Min ref - Max ref

Range needed for output= Min ref (0%) - Max ref (100%), 0-10 mA

Output signal 0 or 4 mA is needed at Min ref - set par.6-51 Terminal 42 Output Min Scale to 0%

Output signal 10 mA is needed at Max ref (100% of range) - set par.6-52 $\underline{\text{Terminal 42 Output Max Scale}}$ to 200% (20 mA / 10 mA x 100%=200%).

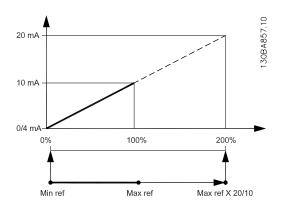

14-01	Switching Frequence	су
Option:		Function:
		Select the inverter switching frequency. Changing the switching frequency can help to reduce acoustic noise from the motor.
		NOTE: The output frequency value of the frequency converter must never exceed 1/10 of the switching frequency. When the motor is running, adjust the switching frequency in par.14-01 Switching Frequency until the motor is as noiseless as possible. See also par.14-00 Switching Pattern and the section Derating .
[0]	1.0 kHz	
[1]	1.5 kHz	
[2]	2.0 kHz	
[3]	2.5 kHz	
[4]	3.0 kHz	
[5]	3.5 kHz	
[6]	4.0 kHz	

[7] *	5.0 kHz
[8]	6.0 kHz
[9]	7.0 kHz
[10]	8.0 kHz
[11]	10.0 kHz
[12]	12.0 kHz
[13]	14.0 kHz
[14]	16.0 kHz

[14]	16.0 kHz	
20-00	Feedback 1 Source	
Option:		Function:
		Up to three different feedback signals can be used to provide the feedback signal for the frequency converter's PID Controller. This parameter defines which input will be used as the source of the first feedback signal. Analog input X30/11 and Analog input X30/12 refer to inputs on the optional General Purpose I/O board.
[0]	No function	
[1]	Analog input 53	
[2] *	Analog input 54	
[3]	Pulse input 29	
[4]	Pulse input 33	
[7]	Analog input X30/11	
[8]	Analog input X30/12	
[9]	Analog Input X42/1	
[10]	Analog Input X42/3	
[11]	Analog Input X42/5	
[100]	Bus feedback 1	
[101]	Bus feedback 2	
[102]	Bus feedback 3	

NOTE: If a feedback is not used, its source must be set to *No Function*[0]. par.20-20 <u>Feedback Function</u> determines how the three possible feedbacks will be used by the PID Controller.

	<u> </u>	
20-01	Feedback 1 Convers	sion
Option:		Function:
		This parameter allows a conversion function to be applied to Feedback 1.
[0] *	Linear	Linear [0] has no effect on the feedback.
[1]	Square root	Square root [1] is commonly used when a pressure sensor is used to provide flow feedback (($flow \propto \sqrt{pressure}$)).
[2]	Pressure to temperature	Pressure to temperature [2] is used in compressor applications to provide temperature feedback using a pressure sensor. The temperature of the refrigerant is calculated using the following formula: $ \frac{A2}{(ln(Pe+1)-A1)} - A3 , where A1, A2 and A3 are refrigerant-specific constants. The refrigerant must be selected in par. 20-30 Refrigerant. par.20-21 Setpoint 1 through par.20-23 Setpoint 3 allow the values of A1, A2 and A3 to be entered for a refrigerant that is not listed in par.20-30 Refrigerant.$

20-03 Option:		
·	Feedback 2 Source	Function:
		See par.20-00 Feedback 1 Source for details.
[0] *	No function	
[1]	Analog input 53	
[2]	Analog input 54	
[3]	Pulse input 29	
[4]	Pulse input 33	
[7]	Analog input X30/11	
[8]	Analog input X30/12	
[9]	Analog Input X42/1	
[10]	Analog Input X42/3	
[11]	Analog Input X42/5	
[100]	Bus feedback 1	
[101]	Bus feedback 2	
[102]	Bus feedback 3	
20-04	Feedback 2 Convers	
Option:		Function:
		See par.20-01 <u>Feedback 1 Conversion</u> for details.
[0] *	Linear	
[1]	Square root	
[2]	Pressure to temperature	
20-07	Feedback 3 Convers	sion
Option:		Function:
		See par.20-01 Feedback 1 Conversion for details.
[0] *	Linear	See par.20-01 Feedback 1 Conversion for details.
[0] *	Linear Square root	See par.20-01 Feedback 1 Conversion for details.
[1]	Square root	See par.20-01 Feedback 1 Conversion for details.
[1]	Square root Pressure to temperature	See par.20-01 Feedback 1 Conversion for details.
[1] [2] 20-20	Square root	
[1]	Square root Pressure to temperature	Function:
[1] [2] 20-20	Square root Pressure to temperature	
[1] [2] 20-20	Square root Pressure to temperature	Function: This parameter determines how the three possible feedbacks will be
[1] [2] 20-20 Option:	Square root Pressure to temperature Feedback Function	Function: This parameter determines how the three possible feedbacks will be used to control the output frequency of the frequency converter. Sum [0] sets up the PID Controller to use the sum of Feedback 1, Feedback
[1] [2] 20-20 Option:	Square root Pressure to temperature Feedback Function	Function: This parameter determines how the three possible feedbacks will be used to control the output frequency of the frequency converter. Sum [0] sets up the PID Controller to use the sum of Feedback 1, Feedback 2 and Feedback 3 as the feedback. NOTE: Any unused feedbacks must be set to No Function in par. 20-00 Feedback 1 Source, par. 20-03 Feedback 2 Source, or par.

[2] Average		Average [2] sets up the PID Controller to use the average of Feedback 1, Feedback 2 and Feedback 3 as the feedback.	
		NOTE: Any unused feedbacks must be set to <i>No Function</i> in par. 20-00 Feedback 1 Source, par.20-03 Feedback 2 Source, or par. 20-06 Feedback 3 Source. The sum of Setpoint 1 and any other references that are enabled (see par. group 3-1*) will be used as the PID Controller's set-point reference.	
[3] *	Minimum	Minimum [3] sets up the PID Controller to compare Feedback 1, Feedback 2 and Feedback 3 and use the lowest value as the feedback.	
		NOTE: Any unused feedbacks must be set to <i>No Function</i> in par. 20-00 Feedback 1 Source, par.20-03 Feedback 2 Source, or par. 20-06 Feedback 3 Source. Only setpoint 1 will be used. The sum of Setpoint 1 and any other references that are enabled (see par. group 3-1*) will be used as the PID Controller's setpoint reference.	
[4]	Maximum	Maximum [4] sets up the PID Controller to compare Feedback 1, Feedback 2 and Feedback 3 and use the highest value as the feedback.	
		NOTE: Any unused feedbacks must be set to <i>No Function</i> in par. 20-00 Feedback 1 Source, par.20-03 Feedback 2 Source, or par. 20-06 Feedback 3 Source.	
		Only Setpoint 1 will be used. The sum of Setpoint 1 and any other references that are enabled (see par. group 3-1*) will be used as the PID Controller's setpoint reference.	
[5]	Multi Setpoint Min	Multi-setpoint minimum [5] sets up the PID Controller to calculate the difference between Feedback 1 and Setpoint 1, Feedback 2 and Setpoint 2, and Feedback 3 and Setpoint 3. It will use the feedback/setpoint pair in which the feedback is the farthest below its corresponding setpoint reference. If all feedback signals are above their corresponding setpoints, the PID Controller will use the feedback/setpoint pair in which the difference between the feedback and setpoint is the least.	
		NOTE: If only two feedback signals are used, the feedback that is not to be used must be set to <i>No Function</i> in par.20-00 Feedback 1 Source, par. 20-03 Feedback 2 Source or par.20-06 Feedback 3 Source. Note that each setpoint reference will be the sum of its respective parameter value (par. 20-21 Setpoint 1, par.20-22 Setpoint 2 and par.20-23 Setpoint 3) and any other references that are enabled (see par. group 3-1*).	
[6]	Multi Setpoint Max	Multi-setpoint maximum [6] sets up the PID Controller to calculate the difference between Feedback 1 and Setpoint 1, Feedback 2 and Setpoint 2, and Feedback 3 and Setpoint 3. It will use the feedback/setpoint pair in which the feedback is farthest above its corresponding setpoint reference. If all feedback signals are below their corresponding setpoints, the PID Controller will use the feedback/setpoint pair in which the difference between the feedback and the setpoint reference is the least.	
		NOTE: If only two feedback signals are used, the feedback that is not to be used must be set to <i>No Function</i> in par.20-00 Feedback 1 Source, par. 20-03 Feedback 2 Source or par.20-06 Feedback 3 Source. Note that each setpoint reference will be the sum of its respective parameter value (par. 20-21 Setpoint 1, par.20-22 Setpoint 2 and par.20-23 Setpoint 3) and any other references that are applied (see par group 3.1*)	

NOTE: Any unused feedback must be set to "No function" in its Feedback Source parameter: par.20-00 <u>Feedback 1 Source</u>, par.20-03 <u>Feedback 2 Source</u> or par.20-06 <u>Feedback 3 Source</u>.

other references that are enabled (see par. group 3-1*).

The feedback resulting from the function selected in par.20-20 Feedback Function will be used by the PID Controller to control the output frequency of the frequency converter. This feedback can also be shown on the frequency converter's display, be used to control a frequency converter's analog output, and be transmitted over various serial communication protocols.


The frequency converter can be configured to handle multi zone applications. Two different multi zone applications are supported:

- Multi zone, single setpoint
- Multi zone, multi setpoint

The difference between the two is illustrated by the following examples:

Example 1 - Multi zone, single setpoint

In an office building, a VAV (variable air volume) TR200 system must ensure a minimum pressure at selected VAV boxes. Due to the varying pressure losses in each duct, the pressure at each VAV box cannot be assumed to be the same. The minimum pressure required is the same for all VAV boxes. This control method can be set up by setting par.20-20 Feedback Function to option [3], Minimum, and entering the desired pressure in par. 20-21 Setpoint 1. The PID Controller will increase the speed of the fan if any one feedback is below the setpoint and decrease the speed of the fan if all feedbacks are above the setpoint.

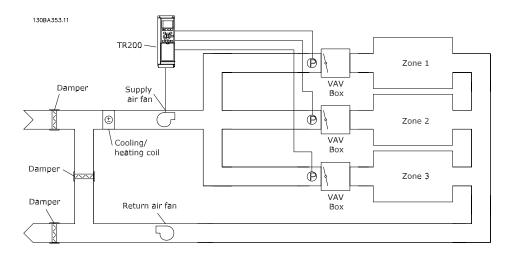

Example 2 - Multi zone, multi setpoint

The previous example can be used to illustrate the use of multi zone, multi setpoint control. If the zones require different pressures for each VAV box, each setpoint may be specified in par.20-21 Setpoint 1, par.20-22 Setpoint 2 and par.20-23 Setpoint 3. By selecting Multi setpoint minimum, [5], in par.20-20 Feedback Function, the PID Controller will increase the speed of the fan if any one of the feedbacks is below its setpoint and decrease the speed of the fan if all feedbacks are above their individual setpoints.

20-21 Setpoint 1	
Range:	Function:
0.000 [-999999.999 - 999999.999 Proc- ProcessCtrlUnit] essCtrlU- nit*	Setpoint 1 is used in Closed Loop Mode to enter a setpoint reference that is used by the frequency converter's PID Controller. See the description of par.20-20 Feedback Function. NOTE: Setpoint reference entered here is added to any other references that are enabled (see par. group 3-1*).

20-22 Setpoint 2	
Range:	Function:
0.000 [-999999.999 - 9999 Proc- ProcessCtrlUnit] essCtrlU- nit*	9.999 Setpoint 2 is used in Closed Loop Mode to enter a setpoint reference that may be used by the frequency converter's PID Controller. See the description of <i>Feedback Function</i> , par.20-20 Feedback Function.

NOTE: The set-point reference entered here is added to any other references that are enabled (see par. group 3-1*).

20-81 PID Normal/Inverse Control			
Option:		Function:	
[0] *	Normal	Normal [0] causes the frequency converter's output frequency to decrease when the feedback is greater than the setpoint reference. This is common for pressure-controlled supply fan and pump applications.	
[1]	Inverse	<i>Inverse</i> [1] causes the frequency converter's output frequency to increase when the feedback is greater than the setpoint reference. This is common for temperature-controlled cooling applications, such as cooling towers.	

20-93	PID Proportional Gain	
Range:	Function:	
0.50 N/ A*	[0.00 - 10.00 N/A]	

If (Error x Gain) jumps with a value equal to what is set in par.20-14 <u>Maximum Reference/Feedb.</u> the PID controller will try to change the output speed equal to what is set in par.4-13 <u>Motor Speed High Limit [RPM]</u>/par.4-14 <u>Motor Speed High Limit [Hz]</u> but in practice of course limited by this setting.

The proportional band (error causing output to change from 0-100%) can be calculated by means of the formula:

$$\left(\frac{1}{\textit{Proportional Gain}}\right) \times \left(\textit{Max Reference}\right)$$

NOTE: Always set the desired for par.20-14 <u>Maximum Reference/Feedb.</u> before setting the values for the PID controller in par. group 20-9*.

20-94 PID Integral Time	
Range:	Function:
20.00 s* [0.01 - 10000.00 s]	Over time, the integrator accumulates a contribution to the output from the PID controller as long as there is a deviation between the Reference/Setpoint and feedback signals. The contribution is proportional to the size of the deviation. This ensures that the deviation (error) approaches zero. Quick response on any deviation is obtained when the integral time is set to a low value. Setting it too low, however, may cause the control to become unstable. The value set, is the time needed for the integrator to add the same contribution as the proportional part for a certain deviation. If the value is set to 10,000, the controller will act as a pure proportional controller with a P-band based on the value set in par.20-93 PID Proportional Gain. When no deviation is present, the output from the proportional controller will be 0.

22-22 Low Speed Detection			
Option:		Function:	
[0] *	Disabled		
[1]	Enabled	Select Enabled for detecting when the motor operates with a speed as set in par.4-11 Motor Speed Low Limit [RPM] or par.4-12 Motor Speed Low Limit [Hz].	

		Low Limit [Hz].
22-23	No-Flow Function	on .
Commor	actions for Low Power Dete	ection and Low Speed Detection (Individual selections not possible).
Option	:	Function:
[0] *	Off	
[1]	Sleep Mode	The drive will enter Sleep Mode and stop when a No Flow condition is detected. See parameter group 22-4* for programming options for Sleep Mode.
[2]	Warning	The drive will continue to run, but activate a No-Flow Warning [W92]. A drive digital output or a serial communication bus can communicate a warning to other equipment.
[3]	Alarm	The drive will stop running and activate a No-Flow Alarm [A 92]. A drive digital output or a serial communication bus can communicate an alarm to other equipment.

Note

Do not set par.14-20 Reset Mode, to [13] Infinite auto reset, when par.22-23 No-Flow Function is set to [3] Alarm. Doing so will cause the drive to continuously cycle between running and stopping when a No Flow condition is detected.

Note

If the drive is equipped with a constant speed bypass with an automatic bypass function that starts the bypass if the drive experiences a persistent alarm condition, be sure to disable the bypass's automatic bypass function, if [3] Alarm is selected as the No-Flow Function.

22-24	No-Flow Delay	
Range:		Function:
10 s*	[1 - 600 s]	Set the time Low Power/Low Speed must stay detected to activate signal for actions. If detection disappears before run out of the timer, the timer will be reset.
22-40	Minimum Run Time	
Range:		Function:
10 s*	[0 - 600 s]	Set the desired minimum running time for the motor after a start command (digital input or Bus) before entering Sleep Mode.
22-41	Minimum Sleep Tim	е
Range:		Function:
10 s*	[0 - 600 s]	Set the desired Minimum Time for staying in Sleep Mode. This will override any wake up conditions.



22-42	Wake-u	o Speed	[RPM]

Range: Function:

0 RPM* [par. 4-11 - par. 4-13 RPM] To be used if par.0-02 Motor Speed Unit has been set for RPM (parameter not visible if Hz selected). Only to be used if par.1-00 Configuration

Mode is set for Open Loop and speed reference is applied by an external

controller.

Set the reference speed at which the Sleep Mode should be cancelled.

22-60 Broken Belt Function

Selects the action to be performed if the Broken Belt condition is detected

Selects the action to be performed if the broken belt condition is detected			
Option:		Function:	
[0] *	Off		
[1]	Warning	The drive will continue to run, but activate a Broken Belt Warning [W95]. A drive digital output or a serial communication bus can communicate a warning to other equipment.	
[2]	Trip	The drive will stop running and activate a Broken Belt alarm [A 95]. A drive digital output or a serial communication bus can communicate an alarm to other equipment.	

Note

Do not set par.14-20 Reset Mode, to [13] Infinite auto reset, when par.22-60 Broken Belt Function is set to [2] Trip. Doing so will cause the drive to continuously cycle between running and stopping when a broken belt condition is detected.

Note

If the drive is equipped with a constant speed bypass with an automatic bypass function that starts the bypass if the drive experiences a persistent alarm condition, be sure to disable the bypass's automatic bypass function, if [2] Trip is selected as the Broken Belt Function.

22-61	Broken Belt	Torque

Range:	Function:
10 %* [0 - 100 %]	Sets the broken belt torque as a percentage of the rated motor torque.

22-62 Broken Belt Delay

22-02 blokeli bell belay	
Range:	Function:
10 s [0 - 600 s]	Sets the time for which the Broken Belt conditions must be active before carrying out the action selected in par.22-60 Broken Belt Function.

22-75 Short Cycle Protection

Option	:	Function:
[0] *	Disabled	Timer set in par.22-76 Interval between Starts is disabled.
[1]	Enabled	Timer set in par.22-76 Interval between Starts is enabled.

22-76 Interval between Starts

Range:	Function:
par. [par. 22-77 - 3600 s] 22-77 s*	Sets the time desired as minimum time between two starts. Any normal start command (Start/Jog/Freeze) will be disregarded until the timer has expired.

22-77	Minimum Run Time	
Range:		Function:
0 s*	[0 - par. 22-76 s]	Sets the time desired as minimum run time after a normal start command (Start/Jog/Freeze). Any normal stop command will be disregarded until the set time has expired. The timer will start counting following a normal start command (Start/Jog/Freeze). The timer will be overridden by a Coast (Inverse) or an External Interlock command.
		command.

NOTE: Does not work in cascade mode.

Main Menu Mode

The keypad provides access to the main menu mode. Select the Main Menu mode by pressing the [Main Menu] key. Illustration 6.2 shows the resulting readout, which appears on the display of the GLCPkeypad.

Lines 2 through 5 on the display show a list of parameter groups which can be chosen by toggling the up and down buttons.

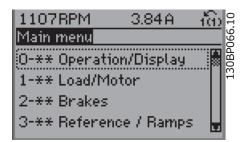


Illustration 6. 9: Display example.

Each parameter has a name and number which remain the same regardless of the programming mode. In the Main Menu mode, the parameters are divided into groups. The first digit of the parameter number (from the left) indicates the parameter group number.

All parameters can be changed in the Main Menu. The configuration of the unit (par.1-00 Configuration Mode) will determine other parameters available for programming. For example, selecting Closed Loop enables additional parameters related to closed loop operation. Option cards added to the unit enable additional parameters associated with the option device.

Parameter Selection

In the Main Menu mode, the parameters are divided into groups. Select a parameter group by means of the navigation keys.

The following parameter groups are accessible:

Group no.	Parameter group:
0	Operation/Display
1	Load/Motor
2	Brakes
3	References/Ramps
4	Limits/Warnings
5	Digital In/Out
6	Analog In/Out
8	Comm. and Options
9	Profibus
10	CAN Fieldbus
11	LonWorks
13	Smart Logic
14	Special Functions
15	Drive Information
16	Data Readouts
18	Data Readouts 2
20	Drive Closed Loop
21	Ext. Closed Loop
22	Application Functions
23	Time-based Functions
24	Fire Mode
25	Cascade Controller
26	Analog I/O Option MCB 109

Table 6. 3: Parameter groups.

After selecting a parameter group, choose a parameter by means of the navigation keys.

The middle section on the GLCP display shows the parameter number and name as well as the selected parameter value.



Illustration 6. 10: Display example.

Changing Data

- 1. Press [Quick Menu] or [Main Menu] key.
- 2. Use [▲] and $[\blacktriangledown]$ keys keys to find parameter group to edit.
- 3. Press [OK] key.
- 4. Use [▲] and [▼] keys to find parameter to edit.
- 5. Press [OK] key.
- 6. Use [▲] and [▼] keys to select correct parameter setting. Or, to move to digits within a number, use keys. Cursor indicates digit selected to change. [▲] key increases the value, [▼] key decreases the value.
- 7. Press [Cancel] key to disregard change, or press [OK] key to accept change and enter new setting.

Changing a Text Value

If the selected parameter is a text value, change the text value by means of the up/down navigation keys. The up key increases the value, and the down key decreases the value. Place the cursor on the value to be saved and press [OK].

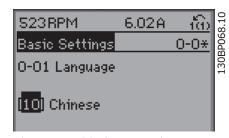


Illustration 6. 11: Display example.

Changing a Group of Numeric Data Values

If the chosen parameter represents a numeric data value, change the chosen data value by means of the [◄] and [►] navigation keys as well as the up/down [♠] [▼] navigation keys. Use the ◄] and [►] navigation keys to move the cursor horizontally.

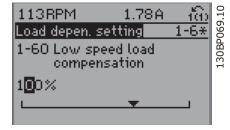


Illustration 6. 13: Display example.

Use the up/down navigation keys to change the data value. The up key enlarges the data value, and the down key reduces the data value. Place the cursor on the value to be saved and press [OK].

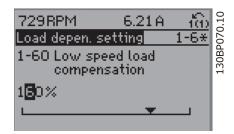


Illustration 6. 14: Display example.

Changing of Data Value, Step-by-Step

Certain parameters can be changed step by step or infinitely variably. This applies to par.1-20 <u>Motor Power [kW]</u>, par.1-22 <u>Motor Voltage</u> and par.1-23 <u>Motor Frequency</u>.

The parameters are changed both as a group of numeric data values and as numeric data values infinitely variably.

Read-out and Programming of Indexed Parameters

Parameters are indexed when placed in a rolling stack.

Par.15-30 <u>Alarm Log: Error Code</u> to par.15-32 <u>Alarm Log: Time</u> contain a fault log which can be read out. Choose a parameter, press [OK], and use the up/down navigation keys to scroll through the value log.

Use par.3-10 Preset Reference as another example:

Choose the parameter, press [OK], and use the up/down navigation keys keys to scroll through the indexed values. To change the parameter value, select the indexed value and press [OK]. Change the value by using the up/down keys. Press [OK] to accept the new setting. Press [Cancel] to abort. Press [Back] to leave the parameter.

Parameter Lists TR200

Default Settings

Changes during operation:

"TRUE" means that the parameter can be changed while the frequency converter is in operation and "FALSE" means that the frequency converter must be stopped before a change can be made.

4-Set-up:

'All set-up': the parameter can be set individually in each of the four set-ups, i. e. one single parameter can have four different data values.

'1 set-up': data value will be the same in all set-ups.

SR:

Size related

N/A:

No default value available.

Conversion index:

This number refers to a conversion figure used when writing or reading by means of a frequency converter.

П																
	Conv. index	100	67	6	5	4	3	2	1	0	-1	-2	-3	-4	-5	-6
	Conv. factor	1	1/60	1000000	100000	10000	1000	100	10	1	0.1	0.01	0.001	0.0001	0.00001	0.000001

Data type	Description	Type
2	Integer 8	Int8
3	Integer 16	Int16
4	Integer 32	Int32
5	Unsigned 8	Uint8
6	Unsigned 16	Uint16
7	Unsigned 32	Uint32
9	Visible String	VisStr
33	Normalized value 2 bytes	N2
35	Bit sequence of 16 boolean variables	V2
54	Time difference w/o date	TimD



0-** Operation and Display

i			4-set-up	Change during opera- tion	Conv- er- sion in- dex	Type
0-0* Basi	ic Settings					
0-01 L	.anguage	[0] English	1 set-up	TRUE	-	Uint8
0-02 N	Notor Speed Unit	[1] Hz	2 set-ups	FALSE	-	Uint8
0-03 R	Regional Settings	[0] International	2 set-ups	FALSE	-	Uint8
0-04 O	Operating State at Power-up	[0] Resume	All set-ups	TRUE	-	Uint8
0-05 L	ocal Mode Unit	[0] As Motor Speed Unit	2 set-ups	FALSE	-	Uint8
0-1* Set-	up Operations					
0-10 A	Active Set-up	[1] Set-up 1	1 set-up	TRUE	-	Uint8
0-11 P	Programming Set-up	[9] Active Set-up	All set-ups	TRUE	-	Uint8
0-12 T	his Set-up Linked to	[0] Not linked	All set-ups	FALSE	-	Uint8
0-13 R	Readout: Linked Set-ups	0 N/A	All set-ups	FALSE	0	Uint16
R	Readout: Prog. Set-ups / Chan-					
0-14 n	nel .	0 N/A	All set-ups	TRUE	0	Int32
0-2* LCP	Display		·			
	Display Line 1.1 Small	1602	All set-ups	TRUE	-	Uint16
	Display Line 1.2 Small	1614	All set-ups	TRUE	-	Uint16
	Display Line 1.3 Small	1610	All set-ups	TRUE	-	Uint16
	Display Line 2 Large	1613	All set-ups	TRUE	-	Uint16
	Display Line 3 Large	1502	All set-ups	TRUE	-	Uint16
	My Personal Menu	ExpressionLimit	1 set-up	TRUE	0	Uint16
0-3* LCP	Custom Readout	·	•			
0-30 C	Custom Readout Unit	[1] %	All set-ups	TRUE	-	Uint8
0-31 C	Custom Readout Min Value	ExpressionLimit	All set-ups	TRUE	-2	Int32
		100.00 CustomReadou-				
0-32 C	Custom Readout Max Value	tUnit	All set-ups	TRUE	-2	Int32
						VisStr[2
0-37 D	Display Text 1	0 N/A	1 set-up	TRUE	0	5]
						VisStr[2
0-38 D	Display Text 2	0 N/A	1 set-up	TRUE	0	5]
						VisStr[2
0-39 D	Display Text 3	0 N/A	1 set-up	TRUE	0	5]
0-4* LCP	Keypad					
0-40 [H	Hand on] Key on LCP	[1] Enabled	All set-ups	TRUE	-	Uint8
	Off] Key on LCP	[1] Enabled	All set-ups	TRUE	-	Uint8
	Auto on] Key on LCP	[1] Enabled	All set-ups	TRUE	-	Uint8
	Reset] Key on LCP	[1] Enabled	All set-ups	TRUE	-	Uint8
	Off/Reset] Key on LCP	[1] Enabled	All set-ups	TRUE	-	Uint8
0-45 [[Drive Bypass] Key on LCP	[1] Enabled	All set-ups	TRUE	-	Uint8



Par. No. #	Parameter description	Default value	4-set-up	Change during opera- tion	Conv- er- sion in- dex	Type
0-50	LCP Copy	[0] No copy	All set-ups	FALSE	-	Uint8
0-51	Set-up Copy	[0] No copy	All set-ups	FALSE	-	Uint8
0-6* Pa	ssword				·	
0-60	Main Menu Password	100 N/A	1 set-up	TRUE	0	Int16
	Access to Main Menu w/o Pass-					
0-61	word	[0] Full access	1 set-up	TRUE	-	Uint8
0-65	Personal Menu Password	200 N/A	1 set-up	TRUE	0	Int16
	Access to Personal Menu w/o					
0-66	Password	[0] Full access	1 set-up	TRUE	-	Uint8
0-7* Clo	ock Settings					
						TimeOf-
0-70	Date and Time	ExpressionLimit	All set-ups	TRUE	0	Day
0-71	Date Format	null	1 set-up	TRUE	-	Uint8
0-72	Time Format	null	1 set-up	TRUE	-	Uint8
0-74	DST/Summertime	[0] Off	1 set-up	TRUE	-	Uint8
						TimeOf-
0-76	DST/Summertime Start	ExpressionLimit	1 set-up	TRUE	0	Day
						TimeOf-
0-77	DST/Summertime End	ExpressionLimit	1 set-up	TRUE	0	Day
0-79	Clock Fault	null	1 set-up	TRUE	-	Uint8
0-81	Working Days	null	1 set-up	TRUE	-	Uint8
						TimeOf-
0-82	Additional Working Days	ExpressionLimit	1 set-up	TRUE	0	Day
						TimeOf-
0-83	Additional Non-Working Days	ExpressionLimit	1 set-up	TRUE	0	Day
0-89	Date and Time Readout	0 N/A	All set-ups	TRUE	0	VisStr[2 5]



1-** Load / Motor

1-0* General Settings	Uint8
	Uint8
1-00 Configuration Mode null All set-ups TRUE -	
[3] Auto Energy Optim.	
1-03 Torque Characteristics VT All set-ups TRUE -	Uint8
1-2* Motor Data	
1-20 Motor Power [kW] ExpressionLimit All set-ups FALSE 1	Uint32
1-21 Motor Power [HP] ExpressionLimit All set-ups FALSE -2	Uint32
1-22 Motor Voltage ExpressionLimit All set-ups FALSE 0	Uint16
1-23 Motor Frequency ExpressionLimit All set-ups FALSE 0	Uint16
1-24 Motor Current ExpressionLimit All set-ups FALSE -2	Uint32
1-25 Motor Nominal Speed ExpressionLimit All set-ups FALSE 67	Uint16
1-28 Motor Rotation Check [0] Off All set-ups FALSE -	Uint8
Automatic Motor Adaptation	
1-29 (AMA) [0] Off All set-ups FALSE -	Uint8
1-3* Adv. Motor Data	
1-30 Stator Resistance (Rs) ExpressionLimit All set-ups FALSE -4	Uint32
1-31 Rotor Resistance (Rr) ExpressionLimit All set-ups FALSE -4	Uint32
1-35 Main Reactance (Xh) ExpressionLimit All set-ups FALSE -4	Uint32
1-36 Iron Loss Resistance (Rfe) ExpressionLimit All set-ups FALSE -3	Uint32
1-39 Motor Poles ExpressionLimit All set-ups FALSE 0	Uint8
1-5* Load Indep. Setting	
Motor Magnetisation at Zero	
1-50 Speed 100 % All set-ups TRUE 0	Uint16
Min Speed Normal Magnetis-	
1-51 ing [RPM] ExpressionLimit All set-ups TRUE 67	Uint16
Min Speed Normal Magnetis-	
1-52 ing [Hz] ExpressionLimit All set-ups TRUE -1	Uint16
1-6* Load Depen. Setting	
Low Speed Load Compensa-	
1-60 tion 100 % All set-ups TRUE 0	Int16
High Speed Load Compensa-	
1-61 tion 100 % All set-ups TRUE 0	Int16
1-62 Slip Compensation 0 % All set-ups TRUE 0	Int16
Slip Compensation Time Con-	
1-63 stant ExpressionLimit All set-ups TRUE -2	Uint16
1-64 Resonance Dampening 100 % All set-ups TRUE 0	Uint16
Resonance Dampening Time	
1-65 Constant 5 ms All set-ups TRUE -3	Uint8
1-7* Start Adjustments	
1-71 Start Delay 0.0 s All set-ups TRUE -1	Uint16
1-73 Flying Start [0] Disabled All set-ups FALSE -	Uint8

Par. No	o. Parameter description	Default value	4-set-up	Change during opera- tion	Conver- sion in- dex	Туре
1-8* S	Stop Adjustments					
1-80	Function at Stop	[0] Coast	All set-ups	TRUE	_	Uint8
	Min Speed for Function at Stop					
1-81	[RPM]	ExpressionLimit	All set-ups	TRUE	67	Uint16
	Min Speed for Function at Stop					
1-82	[Hz]	ExpressionLimit	All set-ups	TRUE	-1	Uint16
1-86	Trip Speed Low [RPM]	0 RPM	All set-ups	TRUE	67	Uint16
1-87	Trip Speed Low [Hz]	0.0 Hz	All set-ups	TRUE	-1	Uint16
1-9* N	Notor Temperature					
1-90	Motor Thermal Protection	[4] ETR trip 1	All set-ups	TRUE	-	Uint8
1-91	Motor External Fan	[0] No	All set-ups	TRUE	-	Uint16
1-93	Thermistor Source	[0] None	All set-ups	TRUE	-	Uint8

2-** Brakes

Par. No. #	Parameter description	Default value	4-set-up	Change during opera- tion	Conver- sion in- dex	Type
2-0* DC	-Brake					
2-00	DC Hold/Preheat Current	50 %	All set-ups	TRUE	0	Uint8
2-01	DC Brake Current	50 %	All set-ups	TRUE	0	Uint16
2-02	DC Braking Time	10.0 s	All set-ups	TRUE	-1	Uint16
2-03	DC Brake Cut In Speed [RPM]	ExpressionLimit	All set-ups	TRUE	67	Uint16
2-04	DC Brake Cut In Speed [Hz]	ExpressionLimit	All set-ups	TRUE	-1	Uint16
2-1* Bra	ake Energy Funct.					
2-10	Brake Function	[0] Off	All set-ups	TRUE	-	Uint8
2-11	Brake Resistor (ohm)	ExpressionLimit	All set-ups	TRUE	0	Uint16
2-12	Brake Power Limit (kW)	ExpressionLimit	All set-ups	TRUE	0	Uint32
2-13	Brake Power Monitoring	[0] Off	All set-ups	TRUE	-	Uint8
2-15	Brake Check	[0] Off	All set-ups	TRUE	-	Uint8
2-16	AC brake Max. Current	100.0 %	All set-ups	TRUE	-1	Uint32
2-17	Over-voltage Control	[2] Enabled	All set-ups	TRUE	-	Uint8



3-** Reference / Ramps

#	Parameter description	Default value	4-set-up	Change during operation	Conver- sion in- dex	Туре
	eference Limits					
3-02	Minimum Reference	ExpressionLimit	All set-ups	TRUE	-3	Int32
3-03	Maximum Reference	ExpressionLimit	All set-ups	TRUE	-3	Int32
3-04	Reference Function	null	All set-ups	TRUE	-	Uint8
	eferences					
3-10	Preset Reference	0.00 %	All set-ups	TRUE	-2	Int16
3-11	Jog Speed [Hz]	ExpressionLimit	All set-ups	TRUE	-1	Uint16
		[0] Linked to Hand / Au-				
3-13	Reference Site	to	All set-ups	TRUE	-	Uint8
3-14	Preset Relative Reference	0.00 %	All set-ups	TRUE	-2	Int32
3-15	Reference 1 Source	[1] Analog input 53	All set-ups	TRUE	-	Uint8
3-16	Reference 2 Source	[20] Digital pot.meter	All set-ups	TRUE	-	Uint8
3-17	Reference 3 Source	[0] No function	All set-ups	TRUE	-	Uint8
3-19	Jog Speed [RPM]	ExpressionLimit	All set-ups	TRUE	67	Uint16
3-4* Ra	amp 1					
3-40	Ramp 1 Type	[0] Linear	All set-ups	TRUE	-	Uint8
3-41	Ramp 1 Ramp up Time	ExpressionLimit	All set-ups	TRUE	-2	Uint32
3-42	Ramp 1 Ramp Down Time	ExpressionLimit	All set-ups	TRUE	-2	Uint32
	Ramp 1 S-ramp Ratio at Accel.	·				
3-45	Start	50 %	All set-ups	TRUE	0	Uint8
	Ramp 1 S-ramp Ratio at Accel.		·			
3-46	End	50 %	All set-ups	TRUE	0	Uint8
	Ramp 1 S-ramp Ratio at Decel.					
3-47	Start	50 %	All set-ups	TRUE	0	Uint8
	Ramp 1 S-ramp Ratio at Decel.					
3-48	End	50 %	All set-ups	TRUE	0	Uint8
3-5* Ra	amp 2		•			
3-50	Ramp 2 Type	[0] Linear	All set-ups	TRUE	-	Uint8
3-51	Ramp 2 Ramp up Time	ExpressionLimit	All set-ups	TRUE	-2	Uint32
3-52	Ramp 2 Ramp down Time	ExpressionLimit	All set-ups	TRUE	-2	Uint32
	Ramp 2 S-ramp Ratio at Accel.	•				
3-55	Start	50 %	All set-ups	TRUE	0	Uint8
	Ramp 2 S-ramp Ratio at Accel.		•			
3-56	End	50 %	All set-ups	TRUE	0	Uint8
	Ramp 2 S-ramp Ratio at Decel.					
3-57	Start	50 %	All set-ups	TRUE	0	Uint8
	Ramp 2 S-ramp Ratio at Decel.	/•	23. 250			2
3-58	End	50 %	All set-ups	TRUE	0	Uint8
	ther Ramps					
3-80	Jog Ramp Time	ExpressionLimit	All set-ups	TRUE	-2	Uint32
3-81	Quick Stop Ramp Time	ExpressionLimit	2 set-ups	TRUE	-2	Uint32
3-84	Initial Ramp Time	ExpressionLimit	All set-ups	TRUE	-2	Uint16
3-88	Final Ramp Time	ExpressionLimit	All set-ups	TRUE	-2	Uint16
	That hamp time		, iii oot aps	11101		J



Par. No	o. Parameter description	Default value	4-set-up	Change during opera- tion	Conver- sion in- dex	Type
3-9* E	Digital Pot.Meter					
3-90	Step Size	0.10 %	All set-ups	TRUE	-2	Uint16
3-91	Ramp Time	1.00 s	All set-ups	TRUE	-2	Uint32
3-92	Power Restore	[0] Off	All set-ups	TRUE	-	Uint8
3-93	Maximum Limit	100 %	All set-ups	TRUE	0	Int16
3-94	Minimum Limit	0 %	All set-ups	TRUE	0	Int16
3-95	Ramp Delay	ExpressionLimit	All set-ups	TRUE	-3	TimD


4-** Limits / Warnings

Par. No. #	Parameter description	Default value	4-set-up	Change during opera- tion	Conver- sion in- dex	Туре
4-1* Mo	tor Limits					
4-10	Motor Speed Direction	[2] Both directions	All set-ups	FALSE	-	Uint8
4-11	Motor Speed Low Limit [RPM]	ExpressionLimit	All set-ups	TRUE	67	Uint16
4-12	Motor Speed Low Limit [Hz]	ExpressionLimit	All set-ups	TRUE	-1	Uint16
4-13	Motor Speed High Limit [RPM]	ExpressionLimit	All set-ups	TRUE	67	Uint16
4-14	Motor Speed High Limit [Hz]	ExpressionLimit	All set-ups	TRUE	-1	Uint16
4-16	Torque Limit Motor Mode	110.0 %	All set-ups	TRUE	-1	Uint16
4-17	Torque Limit Generator Mode	100.0 %	All set-ups	TRUE	-1	Uint16
4-18	Current Limit	ExpressionLimit	All set-ups	TRUE	-1	Uint32
4-19	Max Output Frequency	ExpressionLimit	All set-ups	FALSE	-1	Uint16
4-5* Ad	j. Warnings					
4-50	Warning Current Low	0.00 A	All set-ups	TRUE	-2	Uint32
4-51	Warning Current High	ImaxVLT (P1637)	All set-ups	TRUE	-2	Uint32
4-52	Warning Speed Low	0 RPM	All set-ups	TRUE	67	Uint16
		outputSpeedHighLimit				
4-53	Warning Speed High	(P413)	All set-ups	TRUE	67	Uint16
4-54	Warning Reference Low	-999999.999 N/A	All set-ups	TRUE	-3	Int32
4-55	Warning Reference High	999999.999 N/A	All set-ups	TRUE	-3	Int32
		-999999.999 ProcessCtr-				
4-56	Warning Feedback Low	lUnit	All set-ups	TRUE	-3	Int32
		999999.999 ProcessCtr-				
4-57	Warning Feedback High	lUnit	All set-ups	TRUE	-3	Int32
4-58	Missing Motor Phase Function	[2] Trip 1000 ms	All set-ups	TRUE	-	Uint8
4-6* Sp	eed Bypass					
4-60	Bypass Speed From [RPM]	ExpressionLimit	All set-ups	TRUE	67	Uint16
4-61	Bypass Speed From [Hz]	ExpressionLimit	All set-ups	TRUE	-1	Uint16
4-62	Bypass Speed To [RPM]	ExpressionLimit	All set-ups	TRUE	67	Uint16
4-63	Bypass Speed To [Hz]	ExpressionLimit	All set-ups	TRUE	-1	Uint16
4-64	Semi-Auto Bypass Set-up	[0] Off	All set-ups	FALSE	-	Uint8



5-** Digital In / Out

#	Parameter description	Default value	4-set-up	Change during opera- tion	Conver- sion in- dex	Type
	gital I/O mode					
5-01	Terminal 27 Mode	[0] Input	All set-ups	TRUE	-	Uint8
5-02	Terminal 29 Mode	[0] Input	All set-ups	TRUE	-	Uint8
	gital Inputs					
5-10	Terminal 18 Digital Input	[8] Start	All set-ups	TRUE	-	Uint8
5-11	Terminal 19 Digital Input	[0] No operation	All set-ups	TRUE	-	Uint8
5-12	Terminal 27 Digital Input	null	All set-ups	TRUE	-	Uint8
5-13	Terminal 29 Digital Input	[14] Jog	All set-ups	TRUE	-	Uint8
5-14	Terminal 32 Digital Input	[0] No operation	All set-ups	TRUE	-	Uint8
5-15	Terminal 33 Digital Input	[0] No operation	All set-ups	TRUE	-	Uint8
5-16	Terminal X30/2 Digital Input	[0] No operation	All set-ups	TRUE	-	Uint8
5-17	Terminal X30/3 Digital Input	[0] No operation	All set-ups	TRUE	-	Uint8
5-18	Terminal X30/4 Digital Input	[0] No operation	All set-ups	TRUE	-	Uint8
	gital Outputs					
5-30	Terminal 27 Digital Output	[0] No operation	All set-ups	TRUE	-	Uint8
5-31	Terminal 29 Digital Output	[0] No operation	All set-ups	TRUE	-	Uint8
	Term X30/6 Digi Out (MCB					
5-32	101)	[0] No operation	All set-ups	TRUE	-	Uint8
	Term X30/7 Digi Out (MCB					
5-33	101)	[0] No operation	All set-ups	TRUE	-	Uint8
5-4* Re						
5-40	Function Relay	null	All set-ups	TRUE	-	Uint8
5-41	On Delay, Relay	0.01 s	All set-ups	TRUE	-2	Uint16
5-42	Off Delay, Relay	0.01 s	All set-ups	TRUE	-2	Uint16
5-5* Pu	Ise Input					
5-50	Term. 29 Low Frequency	100 Hz	All set-ups	TRUE	0	Uint32
5-51	Term. 29 High Frequency	100 Hz	All set-ups	TRUE	0	Uint32
	Term. 29 Low Ref./Feedb. Val-					
5-52	ue	0.000 N/A	All set-ups	TRUE	-3	Int32
	Term. 29 High Ref./Feedb. Val-					
5-53	ue	100.000 N/A	All set-ups	TRUE	-3	Int32
5-54	Pulse Filter Time Constant #29	100 ms	All set-ups	FALSE	-3	Uint16
5-55	Term. 33 Low Frequency	100 Hz	All set-ups	TRUE	0	Uint32
5-56	Term. 33 High Frequency	100 Hz	All set-ups	TRUE	0	Uint32
	Term. 33 Low Ref./Feedb. Val-					
5-57	ue	0.000 N/A	All set-ups	TRUE	-3	Int32
	Term. 33 High Ref./Feedb. Val-					
5-58	ue	100.000 N/A	All set-ups	TRUE	-3	Int32
5-59	Pulse Filter Time Constant #33	100 ms	All set-ups	FALSE	-3	Uint16
5-6* Pu	Ise Output					
	Terminal 27 Pulse Output Var-					
5-60	iable	[0] No operation	All set-ups	TRUE	-	Uint8
5-62	Pulse Output Max Freq #27	5000 Hz	All set-ups	TRUE	0	Uint32
	Terminal 29 Pulse Output Var-					
5-63	iable	[0] No operation	All set-ups	TRUE	-	Uint8
5-65	Pulse Output Max Freq #29	5000 Hz	All set-ups	TRUE	0	Uint32
	Terminal X30/6 Pulse Output					
5-66	Variable	[0] No operation	All set-ups	TRUE	-	Uint8
5-68	Pulse Output Max Freq #X30/6	5000 Hz	All set-ups	TRUE	0	Uint32

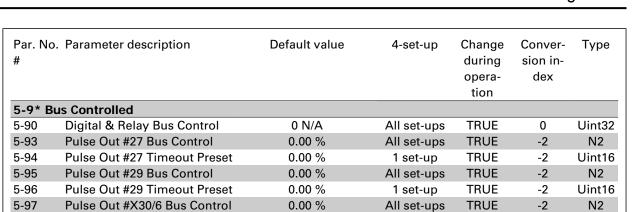

0.00 %

1 set-up

TRUE

-2

Uint16

Pulse Out #X30/6 Timeout Pre-

5-98

set



6-** Analog In / Out

#	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
	alog I/O Mode					
6-00	Live Zero Timeout Time	10 s	All set-ups	TRUE	0	Uint8
6-01	Live Zero Timeout Function	[0] Off	All set-ups	TRUE	-	Uint8
	Fire Mode Live Zero Timeout					
6-02	Function	[0] Off	All set-ups	TRUE	-	Uint8
	alog Input 53					
6-10	Terminal 53 Low Voltage	0.07 V	All set-ups	TRUE	-2	Int16
6-11	Terminal 53 High Voltage	10.00 V	All set-ups	TRUE	-2	Int16
6-12	Terminal 53 Low Current	4.00 mA	All set-ups	TRUE	-5	Int16
6-13	Terminal 53 High Current	20.00 mA	All set-ups	TRUE	-5	Int16
	Terminal 53 Low Ref./Feedb.				_	
6-14	Value	0.000 N/A	All set-ups	TRUE	-3	Int32
	Terminal 53 High Ref./Feedb.					
6-15	Value	ExpressionLimit	All set-ups	TRUE	-3	Int32
	Terminal 53 Filter Time Con-					
6-16	stant	0.001 s	All set-ups	TRUE	-3	Uint16
6-17	Terminal 53 Live Zero	[1] Enabled	All set-ups	TRUE	-	Uint8
	alog Input 54				-	
6-20	Terminal 54 Low Voltage	0.07 V	All set-ups	TRUE	-2	Int16
6-21	Terminal 54 High Voltage	10.00 V	All set-ups	TRUE	-2	Int16
6-22	Terminal 54 Low Current	4.00 mA	All set-ups	TRUE	-5	Int16
6-23	Terminal 54 High Current	20.00 mA	All set-ups	TRUE	-5	Int16
	Terminal 54 Low Ref./Feedb.					
6-24	Value	0.000 N/A	All set-ups	TRUE	-3	Int32
	Terminal 54 High Ref./Feedb.					
6-25	Value	100.000 N/A	All set-ups	TRUE	-3	Int32
	Terminal 54 Filter Time Con-					
6-26	stant	0.001 s	All set-ups	TRUE	-3	Uint16
6-27	Terminal 54 Live Zero	[1] Enabled	All set-ups	TRUE	-	Uint8
	alog Input X30/11					-
6-30	Terminal X30/11 Low Voltage	0.07 V	All set-ups	TRUE	-2	Int16
6-31	Terminal X30/11 High Voltage	10.00 V	All set-ups	TRUE	-2	Int16
	Term. X30/11 Low Ref./Feedb.				_	
6-34	Value	0.000 N/A	All set-ups	TRUE	-3	Int32
	Term. X30/11 High Ref./Feedb.					
6-35	Value	100.000 N/A	All set-ups	TRUE	-3	Int32
	Term. X30/11 Filter Time Con-				_	
6-36	stant	0.001 s	All set-ups	TRUE	-3	Uint16
6-37	Term. X30/11 Live Zero	[1] Enabled	All set-ups	TRUE	-	Uint8
	alog Input X30/12					
6-40	Terminal X30/12 Low Voltage	0.07 V	All set-ups	TRUE	-2	Int16
6-41	Terminal X30/12 High Voltage	10.00 V	All set-ups	TRUE	-2	Int16
	Term. X30/12 Low Ref./Feedb.					
6-44	Value	0.000 N/A	All set-ups	TRUE	-3	Int32
	Term. X30/12 High Ref./Feedb.					_
6-45	Value	100.000 N/A	All set-ups	TRUE	-3	Int32
	Term. X30/12 Filter Time Con-					
6-46	stant	0.001 s	All set-ups	TRUE	-3	Uint16
6-47	Term. X30/12 Live Zero	[1] Enabled	All set-ups	TRUE	-	Uint8



Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
6-5* An	alog Output 42					
6-50	Terminal 42 Output	null	All set-ups	TRUE	-	Uint8
6-51	Terminal 42 Output Min Scale	0.00 %	All set-ups	TRUE	-2	Int16
6-52	Terminal 42 Output Max Scale	100.00 %	All set-ups	TRUE	-2	Int16
6-53	Terminal 42 Output Bus Control	0.00 %	All set-ups	TRUE	-2	N2
6-54	Terminal 42 Output Timeout Preset	0.00 %	1 set-up	TRUE	-2	Uint16
6-6* An	alog Output X30/8					
6-60	Terminal X30/8 Output	[0] No operation	All set-ups	TRUE	-	Uint8
6-61	Terminal X30/8 Min. Scale	0.00 %	All set-ups	TRUE	-2	Int16
6-62	Terminal X30/8 Max. Scale Terminal X30/8 Output Bus	100.00 %	All set-ups	TRUE	-2	Int16
6-63	Control Terminal X30/8 Output Time-	0.00 %	All set-ups	TRUE	-2	N2
6-64	out Preset	0.00 %	1 set-up	TRUE	-2	Uint16



8-** Communication and Options

#	Parameter description	Default value	4-set-up	Change during op- eration	Conversion index	Туре
	neral Settings		A 11			111
8-01	Control Site	null	All set-ups	TRUE	-	Uint8
8-02	Control Source	null	All set-ups	TRUE	-	Uint8
						Uint3
8-03	Control Timeout Time	ExpressionLimit	1 set-up	TRUE	-1	2
8-04	Control Timeout Function	[0] Off	1 set-up	TRUE	-	Uint8
8-05	End-of-Timeout Function	[1] Resume set-up	1 set-up	TRUE	-	Uint8
8-06	Reset Control Timeout	[0] Do not reset	All set-ups	TRUE	-	Uint8
8-07	Diagnosis Trigger	[0] Disable	2 set-ups	TRUE	-	Uint8
8-1* Cor	ntrol Settings					
8-10	Control Profile	[0] FC profile	All set-ups	TRUE	-	Uint8
	Configurable Status Word					
8-13	STW	[1] Profile Default	All set-ups	TRUE	-	Uint8
8-3* FC	Port Settings					
8-30	Protocol	null	1 set-up	TRUE	-	Uint8
8-31	Address	ExpressionLimit	1 set-up	TRUE	0	Uint8
8-32	Baud Rate	null	1 set-up	TRUE	-	Uint8
8-33	Parity / Stop Bits	null	1 set-up	TRUE	-	Uint8
	,					Uint1
8-35	Minimum Response Delay	ExpressionLimit	1 set-up	TRUE	-3	6
0 00	miniman neopenee Belay	ZAPTOGOTOTIZITITE	, oot up	11102		Uint1
8-36	Maximum Response Delay	ExpressionLimit	1 set-up	TRUE	-3	6
0 00	Maximum Neoponeo Belay	EXPROSOICHEMIN	1 001 up	THEE		Uint1
8-37	Maximum Inter-Char Delay	ExpressionLimit	1 set-up	TRUE	-5	6
	MC protocol set	EXPROSSIONEMINE	1 501 45	INOL		
8-40	Telegram Selection	[1] Standard telegram 1	2 set-ups	TRUE		Uint8
	-	[1] Standard telegram 1	z set-ups	INOL		Ollito
8-5* Dig 8-50	Coasting Select		Allocture	TRUE	-	l lim±0
		[3] Logic OR	All set-ups			Uint8
8-52	DC Brake Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8-53	Start Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8-54	Reversing Select	null	All set-ups	TRUE	-	Uint8
8-55	Set-up Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8-56	Preset Reference Select	[3] Logic OR	All set-ups	TRUE	-	Uint8
8-7* BA	Cnet					
						Uint3
8-70	BACnet Device Instance	1 N/A	1 set-up	TRUE	0	2
8-72	MS/TP Max Masters	127 N/A	1 set-up	TRUE	0	Uint8
						Uint1
8-73	MS/TP Max Info Frames	1 N/A	1 set-up	TRUE	0	6
8-74	"I-Am" Service	[0] Send at power-up	1 set-up	TRUE	-	Uint8
						VisStr



Par. No #	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Туре
8-8* FC	Port Diagnostics					
						Uint3
8-80	Bus Message Count	0 N/A	All set-ups	TRUE	0	2
						Uint3
8-81	Bus Error Count	0 N/A	All set-ups	TRUE	0	2
						Uint3
8-82	Slave Messages Rcvd	0 N/A	All set-ups	TRUE	0	2
						Uint3
8-83	Slave Error Count	0 N/A	All set-ups	TRUE	0	2
						Uint3
8-84	Slave Messages Sent	0 N/A	All set-ups	TRUE	0	2
						Uint3
8-85	Slave Timeout Errors	0 N/A	All set-ups	TRUE	0	2
8-88	Reset FC port Diagnostics	[0] Do not reset	All set-ups	TRUE	-	Uint8
8-89	Diagnostics Count	0 N/A	1 set-up	TRUE	0	Int32
8-9* Bu	ıs Jog / Feedback					
						Uint1
8-90	Bus Jog 1 Speed	100 RPM	All set-ups	TRUE	67	6
						Uint1
8-91	Bus Jog 2 Speed	200 RPM	All set-ups	TRUE	67	6
8-94	Bus Feedback 1	0 N/A	1 set-up	TRUE	0	N2
8-95	Bus Feedback 2	0 N/A	1 set-up	TRUE	0	N2
8-96	Bus Feedback 3	0 N/A	1 set-up	TRUE	0	N2

11-** LonWorks

Par. No.	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
11-0* L	onWorks ID					
						OctStr
11-00	Neuron ID	0 N/A	All set-ups	TRUE	0	[6]
						OctStr
11-01	Domain	0 N/A	All set-ups	TRUE	0	[6]
11-02	Subnet ID	0 N/A	All set-ups	TRUE	0	Uint8
11-03	Node ID	0 N/A	All set-ups	TRUE	0	Uint8
11-1* L	ON Functions					
11-10	Drive Profile	[0] VSD profile	All set-ups	TRUE	-	Uint8
						Uint1
11-15	LON Warning Word	0 N/A	All set-ups	TRUE	0	6
						VisStr
11-17	XIF Revision	0 N/A	All set-ups	TRUE	0	[5]
						VisStr
11-18	LonWorks Revision	0 N/A	All set-ups	TRUE	0	[5]
11-2* L	ON Param. Access					
11-21	Store Data Values	[0] Off	All set-ups	TRUE	-	Uint8



13-** Smart Logic Controller

Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conversion index	Туре
13-0* S	LC Settings		-			
13-00	SL Controller Mode	null	2 set-ups	TRUE	-	Uint8
13-01	Start Event	null	2 set-ups	TRUE	-	Uint8
13-02	Stop Event	null	2 set-ups	TRUE	-	Uint8
13-03	Reset SLC	[0] Do not reset SLC	All set-ups	TRUE	-	Uint8
13-1* C	omparators					
13-10	Comparator Operand	null	2 set-ups	TRUE	-	Uint8
13-11	Comparator Operator	null	2 set-ups	TRUE	-	Uint8
13-12	Comparator Value	ExpressionLimit	2 set-ups	TRUE	-3	Int32
13-2* Ti	imers					
13-20	SL Controller Timer	ExpressionLimit	1 set-up	TRUE	-3	TimD
13-4* Lo	ogic Rules					
13-40	Logic Rule Boolean 1	null	2 set-ups	TRUE	-	Uint8
13-41	Logic Rule Operator 1	null	2 set-ups	TRUE	-	Uint8
13-42	Logic Rule Boolean 2	null	2 set-ups	TRUE	-	Uint8
13-43	Logic Rule Operator 2	null	2 set-ups	TRUE	-	Uint8
13-44	Logic Rule Boolean 3	null	2 set-ups	TRUE	-	Uint8
13-5* S	tates					
13-51	SL Controller Event	null	2 set-ups	TRUE	-	Uint8
13-52	SL Controller Action	null	2 set-ups	TRUE	-	Uint8

14-** Special Functions

Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
14.0* 1	nverter Switching			eration	uex	
14-0" 11	Switching Pattern	[0] 60 AVM	All oot upo	TRUE	_	Uint8
14-00	Switching Frequency	null	All set-ups All set-ups	TRUE	-	Uint8
14-01	Overmodulation		•	FALSE	-	
14-03	PWM Random	[1] On	All set-ups All set-ups	TRUE	-	Uint8
		[0] Off	All set-ups	INUE	-	Uint8
	ains On/Off	[O] N = f = - +t' = -	Allestone	FALCE		11:-10
14-10	Mains Failure	[0] No function	All set-ups	FALSE	-	Uint8 Uint1
14-11	Mains Voltage at Mains Fault	ExpressionLimit	All set-ups	TRUE	0	6
14-12	Function at Mains Imbalance	[0] Trip	All set-ups	TRUE	-	Uint8
14-2* R	eset Functions		•			
14-20	Reset Mode	null	All set-ups	TRUE	-	Uint8
						Uint1
14-21	Automatic Restart Time	10 s	All set-ups	TRUE	0	6
14-22	Operation Mode	[0] Normal operation	All set-ups	TRUE	-	Uint8
14-23	Typecode Setting	null	2 set-ups	FALSE	-	Uint8
14-25	Trip Delay at Torque Limit	60 s	All set-ups	TRUE	0	Uint8
14-26	Trip Delay at Inverter Fault	ExpressionLimit	All set-ups	TRUE	0	Uint8
14-28	Production Settings	[0] No action	All set-ups	TRUE	_	Uint8
14-29	Service Code	0 N/A	All set-ups	TRUE	0	Int32
	urrent Limit Ctrl.	J 14/7 (7 til dot apo	11102		
140 00	Current Lim Ctrl, Proportional					Uint1
14-30	Gain	100 %	All set-ups	FALSE	0	6
14 00	Current Lim Ctrl, Integration	100 70	7 til dot upo	17(202		Uint1
14-31	Time	0.020 s	All set-ups	FALSE	-3	6
14 51	Time	0.020 3	All 30t up3	IALOL	3	Uint1
14-32	Current Lim Ctrl, Filter Time	26.0 ms	All set-ups	TRUE	-4	6
	nergy Optimising	20.0 1113	All set-ups	THOL	-4	
14-40	VT Level	66 %	All set-ups	FALSE	0	Uint8
14-40	AEO Minimum Magnetisa-	00 70	All set-ups	FALSE	U	UIIILO
14-41	tion	ExpressionLimit	All oot upo	TRUE	0	Uint8
14-41	Minimum AEO Frequency	10 Hz	All set-ups All set-ups	TRUE	0	Uint8
14-42	Willimum ALO Frequency	10 ΠΖ	All set-ups	TROL	U	Uint1
14-43	Motor Cosphi	ExpressionLimit	All oot upo	TRUE	-2	6
	nvironment	ExpressionLimit	All set-ups	INUE	-2	
		[1] 0	1 aat	FALSE		l lim±0
14-50	RFI Filter	[1] On	1 set-up		-	Uint8
14-52 14-53	Fan Control	[0] Auto	All set-ups	TRUE	-	Uint8
	Fan Monitor	[1] Warning	All set-ups	TRUE	-	Uint8
14-6* AI	uto Derate					
14.00	Function at Over Tempera-	[0] T	A11 1	TDUE		11:- 10
14-60	ture	[0] Trip	All set-ups	TRUE	-	Uint8
14-61	Function at Inverter Overload	[0] Trip	All set-ups	TRUE	-	Uint8
14-62	Inv. Overload Derate Current	95 %	All set-ups	TRUE	0	Uint1 6



15-** FC Information

Par. No.	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
15-0* O	perating Data					
15-00	Operating Hours	0 h	All set-ups	FALSE	74	Uint3 2
15-01	Running Hours	0 h	All set-ups FALSE		74	Uint3 2
15-02	kWh Counter	0 kWh	All set-ups	FALSE	75	Uint3 2
15-03	Power Up's	0 N/A	All set-ups	FALSE	0	Uint3 2
15-04	Over Temp's	0 N/A	All set-ups	FALSE	0	Uint1 6
15-05	Over Volt's	0 N/A	All set-ups	FALSE	0	Uint1 6
15-06 15-07	Reset kWh Counter Reset Running Hours Counter	[0] Do not reset [0] Do not reset	All set-ups All set-ups	TRUE TRUE	-	Uint8 Uint8
15-08	Number of Starts	0 N/A	All set-ups	FALSE	0	Uint3 2
15-1* D	ata Log Settings					
15 10	Lamina Causa	0	2	TDUE		Uint1
15-10 15-11	Logging Source Logging Interval	0 ExpressionLimit	2 set-ups 2 set-ups	TRUE TRUE	-3	6 TimD
15-12	Trigger Event	[0] False	1 set-up	TRUE	-	Uint8
15-13	Logging Mode	[0] Log always	2 set-ups	TRUE	-	Uint8
15-14	Samples Before Trigger	50 N/A	2 set-ups	TRUE	0	Uint8
15-2* H	istoric Log					
15-20	Historic Log: Event	0 N/A	All set-ups	FALSE	0	Uint8 Uint3
15-21	Historic Log: Value	0 N/A	All set-ups	FALSE	0	2 Uint3
15-22	Historic Log: Time	0 ms	All set-ups	FALSE	-3	2 Time-
15-23	Historic Log: Date and Time	ExpressionLimit	All set-ups	FALSE	0	OfDay
	larm Log					
15-30	Alarm Log: Error Code	0 N/A	All set-ups	FALSE	0	Uint8
15-31	Alarm Log: Value	0 N/A	All set-ups	FALSE	0	Int16
15-32	Alarm Log: Time	0 s	All set-ups	FALSE	0	Uint3
15-33	Alarm Log: Date and Time	ExpressionLimit	All set-ups	FALSE	0	Time- OfDay



Par. No. #	Parameter description	Default value	4-set-up	Change during opera- tion	Conv- er- sion in- dex	Туре
15-4* D	rive Identification					
15-40	FC Type	0 N/A	All set-ups	FALSE	0	VisStr[6]
15-41	Power Section	0 N/A	All set-ups	FALSE	0	VisStr[20]
15-42	Voltage	0 N/A	All set-ups	FALSE	0	VisStr[20]
15-43	Software Version	0 N/A	All set-ups	FALSE	0	VisStr[5]
15-44	Ordered Typecode String	0 N/A	All set-ups	FALSE	0	VisStr[40]
15-45	Actual Typecode String	0 N/A	All set-ups	FALSE	0	VisStr[40]
	Frequency Converter Order-					
15-46	ing No	0 N/A	All set-ups	FALSE	0	VisStr[8]
15-47	Power Card Ordering No	0 N/A	All set-ups	FALSE	0	VisStr[8]
15-48	LCP Id No	0 N/A	All set-ups	FALSE	0	VisStr[20]
15-49	SW ID Control Card	0 N/A	All set-ups	FALSE	0	VisStr[20]
15-50	SW ID Power Card	0 N/A	All set-ups	FALSE	0	VisStr[20]
	Frequency Converter Serial		·			
15-51	Number	0 N/A	All set-ups	FALSE	0	VisStr[10]
15-53	Power Card Serial Number	0 N/A	All set-ups	FALSE	0	VisStr[19]
15-6* O	ption Ident					
15-60	Option Mounted	0 N/A	All set-ups	FALSE	0	VisStr[30]
15-61	Option SW Version	0 N/A	All set-ups	FALSE	0	VisStr[20]
15-62	Option Ordering No	0 N/A	All set-ups	FALSE	0	VisStr[8]
15-63	Option Serial No	0 N/A	All set-ups	FALSE	0	VisStr[18]
15-70	Option in Slot A	0 N/A	All set-ups	FALSE	0	VisStr[30]
15-71	Slot A Option SW Version	0 N/A	All set-ups	FALSE	0	VisStr[20]
15-72	Option in Slot B	0 N/A	All set-ups	FALSE	0	VisStr[30]
15-73	Slot B Option SW Version	0 N/A	All set-ups	FALSE	0	VisStr[20]
15-74	Option in Slot C0	0 N/A	All set-ups	FALSE	0	VisStr[30]
15-75	Slot C0 Option SW Version	0 N/A	All set-ups	FALSE	0	VisStr[20]
15-76	Option in Slot C1	0 N/A	All set-ups	FALSE	0	VisStr[30]
15-77	Slot C1 Option SW Version	0 N/A	All set-ups	FALSE	0	VisStr[20]
15-9* P	arameter Info					
15-92	Defined Parameters	0 N/A	All set-ups	FALSE	0	Uint16
15-93	Modified Parameters	0 N/A	All set-ups	FALSE	0	Uint16
15-98	Drive Identification	0 N/A	All set-ups	FALSE	0	VisStr[40]
15-99	Parameter Metadata	0 N/A	All set-ups	FALSE	0	Uint16



16-** Data Readouts

Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conversion index	Type
16-0* G	eneral Status					
16-00	Control Word	0 N/A	All set-ups	FALSE	0	V2
		0.000 ReferenceFeed-				
16-01	Reference [Unit]	backUnit	All set-ups	FALSE	-3	Int32
16-02	Reference [%]	0.0 %	All set-ups	FALSE	-1	Int16
16-03	Status Word	0 N/A	All set-ups	FALSE	0	V2
16-05	Main Actual Value [%]	0.00 %	All set-ups	FALSE	-2	N2
		0.00 CustomReadoutU-				
16-09	Custom Readout	nit	All set-ups	FALSE	-2	Int32
16-1* M	lotor Status					
16-10	Power [kW]	0.00 kW	All set-ups	FALSE	1	Int32
16-11	Power [hp]	0.00 hp	All set-ups	FALSE	-2	Int32
						Uint1
16-12	Motor Voltage	0.0 V	All set-ups	FALSE	-1	6
						Uint1
16-13	Frequency	0.0 Hz	All set-ups	FALSE	-1	6
16-14	Motor Current	0.00 A	All set-ups	FALSE	-2	Int32
16-15	Frequency [%]	0.00 %	All set-ups	FALSE	-2	N2
16-16	Torque [Nm]	0.0 Nm	All set-ups	FALSE	-1	Int32
16-17	Speed [RPM]	0 RPM	All set-ups	FALSE	67	Int32
16-18	Motor Thermal	0 %	All set-ups	FALSE	0	Uint8
16-22	Torque [%]	0 %	All set-ups	FALSE	0	Int16
16-3* D	rive Status		-			
						Uint1
16-30	DC Link Voltage	0 V	All set-ups	FALSE	0	6
						Uint3
16-32	Brake Energy /s	0.000 kW	All set-ups	FALSE	0	2
						Uint3
16-33	Brake Energy /2 min	0.000 kW	All set-ups	FALSE	0	2
16-34	Heatsink Temp.	0 °C	All set-ups	FALSE	100	Uint8
16-35	Inverter Thermal	0 %	All set-ups	FALSE	0	Uint8
						Uint3
16-36	Inv. Nom. Current	ExpressionLimit	All set-ups	FALSE	-2	2
						Uint3
16-37	Inv. Max. Current	ExpressionLimit	All set-ups	FALSE	-2	2
16-38	SL Controller State	0 N/A	All set-ups	FALSE	0	Uint8
16-39	Control Card Temp.	0 °C	All set-ups	FALSE	100	Uint8
16-40	Logging Buffer Full	[0] No	All set-ups	TRUE	-	Uint8



Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
	ef. & Feedb.					
16-50	External Reference	0.0 N/A	All set-ups	FALSE	-1	Int16
16-52	Feedback [Unit]	0.000 ProcessCtrlUnit	All set-ups	FALSE	-3	Int32
16-53	Digi Pot Reference	0.00 N/A	All set-ups	FALSE	-2	Int16
16-54	Feedback 1 [Unit]	0.000 ProcessCtrlUnit	All set-ups	FALSE	-3	Int32
16-55	Feedback 2 [Unit]	0.000 ProcessCtrlUnit	All set-ups	FALSE	-3	Int32
16-56	Feedback 3 [Unit]	0.000 ProcessCtrlUnit	All set-ups	FALSE	-3	Int32
16-58	PID Output [%]	0.0 %	All set-ups	TRUE	-1	Int16
16-6* Ir	nputs & Outputs					
						Uint1
16-60	Digital Input	0 N/A	All set-ups	FALSE	0	6
16-61	Terminal 53 Switch Setting	[0] Current	All set-ups	FALSE	-	Uint8
16-62	Analog Input 53	0.000 N/A	All set-ups	FALSE	-3	Int32
16-63	Terminal 54 Switch Setting	[0] Current	All set-ups	FALSE	-	Uint8
16-64	Analog Input 54	0.000 N/A	All set-ups	FALSE	-3	Int32
16-65	Analog Output 42 [mA]	0.000 N/A	All set-ups	FALSE	-3	Int16
16-66	Digital Output [bin]	0 N/A	All set-ups	FALSE	0	Int16
16-67	Pulse Input #29 [Hz]	0 N/A	All set-ups	FALSE	0	Int32
16-68	Pulse Input #33 [Hz]	0 N/A	All set-ups	FALSE	0	Int32
16-69	Pulse Output #27 [Hz]	0 N/A	All set-ups	FALSE	0	Int32
16-70	Pulse Output #29 [Hz]	0 N/A	All set-ups	FALSE	0	Int32
16-71	Relay Output [bin]	0 N/A	All set-ups	FALSE	0	Int16
16-72	Counter A	0 N/A	All set-ups	TRUE	0	Int32
16-73	Counter B	0 N/A	All set-ups	TRUE	0	Int32
16-75	Analog In X30/11	0.000 N/A	All set-ups	FALSE	-3	Int32
16-76	Analog In X30/12	0.000 N/A	All set-ups	FALSE	-3	Int32
16-77	Analog Out X30/8 [mA]	0.000 N/A	All set-ups	FALSE	-3	Int16
	eldbus & FC Port		•			
16-80	Fieldbus CTW 1	0 N/A	All set-ups	FALSE	0	V2
16-82	Fieldbus REF 1	0 N/A	All set-ups	FALSE	0	N2
16-84	Comm. Option STW	0 N/A	All set-ups	FALSE	0	V2
16-85	FC Port CTW 1	0 N/A	All set-ups	FALSE	0	V2
16-86	FC Port REF 1	0 N/A	All set-ups	FALSE	0	N2
	iagnosis Readouts	V. 177.	7 COL CIPO			
10-7 D	iagnosis Reducuts					Uint3
16-90	Alarm Word	0 N/A	All set-ups	FALSE	0	2
10 00	, admir Word	0 14/7 (7 til dot apo	171202		Uint3
16-91	Alarm Word 2	0 N/A	All set-ups	FALSE	0	2
10 31	Aldilli Word 2	O IN/A	All 30t up3	IALUL	U	Uint3
16-92	Warning Word	0 N/A	All set-ups	FALSE	0	2
10-32	warning word	O N/A	All Set-ups	TALUL	0	Uint3
16-93	Warning Word 2	0 N/A	All set-ups	FALSE	0	2
10-33	waiting word z	U IN/PA	All set-ups	IALUL	- 0	Uint3
16-94	Ext. Status Word	0 N/A	All set-ups	FALSE	0	2
10-34	LAL Status WOIU	U IN/A	All Set-ups	IALSE	U	Uint3
	Ext. Status Word 2	0 N/A	All set-ups	FALSE	0	
16 05	EXL SIAILIS VVOIO /	U IV/A	All Set-ups	FALSE	U	2
16-95	Ext. Otatao Word 2					Uint3



18-** Info & Readouts

Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conversion index	Type
18-0* M	aintenance Log					
18-00	Maintenance Log: Item	0 N/A	All set-ups	FALSE	0	Uint8
18-01	Maintenance Log: Action	0 N/A	All set-ups	FALSE	0	Uint8
						Uint3
18-02	Maintenance Log: Time	0 s	All set-ups	FALSE	0	2
	Maintenance Log: Date and					Time-
18-03	Time	ExpressionLimit	All set-ups	FALSE	0	OfDay
18-1* Fi	re Mode Log					
18-10	Fire Mode Log: Event	0 N/A	All set-ups	FALSE	0	Uint8
						Uint3
18-11	Fire Mode Log: Time	0 s	All set-ups	FALSE	0	2
	Fire Mode Log: Date and					Time-
18-12	Time	ExpressionLimit	All set-ups	FALSE	0	OfDay

20-** FC Closed Loop

#	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Туре
20-0* Fe						
20-00	Feedback 1 Source	[2] Analog input 54	All set-ups	TRUE	-	Uint8
20-01	Feedback 1 Conversion	[0] Linear	All set-ups	FALSE	-	Uint8
20-02	Feedback 1 Source Unit	null	All set-ups	TRUE	-	Uint8
20-03	Feedback 2 Source	[0] No function	All set-ups	TRUE	-	Uint8
20-04	Feedback 2 Conversion	[0] Linear	All set-ups	FALSE	-	Uint8
20-05	Feedback 2 Source Unit	null	All set-ups	TRUE	-	Uint8
20-06	Feedback 3 Source	[0] No function	All set-ups	TRUE	-	Uint8
20-07	Feedback 3 Conversion	[0] Linear	All set-ups	FALSE	-	Uint8
20-08 20-12	Feedback 3 Source Unit	null	All set-ups	TRUE	-	Uint8
	Reference/Feedback Unit	null	All set-ups	TRUE	-	Uint8
20-13	Minimum Reference/Feedb.	0.000 ProcessCtrlUnit	All set-ups	TRUE	-3	Int32
20-14	Maximum Reference/Feedb.	100.000 ProcessCtrlUnit	All set-ups	TRUE	-3	Int32
20-2^ Fe	eedback/Setpoint Feedback Function	[2] Minimum	All oct upo	TRUE	_	Uint8
		[3] Minimum 0.000 ProcessCtrlUnit	All set-ups			
20-21 20-22	Setpoint 1	0.000 ProcessCtrlUnit	All set-ups	TRUE TRUE	-3 -3	Int32 Int32
20-22	Setpoint 2	0.000 ProcessCtrlUnit	•		-3 -3	
	Setpoint 3	0.000 ProcessCtriOnit	All set-ups	TRUE	-3	Int32
	eedback Adv. Conv	[0] D00	All sets	TDUE		11:+0
20-30	Refrigerant	[0] R22	All set-ups	TRUE	-	Uint8
20.21	Llean Defined Defrimenent A1	10 0000 N/A	All oot upo	TRUE	4	Uint3
20-31	User Defined Refrigerant A2	10.0000 N/A	All set-ups	TRUE	-4 -2	Int32
20-32	User Defined Refrigerant A2	-2250.00 N/A	All set-ups	TRUE	-2	Uint3
20-33	User Defined Refrigerant A3	250.000 N/A	All set-ups	TRUE	-3	2
	ID Autotuning	250.000 N/A	All set-ups	TRUE	-ა	
20-7 F1	Closed Loop Type	[0] Auto	2 set-ups	TRUE	-	Uint8
20-70	PID Performance	[0] Normal	2 set-ups 2 set-ups	TRUE	-	Uint8
20-71	TID I ellottilance	[0] Normal	2 Set-ups	THOL	_	Uint1
20-72	PID Output Change	0.10 N/A	2 set-ups	TRUE	-2	6
20 72	Tib Gutput Ghange	-999999.000 ProcessCtr-	2 30t up3	mol		U
20-73	Minimum Feedback Level	IUnit	2 set-ups	TRUE	-3	Int32
20 73	William Feedback Eever	999999.000 ProcessCtr-	2 30t up3	THOL		111102
20-74	Maximum Feedback Level	IUnit	2 set-ups	TRUE	-3	Int32
20-79	PID Autotuning	[0] Disabled	All set-ups	TRUE	-	Uint
	D Basic Settings	[0] Disabled	All Set ups	THOL		Oiiite
20-81	PID Normal/ Inverse Control	[0] Normal	All set-ups	TRUE	_	Uint8
20 01	TID IVOITIGIT ITVETSE CONTROL	[O] NOTHIAI	All Set ups	THOL		Uint1
20-82	PID Start Speed [RPM]	ExpressionLimit	All set-ups	TRUE	67	6
20 02	TID Gtart Opeca [til ivi]	ExpressionEllinic	All 30t up3	mol	07	Uint1
20-83	PID Start Speed [Hz]	ExpressionLimit	All set-ups	TRUE	-1	6
20-84	On Reference Bandwidth	5 %	All set-ups	TRUE	0	Uint8
	D Controller		. iii oot upo	INOL		Jinto
20-91	PID Anti Windup	[1] On	All set-ups	TRUE	-	Uint8
	/ titl Willaup	[1] OII	, til dot upa	INOL		Uint1
			All set-ups	TRUE	-2	6
	PID Proportional Gain	0.50 N/A			_	-
20-93	PID Proportional Gain	0.50 N/A	7 til dot upo			Llint?
20-93					- 2	
	PID Proportional Gain PID Integral Time	0.50 N/A 20.00 s	All set-ups	TRUE	-2	2
20-93 20-94	PID Integral Time	20.00 s	All set-ups	TRUE		2 Uint1
20-93					-2 -2	Uint3 2 Uint1 6 Uint1



21-** Ext. Closed Loop

Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conversion index	Type
21-0* Ex	kt. CL Autotuning					
21-00	Closed Loop Type	[0] Auto	2 set-ups	TRUE	-	Uint8
21-01	PID Performance	[0] Normal	2 set-ups	TRUE	-	Uint8
						Uint1
21-02	PID Output Change	0.10 N/A	2 set-ups	TRUE	-2	6
21-03	Minimum Feedback Level	-999999.000 N/A	2 set-ups	TRUE	-3	Int32
21-04	Maximum Feedback Level	999999.000 N/A	2 set-ups	TRUE	-3	Int32
21-09	PID Autotuning	[0] Disabled	All set-ups	TRUE	-	Uint8
21-1* Ex	kt. CL 1 Ref./Fb.					
21-10	Ext. 1 Ref./Feedback Unit	[1] %	All set-ups	TRUE	-	Uint8
21-11	Ext. 1 Minimum Reference	0.000 ExtPID1Unit	All set-ups	TRUE	-3	Int32
21-12	Ext. 1 Maximum Reference	100.000 ExtPID1Unit	All set-ups	TRUE	-3	Int32
21-13	Ext. 1 Reference Source	[0] No function	All set-ups	TRUE	-	Uint8
21-14	Ext. 1 Feedback Source	[0] No function	All set-ups	TRUE	-	Uint8
21-15	Ext. 1 Setpoint	0.000 ExtPID1Unit	All set-ups	TRUE	-3	Int32
21-17	Ext. 1 Reference [Unit]	0.000 ExtPID1Unit	All set-ups	TRUE	-3	Int32
21-18	Ext. 1 Feedback [Unit]	0.000 ExtPID1Unit	All set-ups	TRUE	-3	Int32
21-19	Ext. 1 Output [%]	0 %	All set-ups	TRUE	0	Int32
21-2* Ex	kt. CL 1 PID					
21-20	Ext. 1 Normal/Inverse Control	[0] Normal	All set-ups	TRUE	-	Uint8
						Uint1
21-21	Ext. 1 Proportional Gain	0.01 N/A	All set-ups	TRUE	-2	6
						Uint3
21-22	Ext. 1 Integral Time	10000.00 s	All set-ups	TRUE	-2	2
			сосрс			Uint1
21-23	Ext. 1 Differentation Time	0.00 s	All set-ups	TRUE	-2	6
						Uint1
21-24	Ext. 1 Dif. Gain Limit	5.0 N/A	All set-ups	TRUE	-1	6
	kt. CL 2 Ref./Fb.	0.0	, oot apo		•	
21-30	Ext. 2 Ref./Feedback Unit	[1] %	All set-ups	TRUE	-	Uint8
21-31	Ext. 2 Minimum Reference	0.000 ExtPID2Unit	All set-ups	TRUE	-3	Int32
21-32	Ext. 2 Maximum Reference	100.000 ExtPID2Unit	All set-ups	TRUE	-3	Int32
21-33	Ext. 2 Reference Source	[0] No function	All set-ups	TRUE	-	Uint8
21-34	Ext. 2 Feedback Source	[0] No function	All set-ups	TRUE	-	Uint8
21-35	Ext. 2 Setpoint	0.000 ExtPID2Unit	All set-ups	TRUE	-3	Int32
21-37	Ext. 2 Reference [Unit]	0.000 ExtPID2Unit	All set-ups	TRUE	-3	Int32
21-37	Ext. 2 Feedback [Unit]	0.000 Extr ID2011t	All set-ups	TRUE	-3 -3	Int32
21-39	Ext. 2 Output [%]	0.000 EXT 15201111	All set-ups	TRUE	0	Int32
	kt. CL 2 PID	V 70	7 til 00t ups	INOL		mioz
21-40	Ext. 2 Normal/Inverse Control	[0] Normal	All set-ups	TRUE		Uint8
21-40	EAG. 2 NOTHIGH HIVEISE COILLOI	[O] NOTHIAL	All 36t-ups	INOL		Uint1
21-41	Ext. 2 Proportional Gain	0.01 N/A	All set-ups	TRUE	-2	6
∠ I - 4 I	LAL 2 FTOPOTHORIAI Gairi	U.U I IV/A	All Set-ups	INUE	-2	Uint3
21 42	Ext 2 Integral Time	10000 00 -	All act	TDUIT	2	
21-42	Ext. 2 Integral Time	10000.00 s	All set-ups	TRUE	-2	2
01 40	Fort 2 Difference to T	0.00 -	A.II 4	TOUT	•	Uint1
21-43	Ext. 2 Differentation Time	0.00 s	All set-ups	TRUE	-2	6
04.44	E . 0.D'(0 :	E 0.21/4	A.I.	TD: :=		Uint1
21-44	Ext. 2 Dif. Gain Limit	5.0 N/A	All set-ups	TRUE	-1	6



Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
21-5* Ex	ct. CL 3 Ref./Fb.					
21-50	Ext. 3 Ref./Feedback Unit	[1] %	All set-ups	TRUE	-	Uint8
21-51	Ext. 3 Minimum Reference	0.000 ExtPID3Unit	All set-ups	TRUE	-3	Int32
21-52	Ext. 3 Maximum Reference	100.000 ExtPID3Unit	All set-ups	TRUE	-3	Int32
21-53	Ext. 3 Reference Source	[0] No function	All set-ups	TRUE	-	Uint8
21-54	Ext. 3 Feedback Source	[0] No function	All set-ups	TRUE	-	Uint8
21-55	Ext. 3 Setpoint	0.000 ExtPID3Unit	All set-ups	TRUE	-3	Int32
21-57	Ext. 3 Reference [Unit]	0.000 ExtPID3Unit	All set-ups	TRUE	-3	Int32
21-58	Ext. 3 Feedback [Unit]	0.000 ExtPID3Unit	All set-ups	TRUE	-3	Int32
21-59	Ext. 3 Output [%]	0 %	All set-ups	TRUE	0	Int32
21-6* Ex	ct. CL 3 PID					
21-60	Ext. 3 Normal/Inverse Control	[0] Normal	All set-ups	TRUE	-	Uint8
						Uint1
21-61	Ext. 3 Proportional Gain	0.01 N/A	All set-ups	TRUE	-2	6
						Uint3
21-62	Ext. 3 Integral Time	10000.00 s	All set-ups	TRUE	-2	2
						Uint1
21-63	Ext. 3 Differentation Time	0.00 s	All set-ups	TRUE	-2	6
						Uint1
21-64	Ext. 3 Dif. Gain Limit	5.0 N/A	All set-ups	TRUE	-1	6



22-** Application Functions

Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
22-0* M	iscellaneous					
						Uint1
22-00	External Interlock Delay	0 s	All set-ups	TRUE	0	6
22-2* N	o-Flow Detection					
22-22	Low Speed Detection	[0] Disabled	All set-ups	TRUE	-	Uint8
22-23	No-Flow Function	[0] Off	All set-ups	TRUE	-	Uint8
						Uint1
22-24	No-Flow Delay	10 s	All set-ups	TRUE	0	6
22-4* SI	eep Mode					
						Uint1
22-40	Minimum Run Time	10 s	All set-ups	TRUE	0	6
						Uint1
22-41	Minimum Sleep Time	10 s	All set-ups	TRUE	0	6
						Uint1
22-42	Wake-up Speed [RPM]	ExpressionLimit	All set-ups	TRUE	67	6
						Uint1
22-43	Wake-up Speed [Hz]	ExpressionLimit	All set-ups	TRUE	-1	6
22-44	Wake-up Ref./FB Difference	10 %	All set-ups	TRUE	0	Int8
22-45	Setpoint Boost	0 %	All set-ups	TRUE	0	Int8
						Uint1
22-46	Maximum Boost Time	60 s	All set-ups	TRUE	0	6
22-6* Bi	roken Belt Detection					
22-60	Broken Belt Function	[0] Off	All set-ups	TRUE	-	Uint8
22-61	Broken Belt Torque	10 %	All set-ups	TRUE	0	Uint8
						Uint1
22-62	Broken Belt Delay	10 s	All set-ups	TRUE	0	6
22-7* SI	nort Cycle Protection					
22-75	Short Cycle Protection	[0] Disabled	All set-ups	TRUE	-	Uint8
		start_to_start_min_on_t				Uint1
22-76	Interval between Starts	ime (P2277)	All set-ups	TRUE	0	6
						Uint1
22-77	Minimum Run Time	0 s	All set-ups	TRUE	0	6

23-** Time Based Funtions

Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion index	Type
23-0* Ti	med Actions					
						TimeOf-
						DayWo-
23-00	ON Time	ExpressionLimit	2 set-ups	TRUE	0	Date
23-01	ON Action	[0] Disabled	2 set-ups	TRUE	-	Uint8
						TimeOf-
						DayWo-
23-02	OFF Time	ExpressionLimit	2 set-ups	TRUE	0	Date
23-03	OFF Action	[0] Disabled	2 set-ups	TRUE	-	Uint8
23-04	Occurrence	[0] All days	2 set-ups	TRUE	-	Uint8
23-1* M	aintenance					
23-10	Maintenance Item	[1] Motor bearings	1 set-up	TRUE	-	Uint8
23-11	Maintenance Action	[1] Lubricate	1 set-up	TRUE	-	Uint8
23-12	Maintenance Time Base	[0] Disabled	1 set-up	TRUE	-	Uint8
	Maintenance Time Inter-					
23-13	val	1 h	1 set-up	TRUE	74	Uint32
	Maintenance Date and					TimeOf-
23-14	Time	ExpressionLimit	1 set-up	TRUE	0	Day
23-1* M	aintenance Reset					
23-15	Reset Maintenance Word	[0] Do not reset	All set-ups	TRUE	-	Uint8
23-16	Maintenance Text	0 N/A	1 set-up	TRUE	0	VisStr[20]
23-5* E	nergy Log					
23-50	Energy Log Resolution	[5] Last 24 Hours	2 set-ups	TRUE	-	Uint8
						TimeOf-
23-51	Period Start	ExpressionLimit	2 set-ups	TRUE	0	Day
23-53	Energy Log	0 N/A	All set-ups	TRUE	0	Uint32
23-54	Reset Energy Log	[0] Do not reset	All set-ups	TRUE	-	Uint8
23-6* Tı						
23-60	Trend Variable	[0] Power [kW]	2 set-ups	TRUE	-	Uint8
23-61	Continuous Bin Data	0 N/A	All set-ups	TRUE	0	Uint32
23-62	Timed Bin Data	0 N/A	All set-ups	TRUE	0	Uint32
						TimeOf-
23-63	Timed Period Start	ExpressionLimit	2 set-ups	TRUE	0	Day
						TimeOf-
23-64	Timed Period Stop	ExpressionLimit	2 set-ups	TRUE	0	Day
23-65	Minimum Bin Value	ExpressionLimit	2 set-ups	TRUE	0	Uint8
	Reset Continuous Bin Da-					
23-66	ta	[0] Do not reset	All set-ups	TRUE	-	Uint8
23-67	Reset Timed Bin Data	[0] Do not reset	All set-ups	TRUE	-	Uint8

Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
23-8* P	ayback Counter					
23-80	Power Reference Factor	100 %	2 set-ups	TRUE	0	Uint8
						Uint3
23-81	Energy Cost	1.00 N/A	2 set-ups	TRUE	-2	2
						Uint3
23-82	Investment	0 N/A	2 set-ups	TRUE	0	2
23-83	Energy Savings	0 kWh	All set-ups	TRUE	75	Int32
23-84	Cost Savings	0 N/A	All set-ups	TRUE	0	Int32



24-** Application Functions 2

Par. No. #	Parameter description	Default value	4-set-up	Change during op- eration	Conver- sion in- dex	Type
24-0* Fi	re Mode					
24-00	Fire Mode Function	[0] Disabled	2 set-ups	TRUE	-	Uint8
24-03	Fire Mode Min Reference	ExpressionLimit	All set-ups	TRUE	-3	Int32
24-04	Fire Mode Max Reference	ExpressionLimit	All set-ups	TRUE	-3	Int32
24-05	Fire Mode Preset Reference	0.00 %	All set-ups	TRUE	-2	Int16
24-06	Fire Mode Reference Source	[0] No function	All set-ups	TRUE	-	Uint8
24-09	Fire Mode Alarm Handling	[1] Trip, Critical Alarms	2 set-ups	FALSE	-	Uint8
24-1* D	rive Bypass					
24-10	Drive Bypass Function	[0] Disabled	2 set-ups	TRUE	-	Uint8
						Uint1
24-11	Drive Bypass Delay Time	0 s	2 set-ups	TRUE	0	6




Mains supply (L1, L2, L3):	
Supply voltage	380-480 V ±10%
Supply voltage	525-690 V ±10%
Mains voltage low / mains drop-out:	
During low mains voltage or a mains drop-out, the FC continues unti	
below the minimum stop level, which corresponds typically to 15% below	
Power-up and full torque cannot be expected at mains voltage lower supply voltage.	than 10% below the FC's lowest rated
Supply frequency	50/60 Hz ±5%
Max. imbalance temporary between mains phases	3.0 % of rated supply voltage
True Power Factor (λ)	≥ 0.9 nominal at rated load
Displacement Power Factor (cos) near unity	(> 0.98)
Switching on input supply L1, L2, L3 (power-ups)	maximum once/2 min.
Environment according to EN60664-1 over	rvoltage category III / pollution degree 2
The unit is suitable for use on a circuit capable of delivering not more th	nan 100.000 RMS symmetrical Amperes,
480/690 V maximum.	
Motor output (U, V, W):	
Output voltage	0 - 100% of supply voltage
Output frequency	0 - 800* Hz
Switching on output	Unlimited
Ramp times	1 - 3600 sec.
* Voltage and power dependent	
Torque characteristics:	
Starting torque (Constant torque)	maximum 110% for 1 min.*
Starting torque	maximum 135% up to 0.5 sec.*
Overload torque (Constant torque)	maximum 110% for 1 min.*
*Percentage relates to the frequency converter's nominal torque.	
Cable lengths and cross sections:	
Max. motor cable length, screened/armoured	150 m
Max. motor cable length, unscreened/unarmoured	300 m
Max. cross section to motor, mains, load sharing and brake *	
Maximum cross section to control terminals, rigid wire	1.5 mm ² /16 AWG (2 x 0.75 mm ²)
Maximum cross section to control terminals, flexible cable	1 mm ² /18 AWG
Maximum cross section to control terminals, cable with enclosed core	0.5 mm ² /20 AWG
Minimum cross section to control terminals	0.25 mm ²
* See Mains Supply tables for more information!	0.23 11111
Digital inputs:	
Programmable digital inputs	4 (6)
Terminal number	18, 19, 27 ¹⁾ , 29 ¹⁾ , 32, 33,
Logic	PNP or NPN
Voltage level	0 - 24 Vdc
Voltage level, logic'0' PNP	< 5 Vdc
Voltage level, logic'1' PNP	> 10 Vdc
Voltage level, logic '0' NPN	> 19 Vdc
Voltage level, logic '1' NPN	< 14 Vdc
Maximum voltage on input	28 Vdc
Input resistance, R _i	approx. 4 k Ω

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

¹⁾ Terminals 27 and 29 can also be programmed as output.

Analog inputs:	
Number of analog inputs	2
Terminal number	53, 54
Modes	Voltage or current
Mode select	Switch S201 and switch S202
Voltage mode	Switch S201/switch S202 = OFF (U)
Voltage level	: 0 to + 10 V (scaleable)
Input resistance, R _i	approx. 10 kΩ
Max. voltage	± 20 V
Current mode	Switch S201/switch S202 = ON (I)
Current level	0/4 to 20 mA (scaleable)
Input resistance, R _i	approx. 200 Ω
Max. current	30 mA
Resolution for analog inputs	10 bit (+ sign)
Accuracy of analog inputs	Max. error 0.5% of full scale
Bandwidth	: 200 Hz

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

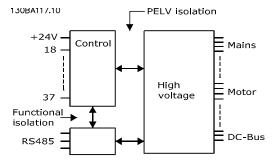

Programmable pulse inputs	2
Terminal number pulse	29, 33
Max. frequency at terminal, 29, 33	110 kHz (Push-pull driven
Max. frequency at terminal, 29, 33	5 kHz (open collector
Min. frequency at terminal 29, 33	4 Hz
Voltage level	see section on Digital inpu
Maximum voltage on input	28 Vdo
Input resistance, Ri	approx. 4 kΩ
Pulse input accuracy (0.1 - 1 kHz)	Max. error: 0.1% of full scale
Analog output:	
Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4 - 20 m <i>A</i>
Max. resistor load to common at analog output	500 C
Accuracy on analog output	Max. error: 0.8 % of full scale
Resolution on analog output	8 bi
The analog output is galvanically isolated from the supply vol	tage (PELV) and other high-voltage terminals.
Control card, RS-485 serial communication:	
Terminal number	68 (P,TX+, RX+), 69 (N,TX-, RX-
Terminal number 61	Common for terminals 68 and 69

lated from the supply voltage (PELV).



Digital output:	
Programmable digital/pulse outputs	2
Terminal number	27, 29 ¹⁾
Voltage level at digital/frequency output	0 - 24 V
Max. output current (sink or source)	40 mA
Max. load at frequency output	1 kΩ
Max. capacitive load at frequency output	10 nF
Minimum output frequency at frequency output	0 Hz
Maximum output frequency at frequency output	32 kHz
Accuracy of frequency output	Max. error: 0.1 % of full scale
Resolution of frequency outputs	12 bit
1) Terminal 27 and 29 can also be programmed as input.	
The digital output is galvanically isolated from the supply voltage (PELV) and o	ther high-voltage terminals.
Control card, 24 Vdc output:	
Terminal number	12, 13
Max. load	: 200 mA
The 24 Vdc supply is galvanically isolated from the supply voltage (PELV), but he	as the same potential as the analog and
digital inputs and outputs.	
Relay outputs: Programmable relay outputs	2
Relay 01 Terminal number	1-3 (break), 1-2 (make)
Max. terminal load (AC-1) ¹⁾ on 1-3 (NC), 1-2 (NO) (Resistive load)	240 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ (Inductive load @ cosφ 0.4)	240 Vac, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 1-2 (NO), 1-3 (NC) (Resistive load)	60 Vdc, 1A
Max. terminal load (DC-13) ¹⁾ (Inductive load)	24 Vdc, 0.1A
Relay 02 Terminal number	4-6 (break), 4-5 (make)
Max. terminal load (AC-1) ¹⁾ on 4-5 (NO) (Resistive load) ²⁾³⁾	400 Vac, 2 A
Max. terminal load (AC-15) ¹⁾ on 4-5 (NO) (Inductive load @ cosφ 0.4)	240 Vac, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 4-5 (NO) (Resistive load)	80 Vdc, 2 A
Max. terminal load (DC-13) ¹⁾ on 4-5 (NO) (Inductive load)	24 Vdc, 0.1A
Max. terminal load (AC-1) ¹⁾ on 4-6 (NC) (Resistive load)	240 Vac, 2 A
Max. terminal load (AC-15) ¹⁾ on 4-6 (NC) (Inductive load @ cosφ 0.4)	240 Vac, 0.2A
Max. terminal load (DC-1) ¹⁾ on 4-6 (NC) (Resistive load)	50 Vdc, 2 A
Max. terminal load (DC-13) ¹⁾ on 4-6 (NC) (Inductive load)	24 Vdc, 0.1 A
Min. terminal load on 1-3 (NC), 1-2 (NO), 4-6 (NC), 4-5 (NO)	24 Vdc 10 mA, 24 Vac 20 mA
Environment according to EN 60664-1 overvo	oltage category III/pollution degree 2
1) IEC 60947 t 4 and 5	
The relay contacts are galvanically isolated from the rest of the circuit by reinfo	orced isolation (PELV).
2) Overvoltage Category II	
3) UL applications 300 Vac 2A	
Control card, 10 V DC output:	
Terminal number	50
Output voltage	10.5 V ±0.5 V
Max. load	25 mA
The 10 Vdc supply is galvanically isolated from the supply voltage (PELV) and c	other high-voltage terminals.
Control characteristics:	
Resolution of output frequency at 0 - 1000 Hz	: +/- 0.003 Hz
System response time (terminals 18, 19, 27, 29, 32, 33)	
Speed control range (open loop)	
	4000 rpm: Maximum error of ±8 rpm
All control characteristics are based on a 4-pole asynchronous motor	



Surroundings:		
Enclosure, frame size D and E		IP 00, IP 21, IP 54
Enclosure, frame size F		IP 21, IP 54
Vibration test		0.7 g
Relative humidity	5% - 95%(IEC 7	21-3-3; Class 3K3 (non-condensing) during operation
Aggressive environment (IEC 60068-2	2-43) H ₂ S test	class kD
Test method according to IEC 60068-2	2-43 H ₂ S (10 days)	
Ambient temperature (at 60 AVM swi	tching mode)	
- with derating		max. 55 ° C ¹⁾
- with full output power, typical EFF2	motors	max. 50 ° C ¹⁾
- at full continuous FC output current		max. 45 ° C ¹⁾
1) For more information on derating see	e the Design Guide, se	ection on Special Conditions.
Minimum ambient temperature durin		
Minimum ambient temperature at rec	duced performance	- 10 °C
Temperature during storage/transpor	t	-25 - +65/70 °C
Maximum altitude above sea level wi	thout derating	1000 m
Maximum altitude above sea level wi	th derating	3000 m
Derating for high altitude, see section o	n special conditions	
EMC standards, Emission		EN 61800-3, EN 61000-6-3/4, EN 55011, IEC 61800-3
		EN 61800-3, EN 61000-6-1/2,
EMC standards, Immunity	EN 61000-4-2, EN	61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6
See section on special conditions!		
Control card performance:		
Scan interval		: 5 ms
Control card, USB serial communicat	ion:	
USB standard		1.1 (Full speed)
USB plug		USB type B "device" plug

NOTE: Connection to PC is carried out via a standard host/device USB cable.

The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals. The USB connection is <u>not</u> galvanically isolated from protection earth. Use only isolated laptop/PC as connection to the USB connector on the frequency converter or an isolated USB cable/converter.

Protection and Features:

- · Electronic thermal motor protection against overload.
- Temperature monitoring of the heatsink ensures that the frequency converter trips if the temperature
 reaches a predefined level. An overload temperature cannot be reset until the temperature of the
 heatsink is below the values stated in the tables on the following pages (Guideline these temperatures may vary for different power sizes, frame sizes, enclosure ratings etc.).
- The frequency converter is protected against short-circuits on motor terminals U, V, W.
- If a mains phase is missing, the frequency converter trips or issues a warning (depending on the load).
- Monitoring of the intermediate circuit voltage ensures that the frequency converter trips if the intermediate circuit voltage is too low or too high.
- The frequency converter is protected against earth faults on motor terminals U, V, W.



Mains Supply 3 x	380 - 480 VAC	P110	P132	P160	P200	P250
		PIIU	F132	F160	P200	F250
	Typical Shaft output at 400 V [kW]	110	132	160	200	250
	Typical Shaft output at 460 V [HP]	150	200	250	300	350
	Enclosure IP21	D1	D1	D2	D2	D2
	Enclosure IP54	D1	D1	D2	D2	D2
	Enclosure IP00	D3	D3	D4	D4	D4
	Output current					
	Continuous (at 400 V) [A]	212	260	315	395	480
	Intermittent (60 sec overload) (at 400 V) [A]	233	286	347	435	528
	Continuous (at 460/ 480 V) [A]	190	240	302	361	443
	Intermittent (60 sec overload) (at 460/ 480 V) [A]	209	264	332	397	487
	Continuous KVA (at 400 V) [KVA]	147	180	218	274	333
NA	Continuous KVA (at 460 V) [KVA]	151	191	241	288	353
Max. input curren	Continuous					
	(at 400 V) [A]	204	251	304	381	463
→	Continuous (at 460/ 480 V) [A]	183	231	291	348	427
	Max. cable size, mains motor, brake and load share [mm ² (AWG ²⁾)]	2 x 70 (2 x 2/0)	2 x 70 (2 x 2/0)	2 x 150 (2 x 300 mcm)	2 x 150 (2 x 300 mcm)	2 x 150 (2 x 300 mcm)
	Max. external pre- fuses [A] ¹	300	350	400	500	630
	Estimated power loss at rated max. load [W] ⁴⁾ , 400 V	3234	3782	4213	5119	5893
	Estimated power loss at rated max. load [W] ⁴⁾ , 460 V	2947	3665	4063	4652	5634
	Weight, enclosure IP21, IP 54 [kg]	96	104	125	136	151
	Weight, enclosure IP00 [kg]	82	91	112	123	138
	Efficiency ⁴⁾			0.98		
	Output frequency			0 - 800 Hz		
	Heatsink overtemp. trip	90 °C	110°C	110°C	110 °C	110°C
	Power card ambient trip			60 °C		

P315 P355 P400 P450
A00 V kW 315 395 400 480 Typical Shaft output at 460 V HP 450 500 600 600 Enclosure IP21 E1 E1 E1 E1 E1 E1 Enclosure IP00 E2 E2 E2 E2 E2 Output current
460 V [HP]
Enclosure IPO0 E2 E2 E2 E2 E2 Output current Continuous (at 400 V) [A] 600 658 745 800 Intermittent (60 sec overload) (at 460 / 480 V) [A] 540 590 678 730 Intermittent (60 sec overload) (at 460 / 480 V) [A] 649 746 803 Continuous KVA (at 460 V) [KVA] 416 456 516 554 Continuous KVA (at 460 V) [KVA] 430 470 540 582 Max. input current Continuous (at 400 V) [A] 590 647 733 787
Enclosure IP00 E2 E2 E2 E2 E2 Output current Continuous (at 400 V) [A] 600 658 745 800 Intermittent (60 sec overload) 660 724 820 880 (at 400 V) [A] 540 590 678 730 Intermittent (60 sec overload) 649 746 803 (at 460/ 480 V) [A] 649 746 803 (at 460/ 480 V) [A] 649 746 803 (at 460/ 480 V) [A] 649 746 803 Continuous KVA (at 400 V) [KVA] 416 456 516 554 Continuous KVA (at 460 V) [KVA] 430 470 540 582 Max. input current Continuous (at 400 V) [A] 590 647 733 787
Output current Continuous (at 400 V) [A] 600 658 745 800 Intermittent (60 sec overload) (at 400 V) [A] 660 724 820 880 Continuous (at 460/480 V) [A] 540 590 678 730 Intermittent (60 sec overload) (at 460/480 V) [A] 594 649 746 803 (at 460/480 V) [A] 416 456 516 554 Continuous KVA (at 400 V) [KVA] 430 470 540 582 Max. input current Continuous (at 400 V) [A] 590 647 733 787
Continuous (at 400 V) [A] 600 658 745 800 Intermittent (60 sec overload) 660 724 820 880 (at 400 V) [A] 540 590 678 730 Continuous (at 460/480 V) [A] 540 649 746 803 Intermittent (60 sec overload) (at 460/480 V) [A] Continuous KVA (at 400 V) [KVA] 416 456 516 554 Continuous KVA (at 460 V) [KVA] 430 470 540 582 Max. input current Continuous (at 400 V) [A] 590 647 733 787
(at 400 V) [A] Intermittent (60 sec overload) (at 400 V) [A] Continuous (at 460 / 480 V) [A] Intermittent (60 sec overload) (at 460 / 480 V) [A] Intermittent (60 sec overload) (at 460 / 480 V) [A] Continuous KVA (at 400 V) [KVA] Continuous KVA (at 400 V) [KVA] Continuous KVA (at 460 V) [KVA] Max. input current Continuous (at 400 V) [A] Continuous Continuous (at 400 V) [A] Continuous Continuous (at 400 V) [A] Continuous (at 400 V) [A] Continuous (at 400 V) [A] Section Fig. 20 Fig. 30 Fig. 3
load (at 400 V) [A] 540 590 678 730 Intermittent (60 sec overload) 594 649 746 803 (at 460/ 480 V) [A] 594 649 746 803 (at 460/ 480 V) [A] 646 516 554 Continuous KVA (at 400 V) [KVA] 647 733 787 Max. input current Continuous (at 400 V) [A] 590 647 733 787 Continuous (at 400 V) [A] 590 647 733 787 Continuous (at 400 V) [A] 590 647 733 787 Continuous (at 400 V) [A] 667 748 Continuous (at 400 V) [A] 647 733 Continuous (at 400 V) [A] 647 Continuous (at 400 V) [A
(at 460/ 480 V) [A] Intermittent (60 sec overload) (at 460/ 480 V) [A] Continuous KVA (at 400 V) [KVA] Continuous KVA (at 460 V) [KVA] Continuous KVA (at 460 V) [KVA] Max. input current Continuous (at 400 V) [A] Continuous Continuous (at 400 V) [A] Continuous (at 400 V) [A] Continuous (at 400 V) [A] F80 Continuous Continuous (at 400 V) [A] Continuous (at 400 V) [A] F80 Continuous Continuous (at 400 V) [A]
load
(at 400 V) [KVA] Continuous KVA (at 460 V) [KVA] Max. input current Continuous (at 400 V) [A] Continuous (at 400 V) [A] Continuous (at 400 V) [A] Continuous F31 F80 F80 F87 F87
(at 460 V) [KVA] 430 470 540 582 Max. input current Continuous (at 400 V) [A] 590 647 733 787 Continuous 531 580 667 718
Max. input current Continuous
Continuous (at 400 V) [A] 590 647 733 787 Continuous 531 580 667 718
531 580 667 718
(41 450) 450 4) [A]
Max. cable size, mains, motor and load share [mm² (AWG²))]
Max. cable size, brake [mm ² (AWG ²))
Max. external pre-fuses [A] 1 900 900 900
Estimated power loss at rated max. load [W] 6790 7701 8879 9670 4) , 400 V
Estimated power loss at rated max. load [W] 6082 6953 8089 8803 4) , 460 V
Weight, enclosure IP21, IP 54 [kg] 263 270 272 313
Weight, enclosure IP00 [kg] 221 234 236 277
Efficiency ⁴⁾ 0.98
Output frequency 0 - 600 Hz
Heatsink overtemp. trip 110°C
Power card ambient trip 68 °C



ama auppiy a	x 380 - 480 VAC	P500	P560	P630	P710	P800	P1M0		
	Typical Shaft out- put at 400 V [kW]	500	560	630	710	800	1000		
	Typical Shaft out- put at 460 V [HP]	650	750	900	1000	1200	1350		
	Enclosure IP21, 54 without/ with op- tions cabinet	F1/F3	F1/F3	F1/F3	F1/F3	F2/F4	F2/F4		
	Output current					I			
	Continuous (at 400 V) [A] Intermittent (60 sec	880	990	1120	1260	1460	1720		
	overload) (at 400 V) [A]	968	1089	1232	1386	1606	1892		
	Continuous (at 460/ 480 V) [A]	780	890	1050	1160	1380	1530		
<u> </u>	Intermittent (60 sec overload) (at 460/ 480 V) [A]	858	979	1155	1276	1518	1683		
	Continuous KVA (at 400 V) [KVA]	610	686	776	873	1012	1192		
	Continuous KVA (at 460 V) [KVA]	621	709	837	924	1100	1219		
ax. input curr	Continuous	857	964	1090	1227	1422	1675		
S	(at 400 V) [A] Continuous (at 460/ 480 V) [A]	759	867	1022	1129	1344	1490		
	Max. cable size,motor [mm ²		8x15	50		12x	150		
	(AWG ²⁾)]		(8x300 ı	mcm)		(12x30)	0 mcm)		
	Max. cable size,mains F1/F2	8x240 (8x500 mcm)							
	[mm ² (AWG ²⁾)] Max. cable size,mains F3/F4 [mm ² (AWG ²⁾)]	8x456 (8x900 mcm)							
	Max. cable size, loadsharing [mm ² (AWG ²)]								
	Max. cable size, brake [mm ² (AWG ²⁾)	4x185 (4x350 mcm)				6x185 (6x350 mcm)			
	Max. external pre- fuses [A] ¹	1600 2000			2500				
	Est. power loss at rated max. load [W] ⁴⁾ , 400 V, F1 & F2	10647	12338	13201	15436	18084	20358		
	Est. power loss at rated max. load [W] ⁴⁾ , 460 V, F1 & F2	9414	11006	12353	14041	17137	17752		
	Max added losses of A1 RFI, Circuit Breaker or Discon- nect, & Contactor, F3 & F4	963	1054	1093	1230	2280	2541		
	Max Panel Options Losses			400)				
	Weight, enclosure IP21, IP 54 [kg]	1004/ 1299	1004/ 1299	1004/ 1299	1004/ 1299	1246/ 1541	1246/ 1541		
	Weight Rectifier Module [kg]	102	102	102	102	136	136		
	Weight Inverter Module [kg]	102	102	102	136	102	102		
	Efficiency ⁴⁾			0.98	3				
	Output frequency			0-600	Hz				
	Heatsink over-			95 °	С				
	temp. trip Power card ambi-	95 °C 							

lains Supply 3 x 5		P45K	P55K	P75K	P90K	P110
	Typical Shaft output at 550 V [kW]	37	45	55	75	90
	Typical Shaft output at 575 V [HP]	50	60	75	100	125
	Typical Shaft output at 690 V [kW]	45	55	75	90	110
	Enclosure IP21	D1	D1	D1	D1	D1
	Enclosure IP54	D1	D1	D1	D1	D1
	Enclosure IP00	D2	D2	D2	D2	D2
tput current	2		1			
	Continuous (at 3 x 525-550 V) [A]	56	76	90	113	137
	Intermittent (60 sec	62	84	99	124	151
	overload) (at 550 V) [A]	02	04	99	124	151
	Continuous					
	(at 3 x 551-690 V) [A]	54	73	86	108	131
<u> </u>	Intermittent (60 sec					
	overload)	59	80	95	119	144
	(at 575/ 690 V) [A]	00			110	
<u> </u>	Continuous KVA					
	(at 550 V) [KVA]	53	72	86	108	131
	Continuous KVA	F.4	70	00	100	100
	(at 575 V) [KVA]	54	73	86	108	130
	Continuous KVA	65	87	103	129	157
	(at 690 V) [KVA]	65	07	103	129	157
ax. input current			ī			
	Continuous	60	77	89	110	130
	(at 550 V) [A]		.,	00		.00
	Continuous	58	74	85	106	124
	(at 575 V) [A]					
→ N V	Continuous					
	(at 690 V) [A]	58	77	87	109	128
	NA salala sina masima					
	Max. cable size, mains,			0 70 (0 0(0)		
	motor, load share and			2x70 (2x2/0)		
	brake [mm ² (AWG)]					
	Max. external pre-					
	fuses [A] 1	125	160	200	200	250
	luses [A]					
	Estimated a sussaila sa					
	Estimated power loss	1000		400-	0.455	0=00
	at rated max. load [W]	1398	1645	1827	2157	2533
	⁴⁾ , 600 V					
	Estimated power loss					
	at rated max. load [W]	1458	1717	1913	2262	2662
	⁴⁾ , 690 V					
	Weight,					
	enclosure IP21, IP 54			96		
	[kg]					
	Weight,			82		
	enclosure IP00 [kg]					1
	Efficiency ⁴⁾	0.97	0.97	0.98	0.98	0.98
	Output frequency			0 - 600 Hz		
	Heatsink overtemp.			85 °C		
	trip			00 0		
	Power card ambient trip			60 °C		



Mains Supply 3 x 5	LU U/U VAU	P132	P160	P200	P250
	Typical Shaft output at 550 V [kW]	110	132	160	200
	Typical Shaft output at 575 V [HP]	150	200	250	300
	Typical Shaft output at 690 V [kW]	132	160	200	250
	Enclosure IP21	D1	D1	D2	D2
	Enclosure IP54	D1	D1	D2	D2
	Enclosure IP00	D3	D3	D4	D4
	Output current Continuous				
	(at 550 V) [A] Intermittent (60 sec over-	162	201	253	303
	load) (at 550 V) [A]	178	221	278	333
	Continuous (at 575/ 690 V) [A]	155	192	242	290
	Intermittent (60 sec over- load) (at 575/ 690 V) [A]	171	211	266	319
	Continuous KVA (at 550 V) [KVA]	154	191	241	289
	Continuous KVA (at 575 V) [KVA]	154	191	241	289
	Continuous KVA (at 690 V) [KVA]	185	229	289	347
Max. input current	Continuous				
-	(at 550 V) [A] Continuous (at 575 V) [A]	158	198	245	299
	Continuous (at 690 V) [A]	155	197	240	296
	Max. cable size, mains motor, load share and brake [mm ² (AWG)]	2 x 70 (2 x 2/0)	2 x 70 (2 x 2/0)	2 x 150 (2 x 300 mcm)	2 x 150 (2 x 300 mcm)
	Max. external pre-fuses [A] ¹	315	350	350	400
	Estimated power loss at rated max. load [W] 4) , 600 V	2963	3430	4051	4867
	Estimated power loss at rated max. load [W] ⁴⁾ , 690 V	3430	3612	4292	5156
	Weight, Enclosure IP21, IP 54 [kg]	96	104	125	136
	Weight, Enclosure IP00 [kg]	82	91	112	123
	Efficiency ⁴⁾		0.98		
	Output frequency		0 - 600		
	Heatsink overtemp. trip	90 °C	110°C	110 °C	110 °C
	Power card ambient trip		60 °C	1	

Mains Supply 3 x 525 - 6	90 VAC	2045	Dia	BATTO
		P315	P400	P450
	Typical Shaft output at 550 V [kW]	250	315	355
	Typical Shaft output at 575 V [HP]	350	400	450
	Typical Shaft output at 690 V [kW]	315	400	450
	Enclosure IP21	D2	D2	E1
	Enclosure IP54	D2	D2	E1
	Enclosure IP00 Output current	D4	D4	E2
R	Continuous (at 550 V) [A]	360	418	470
	Intermittent (60 sec overload) (at 550 V) [A]	396	460	517
	Continuous (at 575/ 690 V) [A]	344	400	450
	Intermittent (60 sec overload) (at 575/ 690 V) [A]	378	440	495
	Continuous KVA (at 550 V) [KVA]	343	398	448
	Continuous KVA (at 575 V) [KVA]	343	398	448
	Continuous KVA (at 690 V) [KVA]	411	478	538
Max. input current				
	Continuous (at 550 V) [A]	355	408	453
→	Continuous (at 575 V) [A]	339	390	434
	Continuous (at 690 V) [A]	352	400	434
	Max. cable size, mains, motor and load share [mm ² (AWG)]	2 x 150 (2 x 300 mcm)	2 x 150 (2 x 300 mcm)	4 x 240 (4 x 500 mcm)
	Max. cable size, brake [mm ² (AWG)]	2 x 150 (2 x 300 mcm)	2 x 150 (2 x 300 mcm)	2 x 185 (2 x 350 mcm)
	Max. external pre-fuses [A] ¹	500	550	700
	Estimated power loss at rated max. load [W] ⁴⁾ , 600 V	5493	5852	6132
	Estimated power loss at rated max. load [W] ⁴⁾ , 690 V	5821	6149	6440
	Weight, enclosure IP21, IP 54 [kg]	151	165	263
	Weight, enclosure IP00 [kg]	138	151	221
	Efficiency ⁴⁾		0.98	
	Output frequency	0 - 600 Hz	0 - 500 Hz	0 - 500 Hz
	Heatsink overtemp. trip	110 °C	110 °C	110 °C
	Power card ambient trip	60 °C	60 °C	68 °C



Mains Supply 3 x 525 - 690) VAC			
		P500	P560	P630
	Typical Shaft output at 550 V [kW]	400	450	500
	Typical Shaft output at 575 V [HP]	500	600	650
	Typical Shaft output at 690 V [kW]	500	560	630
	Enclosure IP21	E1	E1	E1
	Enclosure IP54	E1	E1	E1
	Enclosure IP00	E2	E2	E2
	Output current	LZ		
	Continuous (at 550 V) [A]	523	596	630
	Intermittent (60 sec overload) (at 550 V) [A]	575	656	693
	Continuous (at 575/ 690 V) [A]	500	570	630
	Intermittent (60 sec overload) (at 575/ 690 V) [A]	550	627	693
	Continuous KVA	498	568	600
	(at 550 V) [KVA] Continuous KVA	498	568	627
	(at 575 V) [KVA] Continuous KVA			
	(at 690 V) [KVA]	598	681	753
Max. input current	(at 050 V) [KVA]			
Max. Input current	Continuous			
	(at 550 V) [A]	504	574	607
-	Continuous (at 575 V) [A]	482	549	607
	Continuous (at 690 V) [A]	482	549	607
	Max. cable size, mains, motor and load share [mm ² (AWG)]	4x240 (4x500 mcm)	4x240 (4x500 mcm)	4x240 (4x500 mcm)
	Max. cable size, brake [mm ² (AWG)]	2 x 185 (2 x 350 mcm)	2 x 185 (2 x 350 mcm)	2 x 185 (2 x 350 mcm)
	Max. external pre-fuses [A] ¹	700	900	900
	Estimated power loss at rated max. load [W] ⁴⁾ , 600 V	6903	8343	9244
	Estimated power loss at rated max. load [W] ⁴⁾ , 690 V	7249	8727	9673
	Weight, enclosure IP21, IP 54 [kg]	263	272	313
	Weight, enclosure IP00 [kg]	221	236	277
	Efficiency ⁴⁾		0.98	
	Output frequency		0 - 500 Hz	
	Heatsink overtemp, trip		110 °C	
	Power card ambient trip		68 °C	
	1 5 Wor dard diffibient trip		00 C	

Juppiy J	x 525 - 690 VAC	P710	P800	P900	P1M0	P1M2	P1M4
	Typical Shaft out- put at 550 V [kW]	560	670	750	850	1000	1100
	Typical Shaft out- put at 575 V [HP]	750	950	1050	1150	1350	1550
	Typical Shaft out- put at 690 V [kW]	710	800	900	1000	1200	1400
	Enclosure IP21, 54 without/ with op- tions cabinet	F1/ F3	F1/ F3	F1/ F3	F2/ F4	F2/ F4	F2/F4
	Output current						
	Continuous (at 550 V) [A]	763	889	988	1108	1317	1479
-	Intermittent (60 s overload, at 550 V) [A]	839	978	1087	1219	1449	1627
	Continuous (at 575/ 690 V) [A]	730	850	945	1060	1260	1415
	Intermittent (60 s overload, at 575/690 V) [A]	803	935	1040	1166	1386	1557
	Continuous KVA (at 550 V) [KVA]	727	847	941	1056	1255	1409
	Continuous KVA (at 575 V) [KVA]	727	847	941	1056	1255	1409
	Continuous KVA (at 690 V) [KVA]	872	1016	1129	1267	1506	1691
lax. input curren	Continuous (at 550 V) [A]	743	866	962	1079	1282	1440
	Continuous (at 575 V) [A]	711	828	920	1032	1227	1378
→	Continuous (at 690 V) [A]	711	828	920	1032	1227	1378
	Max. cable size,mo- tor [mm ² (AWG ²⁾)] Max. cable	(8x300 mcm) (12x300 mcm)					
	size,mains F1/F2 [mm ² (AWG ²⁾)] Max. cable	8x240 (8x500 mcm)					
	size,mains F3/F4 [mm ² (AWG ²)] Max. cable size,	8x456 8x900 mcm 4x120 (4x250 mcm)					
	loadsharing [mm ² (AWG ²⁾)]						
	Max. cable size, brake [mm ² (AWG ²⁾)	4x185 (4x350 mcm)		6x185 (6x350 mcm)			
	Max. external pre- fuses [A] ¹⁾ Est. power loss	1600		2000 2500			
	at rated max. load [W] ⁴⁾ , 600 V, F1 & F2	10771	12272	13835	15592	18281	20825
	Est. power loss at rated max. load [W] ⁴⁾ , 690 V, F1 & F2	11315	12903	14533	16375	19207	21857
	Max added losses of Circuit Breaker or Disconnect & Con- tactor, F3 & F4	427	532	615	665	863	1044
	Max Panel Options Losses	400					
	Weight,enclo- sure IP21, IP 54 [kg]	1004/ 1299	1004/ 1299	1004/ 1299	1246/ 1541	1246/ 1541	1280/1575
	Weight, Rectifier Module [kg]	102	102	102	136	136	136
	Weight, Inverter Module [kg]	102	102	136	102	102	136
	Efficiency ⁴⁾			0.98			
	Output frequency	0-500 Hz					
	Heatsink overtemp. trip	95 °C					
	Power card amb. trip			68 °	С		

- 1) For type of fuse see section *Fuses*.
- 2) American Wire Gauge.
- 3) Measured using 5 m screened motor cables at rated load and rated frequency.
- 4) The typical power loss is at nominal load conditions and expected to be within +/-15% (tolerence relates to variety in voltage and cable conditions). Values are based on a typical motor efficiency (eff2/eff3 border line). Motors with lower efficiency will also add to the power loss in the frequency converter and opposite. If the switching frequency is increased comed to the default setting, the power losses may rise significantly.keypad and typical control card power consumptions are included. Further options and customer load may add up to 30W to the losses. (Though typical only 4W extra for a fully loaded control card, or options for slot A or slot B, each).

Although measurements are made with state of the art equipment, some measurement inaccuracy must be allowed for (+/-5%).



Alarms and Warnings

A warning or an alarm is signalled by the relevant LED on the front of the frequency converter and indicated by a code on the display.

A warning remains active until its cause is no longer present. Under certain circumstances operation of the motor may still be continued. Warning messages may be critical, but are not necessarily so.

In the event of an alarm, the frequency converter will have tripped. Alarms must be reset to restart operation once their cause has been rectified.

This may be done in four ways:

- 1. By using the [RESET] control button on the keypad.
- 2. Via a digital input with the "Reset" function.
- 3. Via serial communication/optional fieldbus.
- 4. By resetting automatically using the [Auto Reset] function, which is a default setting for TR200 Drive, see par.14-20 Reset Mode in the TR200 Programming Guide

Note After a manual reset using the [RESET] button on the keypad, the [AUTO ON] or [HAND ON] button must be pressed to restart the motor.

If an alarm cannot be reset, the reason may be that its cause has not been rectified, or the alarm is trip-locked (see also table on following page).

Alarms that are trip-locked offer additional protection, means that the mains supply must be switched off before the alarm can be reset. After being switched back on, the frequency converter is no longer blocked and may be reset as described above once the cause has been rectified.

Alarms that are not trip-locked can also be reset using the automatic reset function in par.14-20 Reset Mode

∆CAUTION

Automatic wake-up is possible!
Could result in equipment or property damage.

If a warning and alarm is marked against a code in the table on the following page, this means that either a warning occurs before an alarm, or it can be specified whether it is a warning or an alarm that is to be displayed for a given fault.

This is possible, for instance, in par.1-90 <u>Motor Thermal Protection</u>. After an alarm or trip, the motor carries on coasting, and the alarm and warning flash on the frequency converter. Once the problem has been rectified, only the alarm continues flashing.



No.	Description	Warn- ing	Alarm/Trip	Alarm/Trip Lock	Parameter Reference
1	10 Volts low	Χ			
2	Live zero error	(X)	(X)		6-01
3	No motor	(X)			1-80
4	Mains phase loss	(X)	(X)	(X)	14-12
5	DC link voltage high	Х			
6	DC link voltage low	Χ			
7	DC over voltage	Χ	X		
8	DC under voltage	Χ	X		
9	Inverter overloaded	Х	X		
10	Motor ETR over temperature	(X)	(X)		1-90
11	Motor thermistor over temperature	(X)	(X)		1-90
12	Torque limit	Χ	X		
13	Over Current	Х	X	X	
14	Earth fault	Χ	X	X	
15	Hardware mismatch		X	X	
16	Short Circuit		Χ	X	
17	Control word timeout	(X)	(X)		8-04
23	Internal Fan Fault	Χ			
24	External Fan Fault	Χ			14-53
25	Brake resistor short-circuited	Χ			
26	Brake resistor power limit	(X)	(X)		2-13
27	Brake chopper short-circuited	Χ	Χ		
28	Brake check	(X)	(X)		2-15
29	Drive over temperature	Χ	Х	Χ	
30	Motor phase U missing	(X)	(X)	(X)	4-58
31	Motor phase V missing	(X)	(X)	(X)	4-58
32	Motor phase W missing	(X)	(X)	(X)	4-58
33	Inrush fault		Х	Χ	
34	Fieldbus communication fault	Χ	Χ		
35	Out of frequency range	Χ	Χ		
36	Mains failure	Χ	Χ		
37	Phase Imbalance	Χ	X		
38	Internal fault		Χ	X	
39	Heatsink sensor		Χ	Χ	
40	Overload of Digital Output Terminal 27	(X)			5-01
41	Overload of Digital Output Terminal 29	(X)			5-02
42	Overload of Digital Output On X30/6	(X)			5-32
42	Overload of Digital Output On X30/7	(X)			5-33
46	Pwr. card supply		Χ	Χ	
47	24 V supply low	Х	Χ	Χ	
48	1.8 V supply low		Χ	Χ	
49	Speed limit	Х	(X)		1-86
50	AMA calibration failed		X		
51	AMA check U _{nom} and I _{nom}		Х		
52	AMA low I _{nom}		Х		
53	AMA motor too big		X		
54	AMA motor too small		X		
55	AMA Parameter out of range		X		
56	AMA interrupted by user		X		
57	AMA timeout		X		
58	AMA internal fault	Х	X		
58	Current limit	X	^		
		X			
60	External Interlock				
62	Output Frequency at Maximum Limit	X			
64	Voltage Limit	Χ			

Table 8. 1: Alarm/Warning code list

No.	Description	Warn- ing	Alarm/Trip	•	Parameter Reference
65	Control Board Over-temperature	Χ	X	X	
66	Heat sink Temperature Low	Χ			
67	Option Configuration has Changed		X		
68	Safe Stop Activated		X ¹⁾		
69	Pwr. Card Temp		X	Χ	
70	Illegal FC configuration			X	
71	PTC 1 Safe Stop	Χ	X ¹⁾		
72	Dangerous Failure			X ¹⁾	
73	Safe Stop Auto Restart				
76	Power Unit Setup	Х			
79	Illegal PS config		Χ	X	
80	Drive Initialized to Default Value		X		
91	Analog input 54 wrong settings			X	
92	NoFlow	Х	X		22-2*
93	Dry Pump	Χ	Χ		22-2*
94	End of Curve	Χ	X		22-5*
95	Broken Belt	Χ	Χ		22-6*
96	Start Delayed	Χ			22-7*
97	Stop Delayed	Χ			22-7*
98	Clock Fault	Χ			0-7*
201	Fire M was Active				
202	Fire M Limits Exceeded				
203	Missing Motor				
204	Locked Rotor				
243	Brake IGBT	Χ	X		
244	Heatsink temp	Χ	X	X	
245	Heatsink sensor		X	X	
246	Pwr.card supply		X	X	
247	Pwr.card temp		X	X	
248	Illegal PS config		X	X	
250	New spare parts			X	
251	Type Code		Х	Х	

Table 8. 2: Alarm/Warning code list

(X) Dependent on parameter

1) Can not be Auto reset via par.14-20 Reset Mode

A trip is the action when an alarm has appeared. The trip will coast the motor and can be reset by pressing the reset button or make a reset by a digital input (parameter group 5-1* [1]). The original event that caused an alarm cannot damage the frequency converter or cause dangerous conditions. A trip lock is an action when an alarm occurs, which may cause damage to frequency converter or connected parts. A Trip Lock situation can only be reset by a power cycling.

LED indication	
Warning	yellow
Alarm	flashing red
Trip locked	yellow and red

Table 8. 3: LED Indication



Bit	Hex	Dec	Alarm Word	Warning Word	Extended Status Word
0	00000001	1	Brake Check	Brake Check	Ramping
1	00000002	2	Pwr. Card Temp	Pwr. Card Temp	AMA Running
2	00000004	4	Earth Fault	Earth Fault	Start CW/CCW
3	8000000	8	Ctrl.Card Temp	Ctrl.Card Temp	Slow Down
4	00000010	16	Ctrl. Word TO	Ctrl. Word TO	Catch Up
5	00000020	32	Over Current	Over Current	Feedback High
6	00000040	64	Torque Limit	Torque Limit	Feedback Low
7	0800000	128	Motor Th Over	Motor Th Over	Output Current High
8	00000100	256	Motor ETR Over	Motor ETR Over	Output Current Low
9	00000200	512	Inverter Overld.	Inverter Overld.	Output Freq High
10	00000400	1024	DC under Volt	DC under Volt	Output Freq Low
11	0080000	2048	DC over Volt	DC over Volt	Brake Check OK
12	00001000	4096	Short Circuit	DC Voltage Low	Braking Max
13	00002000	8192	Inrush Fault	DC Voltage High	Braking
14	00004000	16384	Mains ph. Loss	Mains ph. Loss	Out of Speed Range
15	0008000	32768	AMA Not OK	No Motor	OVC Active
16	00010000	65536	Live Zero Error	Live Zero Error	
17	00020000	131072	Internal Fault	10V Low	
18	00040000	262144	Brake Overload	Brake Overload	
19	00080000	524288	U phase Loss	Brake Resistor	
20	00100000	1048576	V phase Loss	Brake IGBT	
21	00200000	2097152	W phase Loss	Speed Limit	
22	00400000	4194304	Fieldbus Fault	Fieldbus Fault	
23	00800000	8388608	24 V Supply Low	24V Supply Low	
24	01000000	16777216	Mains Failure	Mains Failure	
25	02000000	33554432	1.8V Supply Low	Current Limit	
26	04000000	67108864	Brake Resistor	Low Temp	
27	08000000	134217728	Brake IGBT	Voltage Limit	
28	10000000	268435456	Option Change	Unused	
29	20000000	536870912	Drive Initialized	Unused	
30	40000000	1073741824	Safe Stop	Unused	

Table 8. 4: Description of Alarm Word, Warning Word and Extended Status Word

The alarm words, warning words and extended status words can be read out via serial bus or optional fieldbus for diagnosis. See also par.16-90 Alarm Word, par.16-92 Warning Word and par.16-94 Ext. Status Word.

Fault Messages

∕•\WARNING

Hazardous Service Procedures!

The maintenance and troubleshooting procedures recommended in this section of the manual could result in exposure to electrical, mechanical or other potential safety hazards. Always refer to the safety warnings provided throughout this manual concerning these procedures. Unless specified otherwise, disconnect all electrical power including remote disconnect and discharge all energy storing devices such as capacitors before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. When necessary to work with live electrical components, have a qualified licensed electrician or other individual who has been trained in handling live electrical components perform these tasks. Failure to follow all of the recommended safety warnings provided, could result in death or serious injury.

WARNING 1, 10 volts low

The control card voltage is below 10 V from terminal

Remove some of the load from terminal 50, as the 10 V supply is overloaded. Max. 15 mA or minimum 590 Ω.

This condition can be caused by a short in a connected potentiometer or improper wiring of the potentiometer.

⚠WARNING

Live Electrical Components!

Troubleshooting: Remove the wiring from terminal 50. If the warning clears, the problem is with the customer wiring. If the warning does not clear, replace the control card.

WARNING/ALARM 2, Live zero error

This warning or alarm will only appear if programmed by the user in par.6-01 Live Zero Timeout Function. The signal on one of the analog inputs is less than 50% of the minimum value programmed for that input. This condition can be caused by broken wiring or faulty device sending the signal.

WARNING/ALARM 3, No motor

No motor has been connected to the output of the frequency converter. This warning or alarm will only appear if programmed by the user in par.1-80 Function at Stop.

Troubleshooting: Check the connection between the drive and the motor.

WARNING/ALARM 4, Mains phase loss A phase is missing on the supply side, or the mains voltage imbalance is too high. This message also appears for a fault in the input rectifier on the frequency converter. Options are programmed at par.14-12 Function at Mains Imbalance.

∕!\WARNING

Live Electrical Components!

Troubleshooting: Check the supply voltage and supply currents to the frequency converter.

WARNING 5, DC link voltage high

The intermediate circuit voltage (DC) is higher than the high voltage warning limit. The limit is dependent on the drive voltage rating. The frequency converter is still active.

WARNING 6, DC link voltage low

The intermediate circuit voltage (DC) is lower than the low voltage warning limit. The limit is dependent on the drive voltage rating. The frequency converter is still active.

WARNING/ALARM 7, DC overvoltage

If the intermediate circuit voltage exceeds the limit, the frequency converter trips after a time.

Troubleshooting:

Extend the ramp time

Change the ramp type

Activate functions in par.2-10 Brake Function

Increase par.14-26 Trip Delay at Inverter Fault

WARNING/ALARM 8, DC under voltage

If the intermediate circuit voltage (DC) drops below the under voltage limit, the frequency converter checks if a 24 V backup supply is connected. If no 24 V backup supply is connected, the frequency converter trips after a fixed time delay. The time delay varies with unit size.

WARNING/ALARM 9. Inverter overloaded

The frequency converter is about to cut out because of an overload (too high current for too long). The counter for electronic, thermal inverter protection gives a warning at 98% and trips at 100%, while giving an alarm. The frequency converter cannot be reset until the counter is below 90%.

The fault is that the frequency converter is overloaded by more than 100% for too long. NOTE: See the derating section in the Design Guide for more details if a high switching frequency is required.

WARNING/ALARM 10, Motor overload temperature

According to the electronic thermal protection (ETR), the motor is too hot. Select whether the frequency converter gives a warning or an alarm when the counter reaches 100% in par.1-90 Motor Thermal Protection. The fault is that the motor is overloaded by more than 100% for too long.

∕!\WARNING

Live Electrical Components!

Troubleshooting:

Check if motor is over heating.

If the motor is mechanically overloaded

That the motor par.1-24 Motor Current is set correctly.

Motor data in parameters 1-20 through 1-25 are set correctly.

The setting in par.1-91 Motor External Fan.

Run AMA in par.1-29 Automatic Motor Adaptation (AMA).

WARNING/ALARM 11, Motor thermistor over temp

The thermistor or the thermistor connection is disconnected. Select whether the frequency converter gives a warning or an alarm when the counter reaches 100% in par.1-90 Motor Thermal Protection.

∕!\WARNING

Live Electrical Components!

Troubleshooting:

Check if motor is over heating.

Check if the motor is mechanically overloaded.

Check that the thermistor is connected correctly between terminal 53 or 54 (analog voltage input) and terminal 50 (+10 V supply), or between terminal 18 or 19 (digital input PNP only) and terminal 50.

If a KTY sensor is used, check for correct connection between terminal 54 and 55.

If using a thermal switch or thermistor, check the programming of par.1-93 Thermistor Source matches sensor wiring.

If using a KTY sensor, check the programming of ameters 1-95, 1-96, and 1-97 match sensor wir-

WARNING/ALARM 12, Torque limit

The torque is higher than the value in par.4-16 Torque Limit Motor Mode (in motor operation) or the torque is higher than the value in par.4-17 Torque Limit Generator Mode (in regenerative operation). Par. 14-25 Trip Delay at Torque Limit can be used to change this from a warning only condition to a warning followed by an alarm.

WARNING/ALARM 13, Over Current

The inverter peak current limit (approx. 200% of the rated current) is exceeded. The warning lasts about 1.5 sec., then the frequency converter trips and issues an alarm. If extended mechanical brake control is selected, trip can be reset externally.

⚠WARNING

Disconnect power before proceeding.

Troubleshooting:

This fault may be caused by shock loading or fast acceleration with high inertia loads.

Turn off the frequency converter. Check if the motor shaft can be turned.

Check that the motor size matches the frequency converter.

Incorrect motor data in parameters 1-20 through 1-25.

ALARM 14, Earth (ground) fault

There is a discharge from the output phases to earth, either in the cable between the frequency converter and the motor or in the motor itself.

^WARNING

Disconnect power before proceeding.

Troubleshooting:

Turn off the frequency converter and remove the earth fault.

Measure the resistance to ground of the motor leads and the motor with a megohmmeter to check for earth faults in the motor.

Perform current sensor test.

ALARM 15, Hardware mismatch

A fitted option is not operational with the present control board hardware or software.

Record the value of the following parameters and contact your Trane supplier:

Par.15-40 FC Type

Par.15-41 Power Section

Par.15-42 Voltage

Par.15-43 Software Version

Par.15-45 Actual Typecode String

Par.15-49 SW ID Control Card

Par.15-50 SW ID Power Card

Par.15-60 Option Mounted

Par.15-61 Option SW Version

ALARM 16, Short circuit

There is short-circuiting in the motor or on the motor terminals.

≜WARNING

Disconnect power before proceeding.

Turn off the frequency converter and remove the short-circuit.

WARNING/ALARM 17, Control word timeout

There is no communication to the frequency converter.

The warning will only be active when par.8-04 <u>Control</u> <u>Word Timeout Function</u> is NOT set to OFF.

If par.8-04 <u>Control Word Timeout Function</u> is set to *Stop* and *Trip*, a warning appears and the frequency converter ramps down until it trips, while giving an alarm.

∴WARNING

Live Electrical Components!

Troubleshooting:

Check connections on the serial communication cable.

Increase par.8-03 Control Word Timeout Time

Check operation of the communication equipment

Verify proper installation based on EMC requirements.

WARNING 23, Internal fan fault

The fan warning function is an extra protection function that checks if the fan is running / mounted. The fan warning can be disabled in par.14-53 <u>Fan Monitor</u> ([0] Disabled).

For the D, E, and F Frame drives, the regulated voltage to the fans is monitored.

^WARNING

Disconnect power before proceeding.

Troubleshooting:

Check fan resistance.

Check soft charge fuses.

WARNING 24, External fan fault

The fan warning function is an extra protection function that checks if the fan is running / mounted. The fan warning can be disabled in par.14-53 <u>Fan Monitor</u> ([0] Disabled).

For the D, E, and F Frame drives, the regulated voltage to the fans is monitored.

Troubleshooting:

Check fan resistance.

Check soft charge fuses.

WARNING/ALARM 28, Brake check failed

Brake resistor fault: the brake resistor is not connected or not working.

Check par.2-15 Brake Check.

ALARM 29, Heatsink temp

The maximum temperature of the heatsink has been exceeded. The temperature fault will not be reset until the temperature falls below a defined heatsink temperature. The trip and reset point are different based on the drive power size.

Troubleshooting:

Ambient temperature too high.

Too long motor cable.

Incorrect clearance above and below the drive.

Dirty heatsink.

Blocked air flow around the drive.

Damaged heatsink fan.

For the D, E, and F Frame Drives, this alarm is based on the temperature measured by the heatsink sensor mounted inside the IGBT modules. For the F Frame drives, this alarm can also be caused by the thermal sensor in the Rectifier module.

⚠WARNING

Disconnect power before proceeding.

Troubleshooting:

Check fan resistance.

Check soft charge fuses.

IGBT thermal sensor.

ALARM 30, Motor phase U missing

Motor phase U between the frequency converter and the motor is missing.

∕NWARNING

Disconnect power before proceeding.

Turn off the frequency converter and check motor phase U.

ALARM 31, Motor phase V missing

Motor phase V between the frequency converter and the motor is missing.

∕!\WARNING

Disconnect power before proceeding.

Turn off the frequency converter and check motor phase V.

ALARM 32, Motor phase W missing

Motor phase W between the frequency converter and the motor is missing.

∕NWARNING

Disconnect power before proceeding.

Turn off the frequency converter and check motor phase W.

ALARM 33, Inrush fault

Too many power-ups have occurred within a short time period. Let unit cool to operating temperature.

WARNING/ALARM 34, Fieldbus communication fault

The fieldbus on the communication option card is not working.

WARNING/ALARM 35, Out of frequency range:

This warning is active if the output frequency has reached the high limit (set in par. 4-53) or low limit (set in par. 4-52). In *Process Control, Closed Loop* (. 1-00) this warning is displayed.

WARNING/ALARM 36, Mains failure

This warning/alarm is only active if the supply voltage to the frequency converter is lost and par.14-10 Mains Failure is NOT set to OFF. Check the fuses to the frequency converter



ALARM 38. Internal fault

It may be necessary to contact your Trane supplier. Some typical alarm messages:

0	Serial port cannot be initialized. Serious hardware failure
256-25 8	Power EEPROM data is defect or too old
512	Control board EEPROM data is defect or too old
513	Communication time out reading EE-PROM data
514	Communication time out reading EE-PROM data
515	Application Orientated Control cannot recognize the EEPROM data
516	Cannot write to the EEPROM because a write command is on progress
517	Write command is under time out
518	Failure in the EEPROM
519	Missing or invalid Barcode data in EE- PROM
783	Parameter value outside of min/max limits
1024-	A can-telegram that has to be sent,
1279	couldn't be sent
1281	Digital Signal Processor flash timeout
1282	Power micro software version mismatch
1283	Power EEPROM data version mismatch
1284	Cannot read Digital Signal Processor software version
1299	Option SW in slot A is too old
1300	Option SW in slot B is too old
1302	Option SW in slot C1 is too old
1315	Option SW in slot A is not supported (not allowed)
1316	Option SW in slot B is not supported (not allowed)
1318	Option SW in slot C1 is not supported (not allowed)
1379	Option A did not respond when calculating Platform Version.
1380	Option B did not respond when calculat-
	ing Platform Version.
1536	An exception in the Application Orienta- ted Control is registered. Debug infor- mation written in keypad
1792	DSP watchdog is active. Debugging of power part data Motor Orientated Con-

trol data not transferred correctly

2049	Power data restarted
2064-2 072	H081x: option in slot x has restarted
2080-2 088	H082x: option in slot x has issued a powerup-wait
2096-2	H083x: option in slot x has issued a legal
104	powerup-wait
2304	Could not read any data from power EE-PROM
2305	Missing SW version from power unit
2314	Missing power unit data from power unit
2315	Missing SW version from power unit

ALARM 39, Heatsink sensor

No feedback from the heatsink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gate drive card, or the ribbon cable between the power card and gate drive card.

WARNING 40, Overload of Digital Output Terminal 27

Check the load connected to terminal 27 or remove short-circuit connection. Check par.5-01 Terminal 27

WARNING 41, Overload of Digital Output Terminal 29

Check the load connected to terminal 29 or remove short-circuit connection. Check par.5-02 Terminal 29 Mode.

WARNING 42, Overload of Digital Output on X30/6 or Overload of Digital Output on X30/7

For X30/6, check the load connected to X30/6 or remove short-circuit connection. Check par.5-32 Term X30/6 Digi Out (MCB 101).

For X30/7, check the load connected to X30/7 or remove short-circuit connection. Check par.5-33 Term X30/7 Digi Out (MCB 101).

ALARM 46, Power card supply

The supply on the power card is out of range.

There are three power supplies generated by the switch mode power supply (SMPS) on the power card: 24 V, 5V, +/- 18V. When powered with three phase mains voltage, all three supplied are moni-

WARNING 47, 24 V supply low

The 24 Vdc is measured on the control card.

WARNING 48, 1.8 V supply low

The 1.8 Vdc supply used on the control card is outside of allowable limits. The power supply is measured on the control card.

WARNING 49, Speed limit

When the speed is not within the specified range in par. 4-11 and par. 4-13. the drive will show a warning. When the speed is below the specified limit in par. 1-86 <u>Trip Speed Low [RPM]</u> (except when starting or stopping) the drive will trip.

ALARM 50, AMA calibration failed

Contact your Trane supplier.

ALARM 51, AMA check Unom and Inom

The setting of motor voltage, motor current, and motor power is presumably wrong. Check the settings.

ALARM 52, AMA low Inom

The motor current is too low. Check the settings.

ALARM 53, AMA motor too big

The motor is too big for the AMA to be carried out.

ALARM 54, AMA motor too small

The motor is too big for the AMA to be carried out.

ALARM 55, AMA Parameter out of range

The parameter values found from the motor are outside acceptable range.

ALARM 56, AMA interrupted by user

The AMA has been interrupted by the user.

ALARM 57, AMA timeout

Try to start the AMA again a number of times, until the AMA is carried out. Please note that repeated runs may heat the motor to a level where the resistance Rs and Rr are increased. In most cases, however, this is not critical.

ALARM 58, AMA internal fault

Contact your Trane supplier.

WARNING 59, Current limit

The current is higher than the value in par.4-18 <u>Current Limit</u>.

WARNING 60, External interlock

External interlock has been activated. To resume normal operation, apply 24 Vdc to the terminal programmed for external interlock and reset the frequency converter (via serial communication, digital I/O, or by pressing reset button on keypad).

WARNING 61, Tracking error

An error has been detected between calculated motor speed and speed measurement from feedback device. The function for Warning/Alarm/Disable is set in 4-30, *Motor Feedback Loss Function*, error setting in 4-31, *Motor Feedback Speed Error*, and the allowed error time in 4-32, *Motor Feedback Loss Timeout*. During a commissioning procedure the function may be effective.

WARNING 62, Output frequency at maximum limit

The output frequency is higher than the value set in par.4-19 Max Output Frequency

WARNING 64, Voltage limit

The load and speed combination demands a motor voltage higher than the actual DC link voltage.

WARNING/ALARM/TRIP 65, Control card over temperature

Control card over temperature: The cutout temperature of the control card is 80° C.

WARNING 66, Heatsink temperature low

This warning is based on the temperature sensor in the IGBT module.

Troubleshooting:

ALARM 67, Option module configuration has changed

One or more options have either been added or removed since the last power-down.

ALARM 68, Safe stop activated

Safe stop has been activated. To resume normal operation, apply 24 Vdc to terminal 37, then send a reset signal (via Bus, Digital I/O, or by pressing the reset key. See par. .

ALARM 69, Power card temperature

The temperature sensor on the power card is either too hot or too cold.

Troubleshooting:

Check the operation of the door fans.

Check that the filters for the door fans are not blocked.

Check that the gland plate is properly installed on IP 21 and IP 54 (NEMA 1 and NEMA 12) drives.

ALARM 70, Illegal FC Configuration

Actual combination of control board and power board is illegal.

ALARM 72, Dangerous failure

Safe stop with trip lock. Unexpected signal levels on safe stop.

Warning 76, Power Unit Setup

The required number of power units does not match the detected number of active power units.

Troubleshooting:

WARNING 73, Safe stop auto restart

Safe stopped. Note that with automatic restart enabled, the motor may start when the fault is cleared.



WARNING 77, Reduced power mode:

This warning indicates that the drive is operating in reduced power mode (i.e. less than the allowed number of inverter sections). This warning will be generated on power cycle when the drive is set to run with fewer inverters and will remain on.

ALARM 79, Illegal power section configuration

The scaling card is the incorrect part number or not installed. Also MK102 connector on the power card could not be installed.

ALARM 80, Drive initialized to default value

Parameter settings are initialized to default settings after a manual reset.

ALARM 91, Analog input 54 wrong settings

Switch S202 has to be set in position OFF (voltage input) when a KTY sensor is connected to analog input terminal 54.

ALARM 92, No flow

A no-load situation has been detected in the system. See parameter group 22-2.

ALARM 93, Dry pump

A no-flow situation and high speed indicates that the pump has run dry. See parameter group 22-2.

ALARM 94, End of curve

Feedback stays lower than the set point which may indicate leakage in the pipe system.

ALARM 95, Broken belt

Torque is below the torque level set for no load, indicating a broken belt. See parameter group 22-6.

ALARM 96, Start delayed

Motor start has been delayed due to short-cycle protection active. See parameter group 22-7.

WARNING 97, Stop delayed

Stopping the motor has been delayed due to short cycle protection is active. See parameter group 22-7.

WARNING 98, Clock fault

Clock Fault. Time is not set or RTC clock (if mounted) has failed. See parameter group 0-7.

WARNING 201, Fire M was Active

Fire Mode has been active.

WARNING 202, Fire M Limits Exceeded

Fire Mode has suppressed one or more warranty voiding alarms.

WARNING 203, Missing Motor

A multi-motor under-load situation was detected, this could be due to e.g. a missing motor.

WARNING 204, Locked Rotor

A multi-motor overload situation was detected, this could be due to e.g. a locked rotor.

ALARM 244, Heatsink temperature

This alarm is only for F Frame drives. It is equivalent to Alarm 29. The report value in the alarm log indicates which power module generated the alarm:

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 drive.
- 2 = right inverter module in F1 or F3 drive.
- 3 = right inverter module in F2 or F4 drive.
- 5 = rectifier module.

ALARM 245, Heatsink sensor

This alarm is only for F Frame drives. It is equivalent to Alarm 39. The report value in the alarm log indicates which power module generated the alarm:

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 drive.
- 2 = right inverter module in F1 or F3 drive.
- 3 = right inverter module in F2 or F4 drive.
- 5 = rectifier module.

ALARM 246, Power card supply

This alarm is only for F Frame drives. It is equivalent to Alarm 46. The report value in the alarm log indicates which power module generated the alarm:

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 drive.
- 2 = right inverter module in F1 or F3 drive.
- 3 = right inverter module in F2 or F4 drive.
- 5 = rectifier module.

ALARM 247, Power card temperature

This alarm is only for F Frame drives. It is equivalent to Alarm 69. The report value in the alarm log indicates which power module generated the alarm:

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 drive.
- 2 = right inverter module in F1 or F3 drive.
- 3 = right inverter module in F2 or F4 drive.
- 5 = rectifier module.

ALARM 248, Illegal power section configura-

This alarm is only for F Frame drives. It is equivalent to Alarm 79. The report value in the alarm log indicates which power module generated the alarm:

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 drive.
- 2 = right inverter module in F1 or F3 drive.
- 3 = right inverter module in F2 or F4 drive.
- 5 = rectifier module.

ALARM 250, New spare part

The power or switch mode power supply has been exchanged. The frequency converter type code must be restored in the EEPROM. Select the correct type code in par.14-23 Typecode Setting according to the label on the unit. Remember to select 'Save to EE-PROM' to complete.

ALARM 251, New type code

The frequency converter has a new type code.



_	
Λ	
_	

Abbreviations And Standards	
Acceleration Time	
Access To Control Terminals	
Airflow	
Alarm/warning Code List	
Alarms And Warnings	
Ama	
Analog Inputs	
Analog Output	
Auto Energy Optimization Compressor	
Auto Energy Optimization Vt	
Automatic Motor Adaptation (ama)	
_	
3	
Back Cooling	
Brake Cable	
Brake Control	
Brake Function	
Brake Resistor Temperature Switch	
Broken Belt Delay	
Broken Belt Function	
Broken Belt Torque	
bioken beit forque	22-01
Cable Lengths And Cross Sections	
Cable Positions	
Cable-length And Cross-section:	
Cabling	
Changes Made	
Changing A Group Of Numeric Data Values	
Changing A Text Value	
Changing Data	
Changing Of Data Value	
Changing Parameter Data	
Coast Inverse	
Coasting	
Communication Option	
Configuration Mode	
Control Cables	
Control Cables	
Control Card Performance	
Control Card, 10 V Dc Output	
Control Card, 24 Vdc Output	
•	
Control Card, Rs-485 Serial Communication:	
Control Clard, Usb Serial Communication	
Control Characteristics	
Control Terminals	
Cooling	
Cooling	
Copyright, Limitation Of Liability And Revision Rights	
Oc Hold/preheat Current	2-00
Dc Link	
Default Settings	
Digital Inputs:	

Digital Output	16
Disposal Instruction	
Drip Shield Installation	
Drives With Factory Installed Brake Chopper Option	
Duct Cooling	
Duct Work Cooling Kits	
_	
E	
Earth Leakage Current	1
Earthing	6
Elcb Relays	6
Electrical Installation	
Floridad Data vo	8
Electrical Ratings	
Electronic Waste	
Example Of Changing Parameter Data	
External Fan Supply	
F	
Fault Messages	18
Feedback 1 Conversion	
Feedback 1 Source	20-00 13
Feedback 2 Conversion	20-04 13
Feedback 2 Source	20-03 13
Feedback 3 Conversion	20-07 13
Feedback Function	20-20 13
Fieldbus Connection	7
Floor Mounting	5
Flying Start	1-73 11
Frequency Converter Identification	
Function At Stop	1-80 11
Function Relay	5-40 12
Function Setups	10
Fuse Tables	6
Fuses	6
Fusing	5
^	
G	
General Considerations	2
Gland/conduit Entry - Ip21 (nema 1) And Ip54 (nema12)	4
Graphical Display	8
Н	
How To Connect A Pc To The Frequency Converter	
How To Operate Graphical	8
Indexed Parameters	14
Indicator Lights (leds)	9
Initialisation	9
Input Polarity Of Control Terminals	8
Installation At High Altitudes (pelv)	1
Installation Of 24 Volt External Dc Supply	7
Installation Of Duct Cooling Kit In Rittal	
Installation Of Input Plate Options	
Installation Of Mains Shield For Frequency Converters	
Installation On Pedestal	
Installation On The Wall - Ip21 (nema 1) And Ip54 (nema 12) Units	
Interval Between Starts	
It Mains	
J	
[log Speed Hz]	3-11 10

Κ

•	
ty Sensor	
nguage	0-0
nguage Package 1	
nguage Package 2	
nguage Package 3	
nguage Package 4	
akage Current	
ds	
ting	
erature	
re Zero Timeout Function	
e Zero Timeout Tunction	
ad Sharing	
ggings	
v Speed Detection	22-2
in Menu	
in Menu Mode	
in Menu Mode	
in Reactance	
ins Connection	
ins Supply (I1, L2, L3):	
ins Supply 3 X 525- 690 Vac	
ximum Reference	3-0
chanical Brake Control	
chanical Dimensions	
chanical Dimensions	
chanical Installation	
nimum Reference	
nimum Run Time	
initiani kan time	
nimum Sleep Time	22-4
tor Bearing Currents	
tor Cable	
tor Current	1-2
tor Frequency	
tor Name Plate	
tor Nominal Speed	
tor Output	
tor Output otor Power Hp]	
• -	
otor Power Kw]	
tor Protection	
tor Rotation Check	1-2
tor Speed Direction	4-1
otor Speed High Limit Hz]	4-1
otor Speed High Limit Rpm]	
otor Speed Low Limit Hz]	
otor Speed Low Limit Rpm]	
or Thermal Protection	
tor Voltage	
Personal Menu	
me Plate Data	
Operation	
flow Delay	
flow Function	າາ າ

Non UI Compliance	. 69
0	
Ordering	. 45
Output Performance (u, V, W)	
Outside Installation/ Nema 3r Kit For Rittal	. 48
Over-voltage Control2-1	7 117
P	
Parallel Connection Of Motors	86
Parameter Data	
Parameter Selection	
Parameter Set-up	
Pc Software Tools	
Pedestal Installation	. 50
Pid Integral Time20-94	1 134
Pid Normal/ Inverse Control20-8	134
Pid Proportional Gain20-93	3 134
Planning The Installation Site	. 15
Potentiometer Reference	. 80
Power Connections	. 52
Preset Reference3-10	118
Protection	69
Protection And Features	
Pulse Inputs	
Pulse Start/stop	. 79
Q	
Quick Menu	
	102
Quick Menu Mode	
Quick Menu Mode	
Quick Transfer Of Parameter Settings When Using	91
R	
Ramp 1 Ramp Down Time 3-4:	107
Ramp 1 Ramp Up Time 3-4	
Receiving The Frequency Converter	
Reference 1 Source 3-1	
Reference 2 Source	5 119
Relay Outputs	. 169
Residual Current Device	11
Rfi Switch	. 63
Rs-485 Bus Connection	94
S	
Screened/armoured	82
Screened/armoured	. 53
Screened/armoured Screening Of Cables:	. 53 1 120
Screened/armoured Screening Of Cables: Semi-auto Bypass Set-up	. 53 1 120 . 170
Screened/armoured Screening Of Cables: Semi-auto Bypass Set-up 4-6-6-6-6-6-6-6-6-6-6-6-6-6-6-6-6-6-6-6	. 53 1 120 . 170 I 133
Screened/armoured Screening Of Cables: Semi-auto Bypass Set-up 4-6 Serial Communication 20-2 Setpoint 1 20-2 Setpoint 2 20-2 Shielded Cables 20-2	53 1 120 170 1 133 2 134 64
Screened/armoured Screening Of Cables: Semi-auto Bypass Set-up	53 1 120 170 1 133 2 134 64 5 136
Screened/armoured Screening Of Cables: Semi-auto Bypass Set-up	53 1 120 170 1 133 2 134 1 64 5 136
Screened/armoured Screening Of Cables: Semi-auto Bypass Set-up Setial Communication Setpoint 1 Setpoint 2 Setpoint 2 Schielded Cables Short Cycle Protection Sine-wave Filter Space	53 4 120 170 I 133 2 134 64 5 136 53 26
Screened/armoured Screening Of Cables: Semi-auto Bypass Set-up	53 4 120 170 1 133 2 134 64 5 136 136 136 136 136 136 136 136
Screened/armoured Screening Of Cables: Semi-auto Bypass Set-up	53 4 120 170 1 133 2 134 6 64 5 136 1 53 2 26 80
Screened/armoured	53 4 120 170 1 133 2 134 1 64 5 136 1 53 2 26 1 115 79
Screening Of Cables: Semi-auto Bypass Set-up	53 1 120 170 1 133 2 134 1 64 5 136 1 53 2 26 1 115 7 79 1 114
Screened/armoured	53 1 120 1 170 1 133 2 134 1 64 5 136 1 53 2 26 1 115 7 79 1 114 9 2



Surroundings		169
Switches S201, S202, And S801		83
Switching Frequency	14-01	129
Switching Frequency:		53
Т		
Terminal 27 Mode	5-01	120
Terminal 29 Mode	5-02	120
Terminal 42 Output	6-50	126
Terminal 42 Output Max Scale	6-52	128
Terminal 42 Output Min Scale	6-51	127
Terminal 53 Filter Time Constant	6-16	125
Terminal 53 High Ref./feedb. Value	6-15	125
Terminal 53 High Voltage	6-11	125
Terminal 53 Live Zero	6-17	125
Terminal 53 Low Ref./feedb. Value	6-14	125
Terminal 53 Low Voltage	6-10	125
Terminal 54 Filter Time Constant	6-26	126
Terminal 54 High Ref./feedb. Value	6-25	126
Terminal 54 High Voltage	6-21	125
Terminal 54 Live Zero	6-27	126
Terminal 54 Low Ref./feedb. Value	6-24	126
Terminal 54 Low Voltage	6-20	125
Terminal Locations		30
Terminal Locations - Frame Size D		1
Thermistor		116
Thermistor Source	1-93	117
Torque		64
Torque Characteristics		114 167
Torque For Terminals		
Two Ways Of Operating		89
Type Code String (t/c)		8
Type Code String Low And Medium Power		9
U		
Unpacking		15
V		
Voltage Level		167
Voltage Reference Via A Potentiometer		80
W		
[Wake-up Speed Rpm]	22-42	136
Warning Feedback High	4-57	120
Warning Feedback Low	4-56	120
Warning Speed High	4-53	119

Wire Access 27



www.trane.com

office or e-mail us at comfort@trane.com

Literature Order Number	BAS-SVX21A-EN	
Date	December 2008	
Supersedes		

For more information, contact your local Trane Trane has a policy of continous product and product data improvement and reserves the right to change design and specifications without notice.